

# MOOBE

www.moobe.nz

## ROLLERSY

### Instructions for use


#### WARNINGS

- 1. IMPORTANT! BEFORE INSTALLING AND USING THE PRODUCT READ THIS INSTRUCTION MANUAL CAREFULLY AND RETAIN IT FOR FUTURE REFERENCE.**
2. Your child's safety may be affected if you do not follow these instructions.
3. You can only use the Rollersy with the car seat brands indicated in this instruction manual. Failure to comply with this may be dangerous.
4. The product is designed to be used only outside the car.
5. During installation and removal of the adapters with wheels, as well as during usage of the product, always make sure that your child is properly buckled in by car seat harness.
6. Before lifting the car seat, always ensure the carrying handle is "clicked" into the upright – "carrying" position, and the Rollersy strap is attached properly, in accordance with this instruction manual.
7. Always before wheeling your child in the car seat with the Rollersy, place the car seat's carrying handle into the horizontal – "sleeping" position.
8. Always before using the Rollersy, check to make sure that the adapters are properly clicked/installed in the car seat, as per this instruction manual.
9. Always before lifting the car seat and before transporting your child in its car seat with Rollersy, make sure your child is securely buckled in by car seat harness, to prevent it from falling or sliding out.
10. Do not transport your child in the car seat using wheels on roads, in crowded places, on obstacles, stairs or slopes. Lift and carry the car seat instead.
11. **WARNING! NEVER LEAVE A CHILD UNATTENDED.** It may be dangerous to leave your child unattended in the car seat. Your child's safety is your responsibility.
12. Never leave the car seat with Rollersy on a raised surface, such as a table, tabletop, bed etc. as it can fall off.
13. While transporting your child in the car seat with Rollersy, always carefully watch the surroundings, monitor the obstacles, look out for coming people, vehicles, animals.
14. You can use Rollersy to carry and transport your child in the car seat only for short trips. It is important for proper motor and muscle development that you change your child's position regularly. The car seat does not replace a cradle or a bed. If a child needs to sleep, it is recommended that it should be placed in the appropriate gondola, cradle or bed.
15. **WARNING! THE PRODUCT IS NOT INTENDED TO RUN OR DRIVE ON ROLLERBLADES.**
16. Do not transport your child on the sloping ground when using the Rollersy, but lift and carry the car seat instead. At all times ensure to hold the Rollersy strap.
17. Be careful on uneven ground. Do not use Rollersy when encountering obstacles, for example, a step. Instead, lift and carry the car seat.
18. Keep the packaging and its elements away from children, to avoid the risk of suffocation.
19. **WARNING! DO NOT LET YOUR CHILD PLAY WITH THIS PRODUCT, THE PACKAGING OR ITS ELEMENTS.** The product can be used only by an adult person in accordance with this instruction manual.
20. The product is suitable for children up to 13 kg only.
21. The product should only be used by no more children than it was intended, that is, one child.
22. Adjust the length of the Rollersy strap to the height of the adult using the product. If the strap is not correctly adjusted according to the instructions, the stability of the car seat may be affected.
23. Check the strap and the adapters with wheels regularly, verifying the wear and any damages in the product.
24. **WARNING! WHEN USING THE ROLLERSY STRAP FOR LIFTING AND CARRYING A CHILD IN THE CAR SEAT ON YOUR SHOULDER, ALWAYS HOLD THE CARRYING HANDLE OF THE CAR SEAT IN YOUR HAND. THIS WILL PREVENT ACCIDENTS, FOR EXAMPLE DROPPING THE CAR SEAT.**
25. Always remove the adapters with wheels from the car seat when using the seat as a car seat.
26. The carrying handle should be left outside the car seat during its use.
27. **WARNING! TO AVOID INJURIES, MAKE SURE YOUR CHILD IS OUTSIDE THE CARSEAT WHEN YOU INSTALL OR REMOVE A PRODUCT.**
28. Only use spare parts supplied or recommended by the manufacturer.

#### MAINTENANCE

Adapters with wheels can be cleaned with mild detergent and water. The strap and material pads can be hand washed with mild detergent at max. 30° C. Do not iron. Do not tumble dry. Do not dry clean. Do not bleach.

COMPOSITION: STRAP: belt - polypropylene 100%, pads: hem – polyester 100%, contribution: silicone nonwoven – polyester 100%, bur - nylon 100%, BAG: cotton 100%.

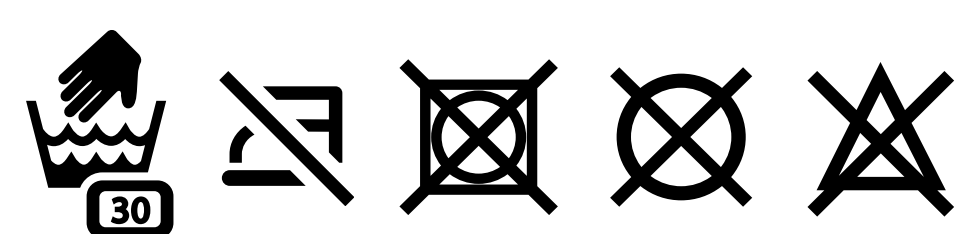

#### WASTE SEPARATION

As we care for the environment, we request the user to separate the waste produced at the start (packaging) and end (product parts) of the life of the product. Waste removal is arranged differently depending on the country. We request to observe your country's waste disposal regulations.

#### INSTRUCTIONS FOR USE

The product consists of adapters with wheels and the strap. You can use product to carry and transport your child in the car seat for short trips, on even and dry ground.




1



**INSTALLING THE ROLLERSY ADAPTERS WITH WHEELS TO THE CAR SEAT**


Before installation of the Rollersy adapters to your car seat, read your car seat instruction manual, showing how to attach the car seat to the baby stroller frame. Follow the same process to attach Rollersy adapters with wheels to the car seat and lock them in place – **the left** adapter on the left side of the car seat and **the right** adapter on the right side.

2

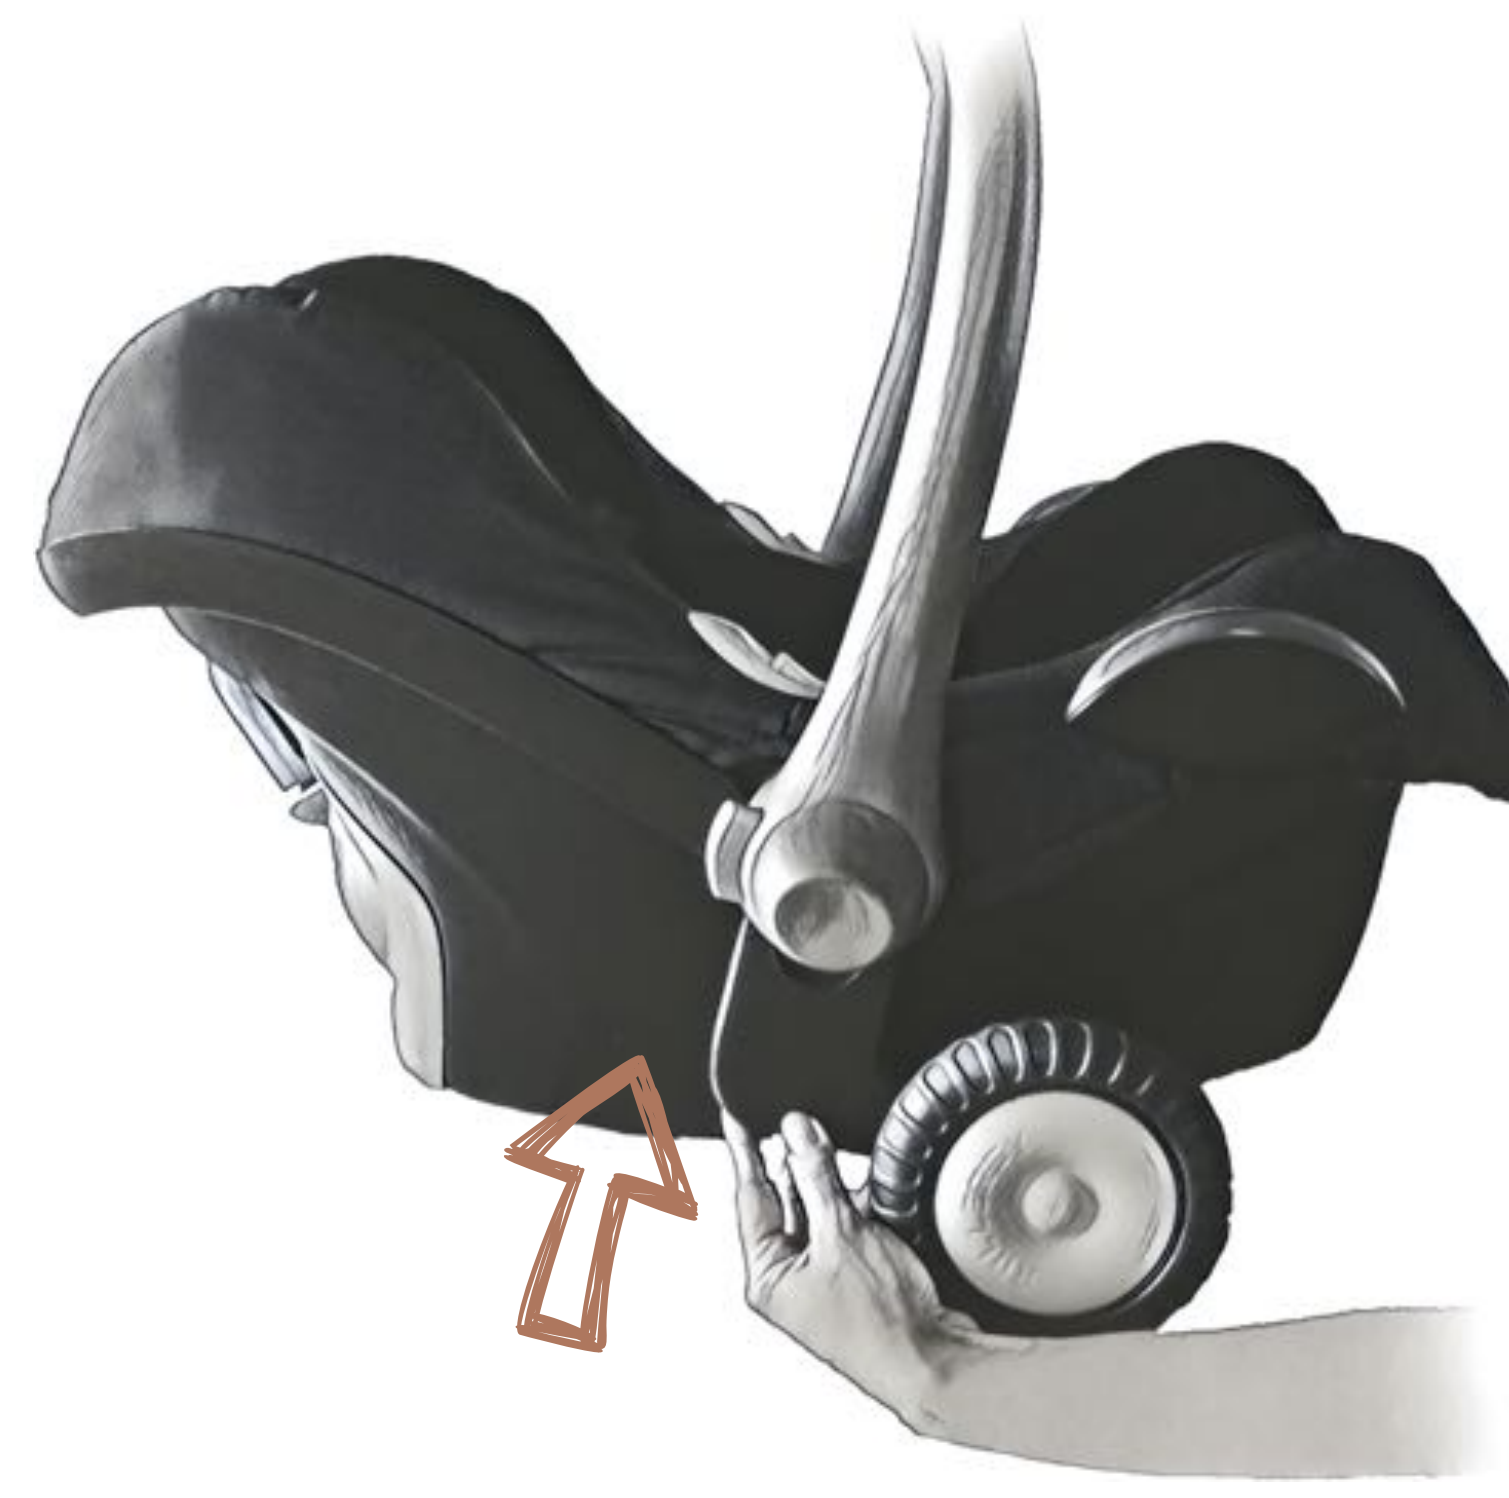

Check to make sure the adapters are properly clicked in the car seat. Always before using the product ensure that the adapters are properly clicked in and installed safely into the car seat.

3

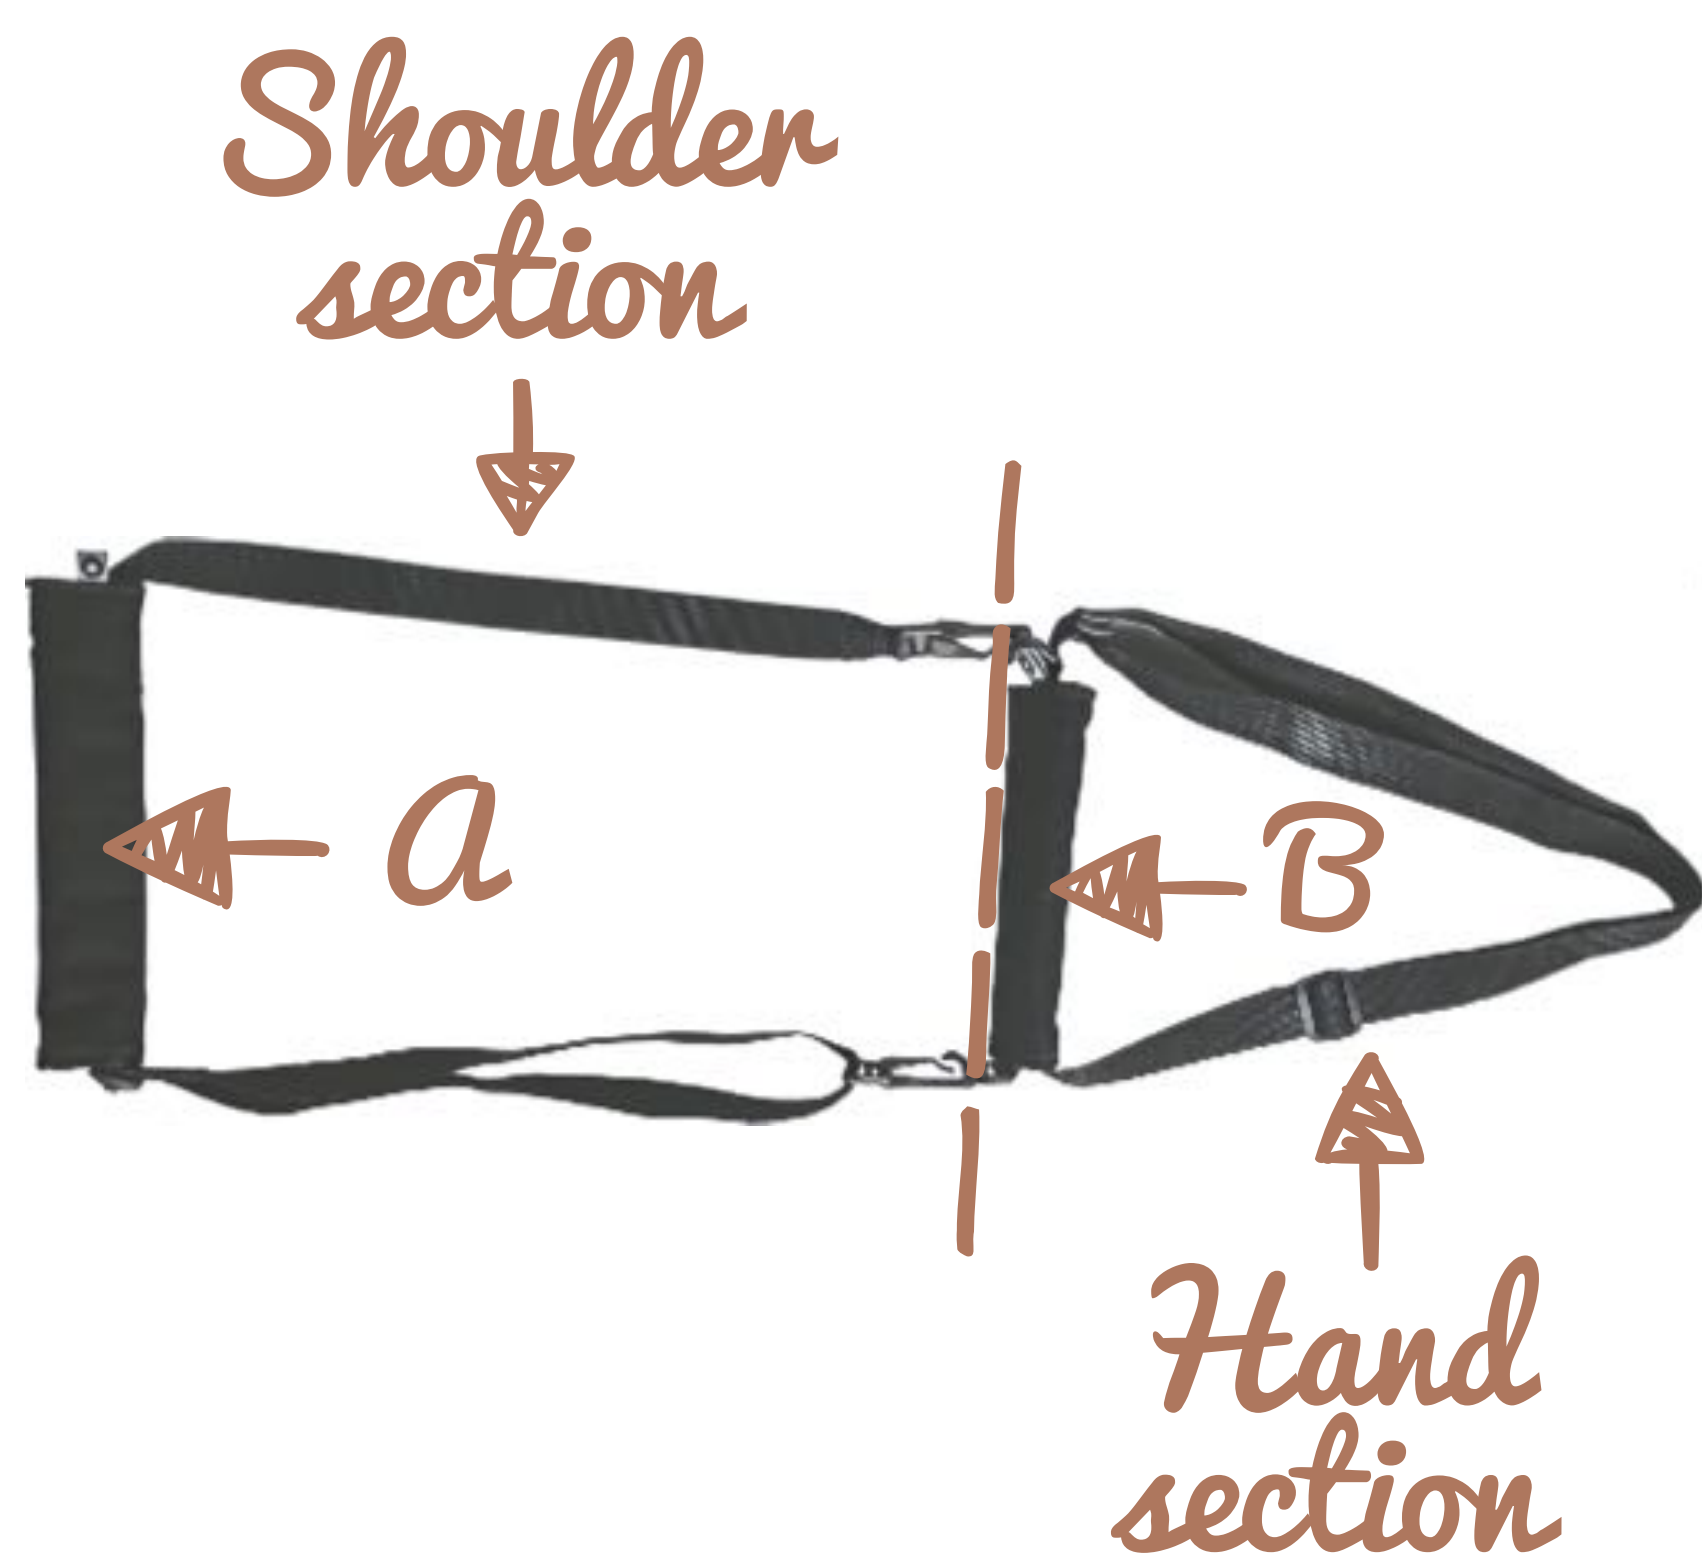

**ATTACHMENT OF THE ROLLERSY STRAP**

Make sure the strap is not twisted. Place the end of the hand section of the strap **B** (shorter belt with shorter soft pad) around the carrying

4



Then slide the rest of the strap with the pads into the end of the lower section of the strap.

5



Tighten the strap as much as possible on the carrying handle.

6



Click the carrying handle into the horizontal – “sleeping” position.




7



Using regulators adjust the length of the strap, so that you can easily hold the shorter pad **B** in your hand when the back of the car seat is slightly raised (about 5 cm above the ground).

8

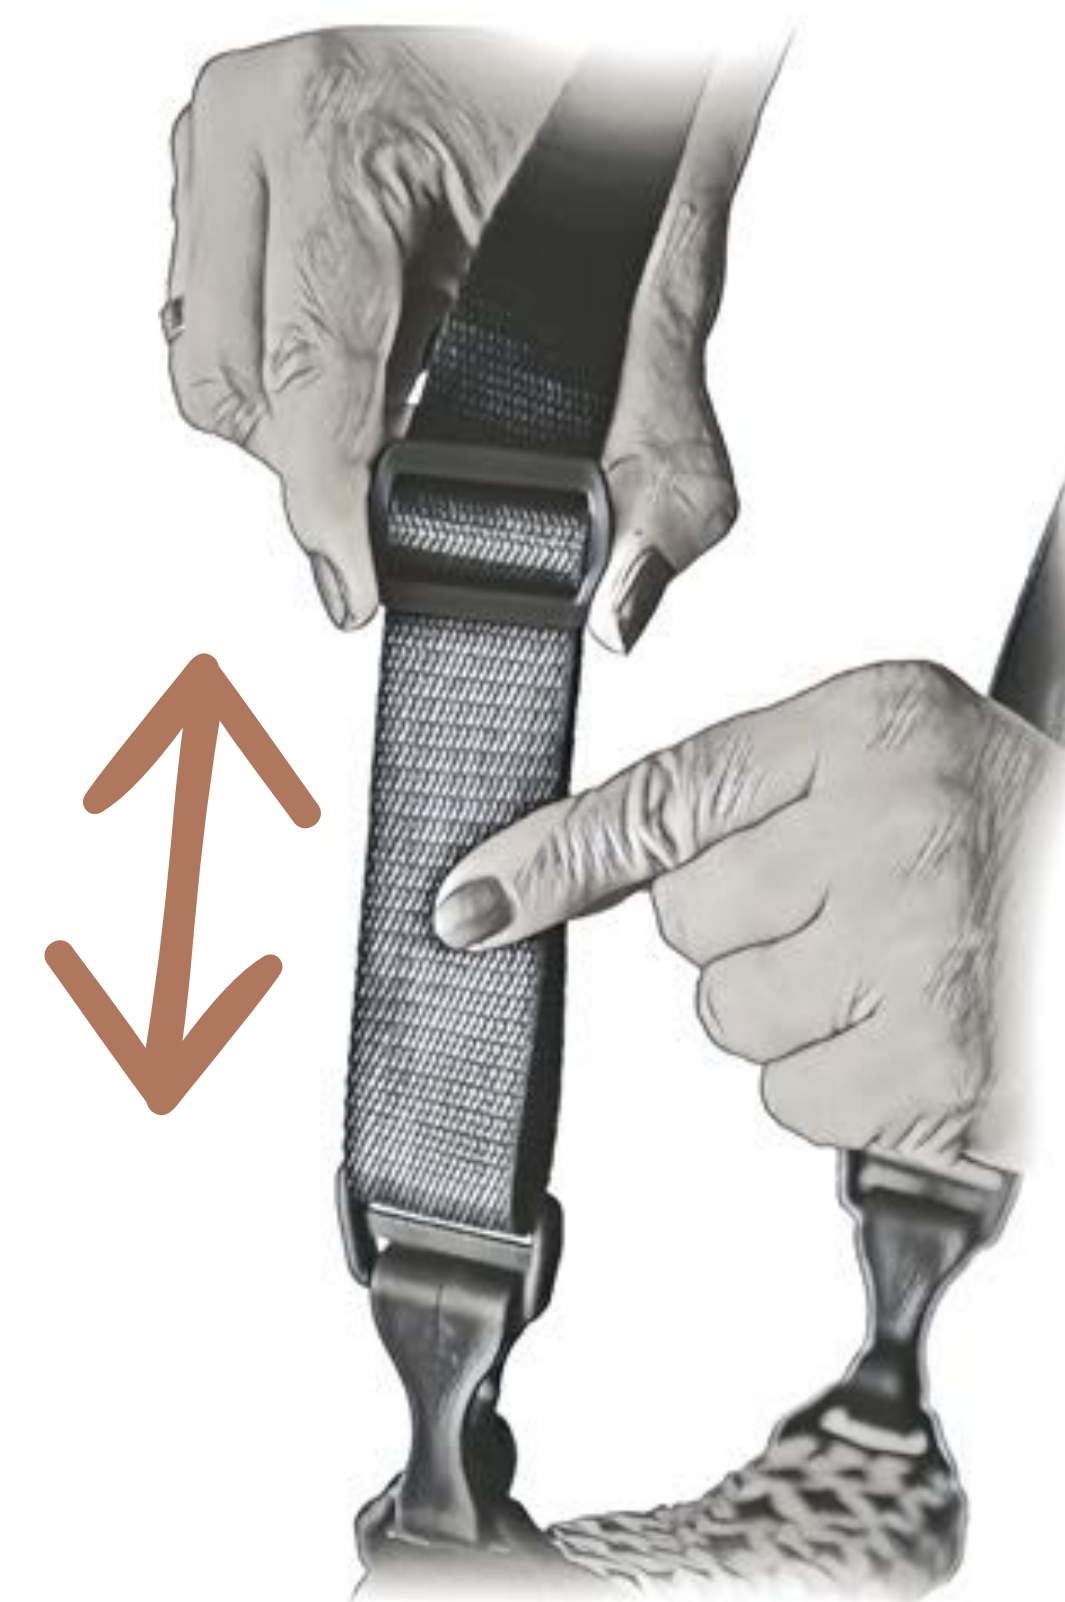


Attach the shoulder section of the strap to the hand section of the strap.

9



Adjust the length of the strap, so that you can easily put the longer pad **A** on your shoulder when the back of the seat is slightly raised.

10

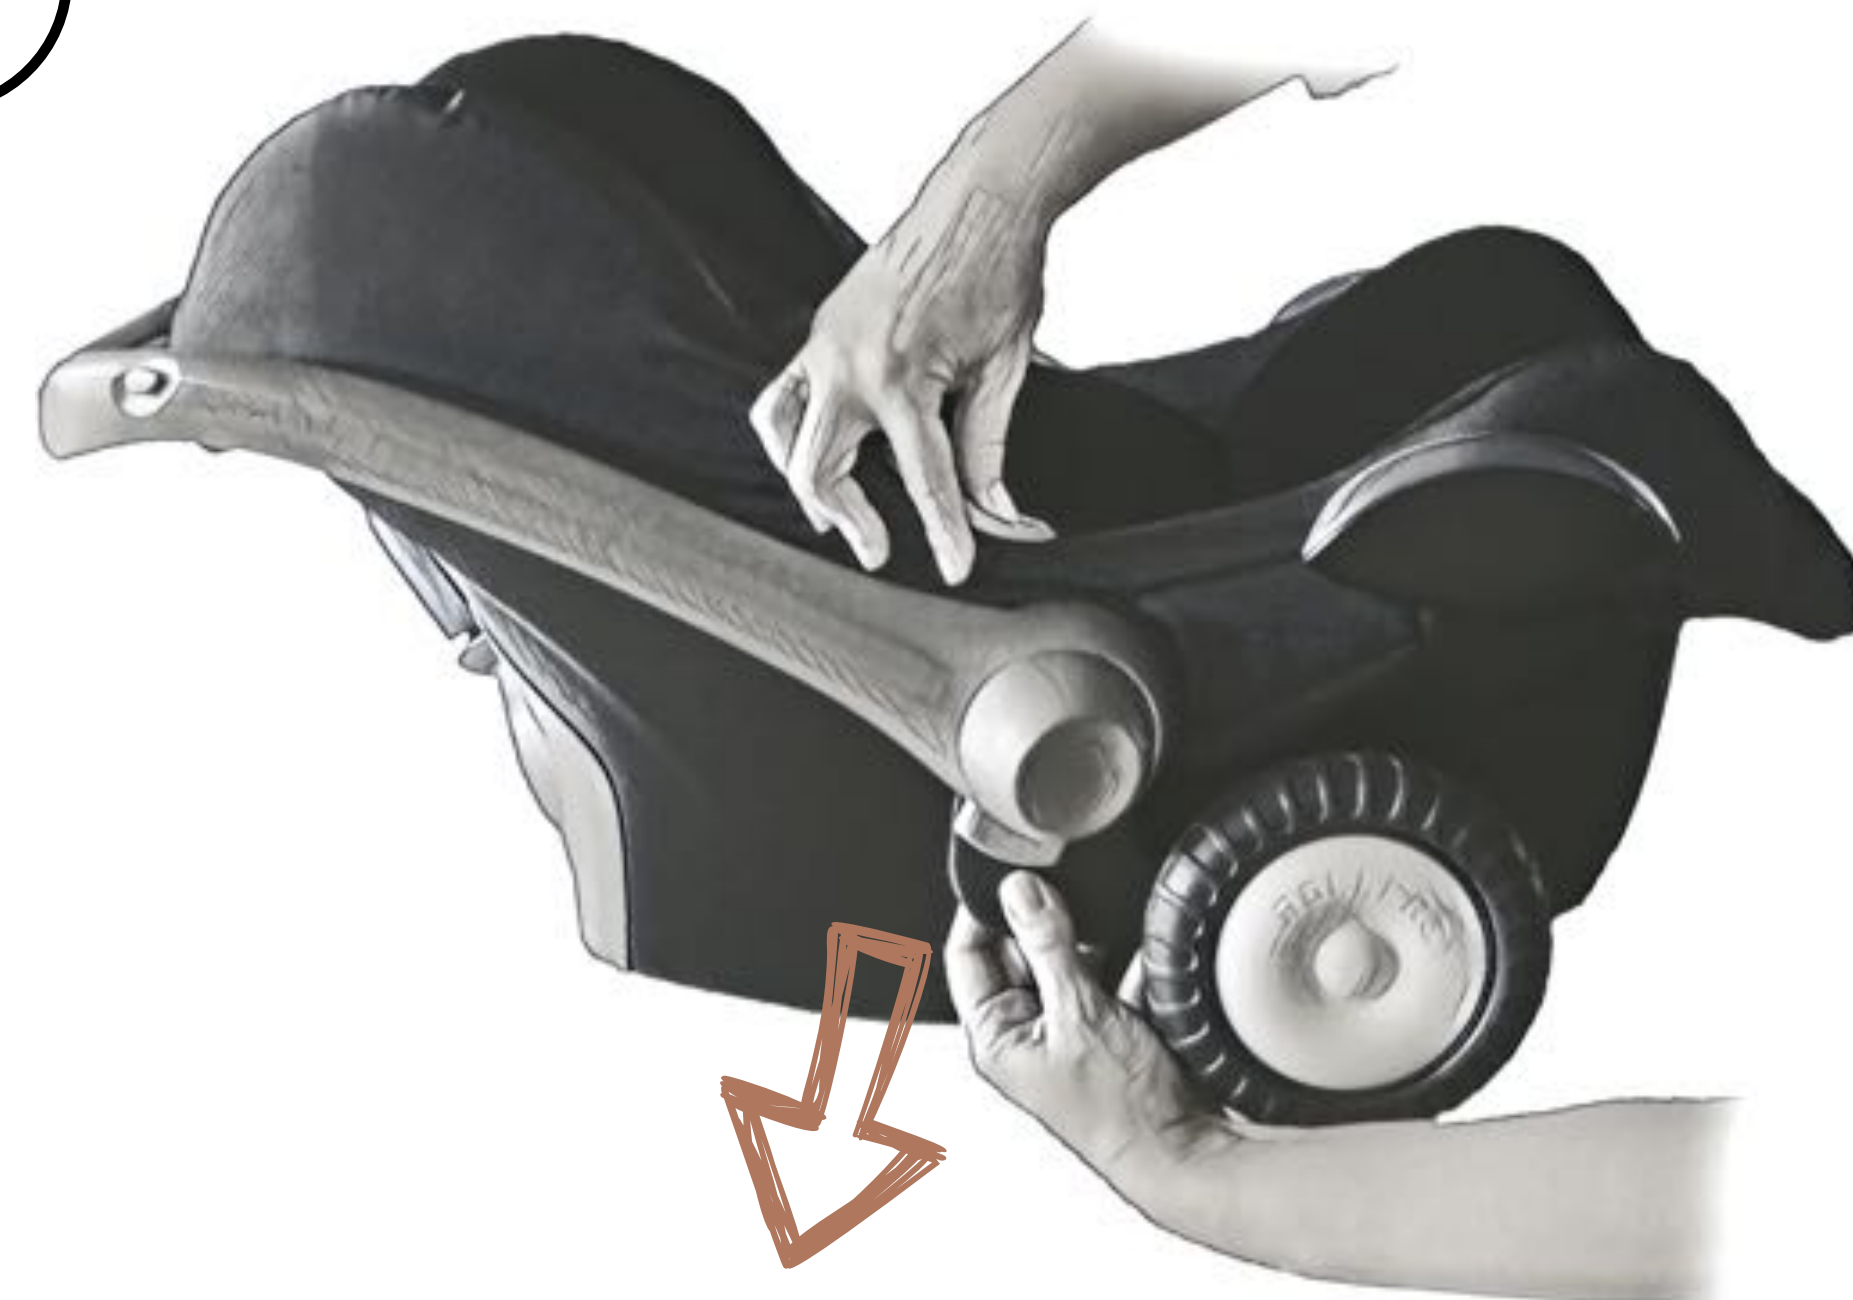

**REMOVING THE ADAPTERS**

Before removing the adapters, read your car seat instruction manual, showing how to remove the car seat from the baby stroller frame. Push in the control button on one side of the car seat while.

11

**USING ROLLERSY FOR TRANSPORTATION OF A CHILD IN THE CAR SEAT OUTSIDE THE CAR (USING WHEELS)**

A car seat with properly installed product enables convenient transportation of a child in the car seat on the ground, with the use of the adapters with wheels and a strap, without carrying heavy car seat. Always before transportation of a child in the car seat, make sure if your child is fastened securely with the car seat harness. The carrying handle must be locked in horizontal – “sleeping” position (**pic. 6**).

12



When using the product to transport your child in the car seat using adapters with wheels, put the strap with the longer pad **A** on your shoulder and hold the shorter pad **B** in your hand.




13



While transporting your child in the car seat, do not walk ahead of the seat, but walk alongside it, and always hold the shorter pad in your hand **B**, to control movement of the seat.

14

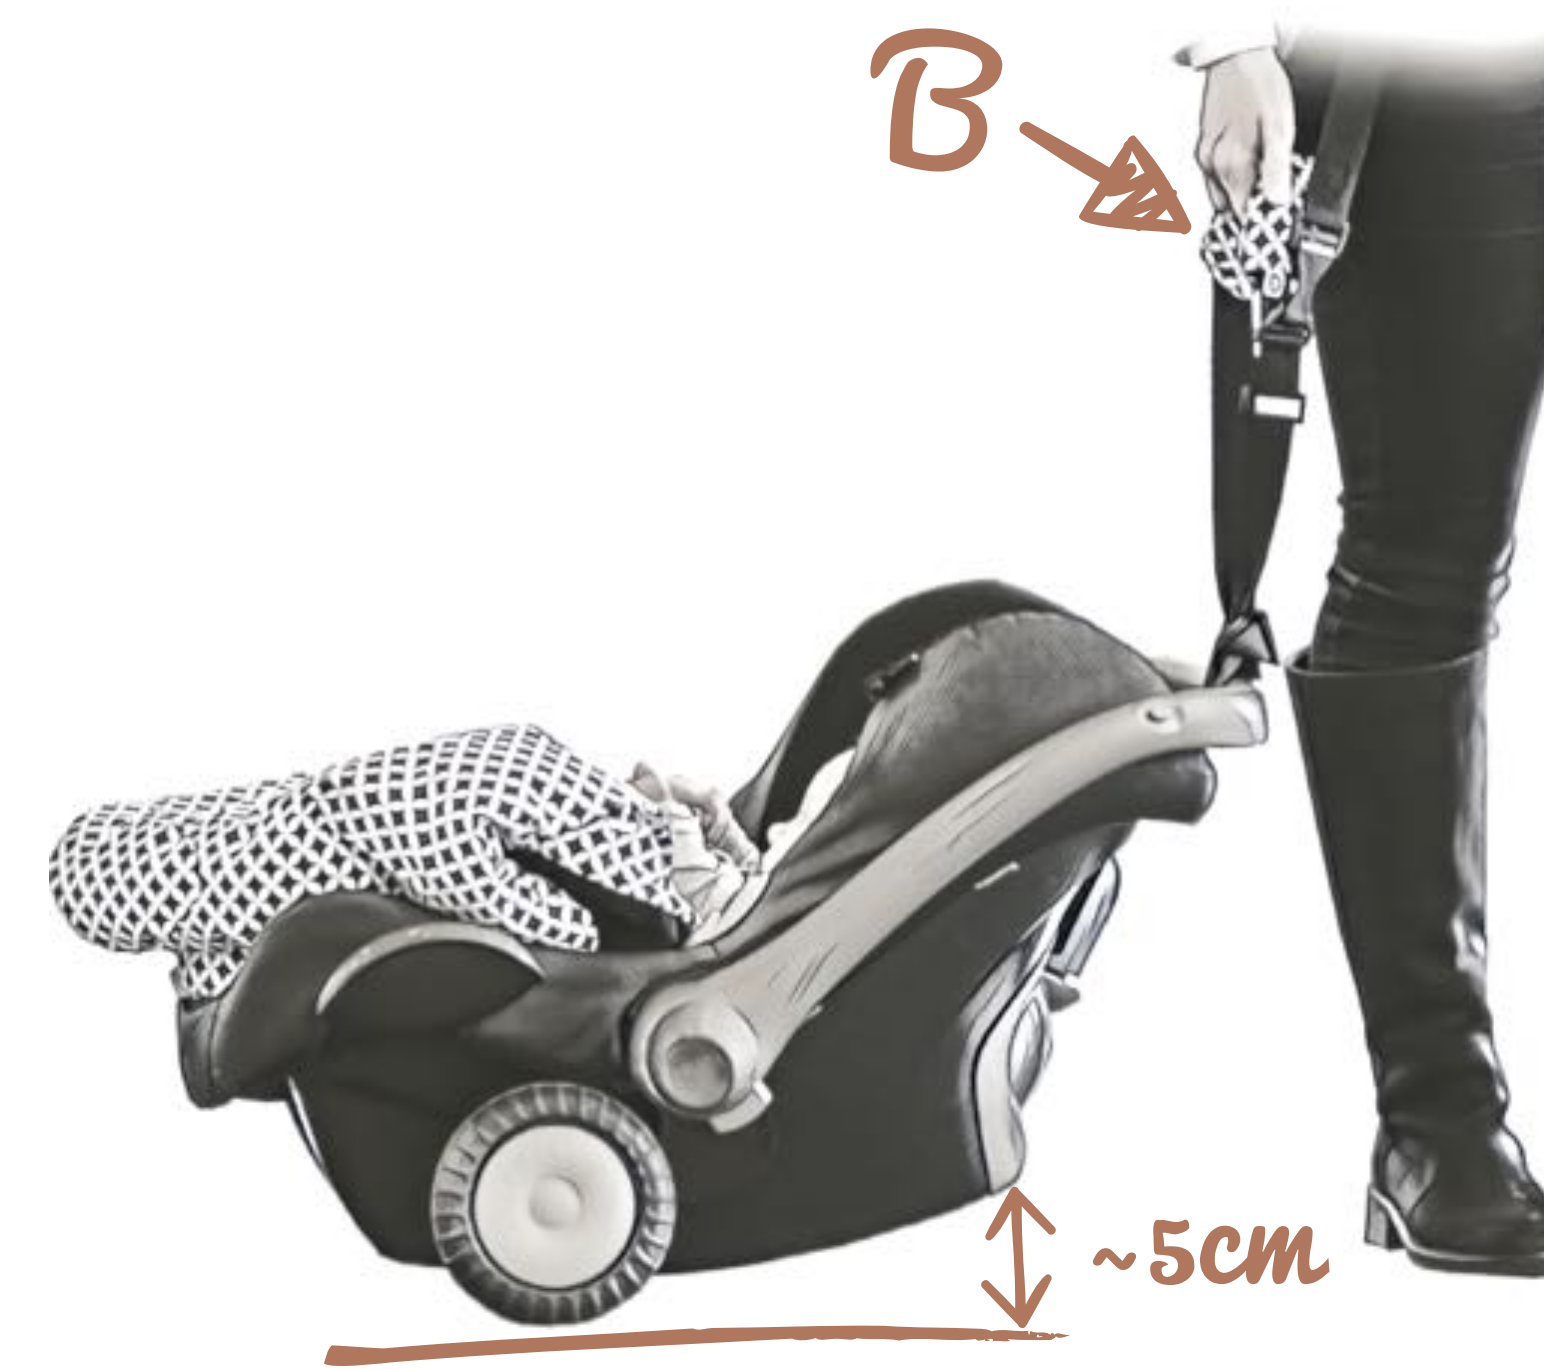

Adjust the length of the strap to your height, so that the strap is tight in the hand section and in the shoulder section when the back of the car seat is slightly raised (about 5 cm above the ground) and you can keep an upright posture.

15

To move the car seat, pull the strap so that, the back of the seat, to which the strap is attached, is slightly raised off the ground. While transporting your child in the car seat, the back of the car seat shouldn't be raised more than about 5 cm above the ground. It is also possible to unfasten the shoulder section of the strap and using only the hand section of the strap.

16



Put the shorter soft pad **B** on your shoulder while holding the carrying handle in your hand. Always hold the carrying handle of your car seat in your hand, to prevent the child dropping out of the car seat.

#### COMPATIBLE CAR SEATS

The product is suitable for children to approximately 13 kg (group 0-13 kg). Always check to make sure the product fits in your car seat properly before purchasing it. Below you can find the full list of car seats compatible with the product:

- AVIONAUT KITE +
- AVIONAUT ULTRALITE
- BABYLO PANORAMA TRAVEL SYSTEM
- BABYSAFE BASSET
- BABYSAFE YORK
- BESAFE IZI GO MODULAR I-SIZE
- BESAFE MIMA IZI GO / IZI GO MODULAR
- CYBEX ATON M
- CYBEX ATON Q
- CYBEX ATON Q I-SIZE
- CYBEX ATON Q PLUS
- CYBEX CLOUD Q
- CYBEX CLOUD Q PLUS
- GB IDAN
- JOIE I-GEMM
- MAXI COSI CABRIOFIX
- MAXI COSI CITI
- MAXI COSI CITI SPS
- MAXI COSI MICO 30
- MAXI COSI MICO 30 MAX
- MAXI COSI PEBBLE
- MAXI COSI PEBBLE PLUS
- MOUNTAIN BUGGY PROTECT CAPSULE
- NUNA PIPA ICON
- PHIL&TEDS ALPHA
- SAFETY 1ST ONE SAFE XT
- X-LANDER BESAFE
- X-LANDER X-CAR

If you don't see your car seat on this list get in touch with us and we'll check the compatibility for you.

MADE IN POLAND  
 DISTRIBUTOR FOR AUSTRALIA & NEW ZEALAND:  
 WWW.MOOBE.NZ  
 hello@moobe.nz