## **User Manual**

# WARNING: KEEP OUT OF THE REACH OF CHILDREN. RISK OF SHOCK AND BURNING.

## **How to Use Electric Lighter**

When in use, turn on the master power switch on the bottom of the lighter. Push the ignition switch fully forward then the electric arc will appear between the electrodes. Hold your lighter up to any combustible material to light. Release the ignition switch when you are done. It will automatically shut off.

Please turn off the master power switch after use.

**WARNING:** There is a risk of burns and/or electrical shock. Do not touch the electric arc area of the lighter. Always clean any soot, ash or debris left over from lighting.

#### NOTE:

A quiet buzzing soud can be heard during ignition. This is normal and safe. After 7 seconds of use, the lighter will automatically shut off.


### **How to Recharge Electric Lighter**

When the blue indicator light at the bottom begins to flash during use, it is time to RECHARGE your lighter.

- **1.** To charge your lighter's lithium battery, insert the micro USB cable provided, into the charging port of your lighter. Insert the USB into a computer, cell phone charger or any other compatible charger, with a voltage output of 5V(+/-0.5V).
- **2.** During charging, the indicator lights on the front of the product will be turned on one by one. When fully charged, the lights will remain on until the charger is removed. There are four lights in total, which mean 25% to 100% degree of completion.
- **3.** Unplug the power cord when fully charged. Never leave the lighter plugged in for extended periods, as this will shorten the battery life.

ATTENTION: Allow 1 to 2 hours for a Full Charge.

NOTE:ALWAYS STORE YOUR USB CABLE IN A CONVENIENT, ACCESSIBLE LOCATION WHEN NOT IN USE.

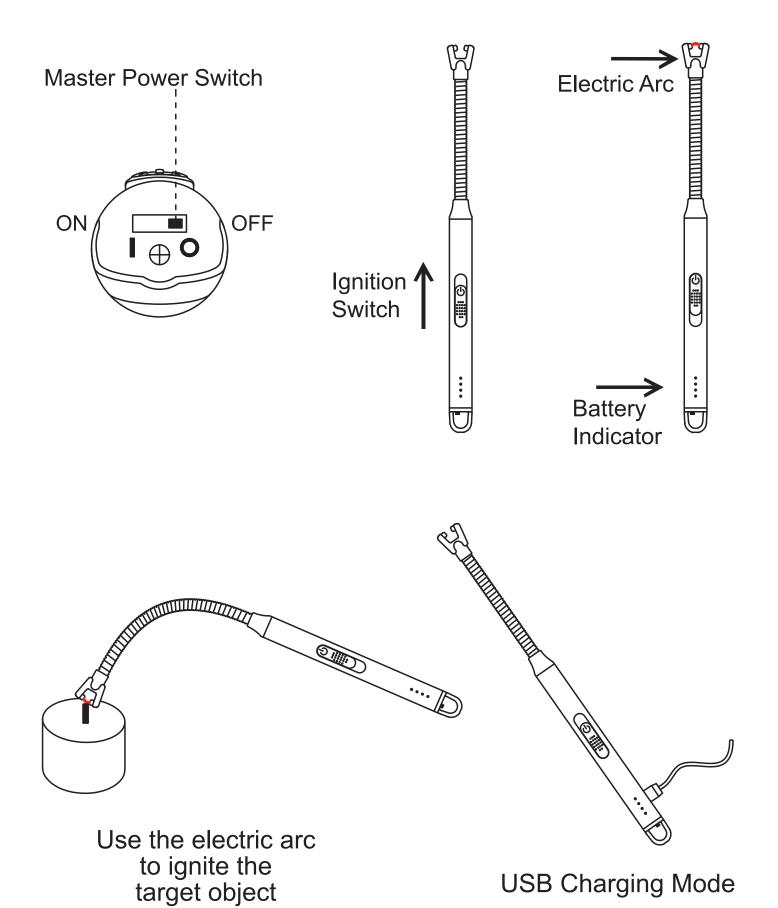

#### **WARNING**

- This electronic device is not a toy. Keep out of the reach of children and pets.
- DANGER: EXTREMELY FLAMMABLE. Never expose to temperatures above 49°C(120°F) or long periods of sunlight.
- Do not touch the electric arc.RISK OF SHOCK AND BURNING.
- Do not allow electric arc to make contact with others.
- ·Keep away from face, clothing and any other combustible surfaces.
- ·Never puncture or expose to fire.
- Keep Dry.Keep away from water and areas of high humidity.
- Once ignition is achieved release the switch and pull the lighter away from the fire.Do not continue to expose the lighter to open flame. Ensure the flame is extinguished after use.
- Only an authorized service technician can open or service this product.
- ·Use only the micro USB cable included with this lighter.