


Kitchen and baggage scales



СОДЕРЖАНИЕ:

Весы кухонные
RUS ..... 3
ENG ..... 8
Русский безмен
RUS ..... 13
ENG ..... 17

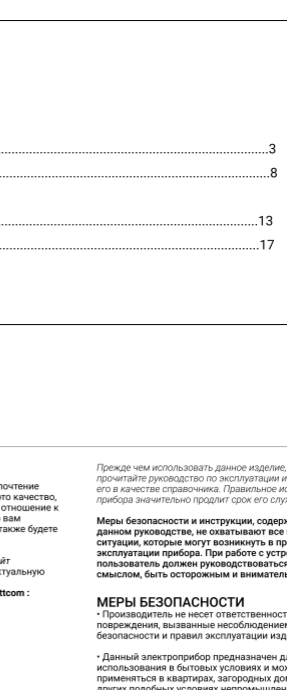

ВАЖАЙТЕМ ПОКУПАТЕЛЮ!

Благодарим вас за то, что отдали предпочтение бытовой технике Isotcom. Isotcom – это качество, надежность и неизменно внимательное отношение к потребности клиентов. Надеемся, что вам понравится продукция компании и вы также будете выбирать наши изделия в будущем.

Хотите узнать больше? Посетите наш сайт www.isotcom.com. Здесь вы найдете актуальную информацию о предлагаемой технике.
Служба поддержки пользователей Isotcom: www.isotcom.com/support

Прежде чем использовать данное изделие, внимательно прочтите руководство по эксплуатации и сохраните его качество妥善保管。Главнейшее использование прибора – взвешивание. Пожалуйста, не используйте прибор для взвешивания более 5 кг на дисплее появится сообщение ошибки «EEEE».

Меры безопасности и инструкции, содержащиеся в данном руководстве, не охватывают все возможные ситуации, которые могут возникнуть в процессе эксплуатации прибора. При работе с устройством пользователь должен руководствоваться здравым смыслом, быть осторожным и внимательным.

МЕРЫ БЕЗОПАСНОСТИ

- Производитель не несет ответственности за повреждения, вызванные несоблюдением техники безопасности и правилами эксплуатации.
Данный электронный прибор предназначен для использования в квартирах, загородных домах или в других подобных условиях нормального проживания. Промышленное или любое другое нецелевое использование устройства будет считаться нарушением условий на гарантии и исключает ответственность за возможные последствия.

Использовать только элемент питания соответствующего типа. Тип элемента можно узнать из технических характеристик или заводской таблички изделия.

Использование прибора в целях, отличающихся от указанных в данном руководстве, является нарушением правил эксплуатации.

Запрещена эксплуатация прибора на в помещениях с повышенной влажностью, например, в ванной комнате. Существует опасность выхода из строя прибора.

Строго следуйте инструкциям по очистке. ЗАПРЕЩАЕТСЯ погружать корпус прибора в воду и любые жидкие вещества и привносить к повреждениям.

Прибор не предназначен для использования лицами (включая детей) с пониженными физическими способностями или ограниченными способностями или при отсутствии у них опыта или знаний, если они не находятся под контролем лица, отвечающего за безопасность. При работе с устройством пользователь должен руководствоваться здравым смыслом и быть осторожным и внимательным.

Запрещены самостоятельный ремонт прибора и внесение изменений в его конструкцию. Ремонт прибора должен производиться исключительно специализированным авторизованным сервисным центром. Несоблюдение правил выполнения работ может привести к поломке прибора, травмам и повреждению имущества.

ВНИМАНИЕ! Запрещается эксплуатация прибора при любых неисправностях.

II. ЭКСПЛУАТАЦИЯ ПРИБОРА

1. Установите кухонные весы на твердую ровную горизонтальную поверхность. Эти условия являются обязательными, если вы хотите получить точные результаты взвешивания.

Нажмите кнопку ON/T, дождитесь, пока на дисплее отобразится «0». Нажав на кнопку II, выберите необходимую единицу измерения: g/lb/oz/kg (граммы, фунты/унции, килограммы).

Для обозначения массы продукта в емкости, установленной на платформе весов. На дисплее отобразится вес емкости. Если емкость нажать на кнопку ON/T. Значение веса отобразится на дисплее платформы. На дисплее отобразится только масса продукта, т.к. весы были обнулены и масса емкости не учитывается.

Снимите продукт с платформы, при этом на дисплее отобразится «0». Нажав на кнопку II, выберите необходимую единицу измерения. Настраивая массу продукта, т.к. весы были обнулены и масса емкости не учитывается.

III. УХОД ЗА ПРИБОРОМ

Для очистки устройства не пользуйтесь абразивными средствами, жидкостями или металлическими щетками и т.д. Очищайте платформу весов влажной мягкой тканью, за тем протрите насухо.

ЗАПРЕЩАЕТСЯ погружать прибор в воду или промывать под струей воды! ЗАПРЕЩАЕТСЯ очищать прибор с помощью посудомоечной машины. Храните и транспортируйте прибор в оригинальном защитном футляре. Перед длительным хранением извлекайте элементы питания из прибора. Храните прибор в сухом вентилируемом месте вдали от нагревательных приборов и попадания прямых солнечных лучей.

При транспортировке и хранении запрещается подвергать прибор механическим воздействиям, которые могут привести к повреждению прибора и снижению целостности упаковки. Необходимо беречь упаковку прибора от попадания воды и других жидкостей.

IV. ПЕРЕД ОБРАЩЕНИЕМ В СЕРВИС-ЦЕНТР

Table with 3 columns: Problem description, Possible causes, Recommended solution. Rows include: Display not working, Weight measurement error, Device not switching on, etc.

В случае если неисправность устранить не удалось, обратитесь в авторизованный сервисный центр.

I. ПЕРЕД НАЧАЛОМ ИСПОЛЬЗОВАНИЯ

Аккуратно удалите изделие и его комплектующие из коробки. Удалите все упаковочные материалы и рекламные наклейки.

Обязательно ознакомьтесь на месте предупреждающие наклейки, наклеенные на изделие. Промышленное или любое другое нецелевое использование устройства будет считаться нарушением условий на гарантии и исключает ответственность за возможные последствия.

V. ГАРАНТИЙНЫЕ ОБЯЗАТЕЛЬСТВА

На данное изделие предоставляется гарантия сроком на 12 месяцев с момента приобретения. В течение гарантийного периода изготовитель обязуется устранить причину отказа, заменить детали или заменить весь изделие любые заводские дефекты. Гарантия вступает в силу только в том случае, если дата покупки указана на оригинальной карте гарантии. Данная гарантия не распространяется на естественный износ изделия и в том случае, если изделие применялось в соответствии с руководством по

III. УХОД ЗА ПРИБОРОМ

Для очистки устройства не пользуйтесь абразивными средствами, жидкостями или металлическими щетками и т.д. Очищайте платформу весов влажной мягкой тканью, за тем протрите насухо.

ЗАПРЕЩАЕТСЯ погружать прибор в воду или промывать под струей воды! ЗАПРЕЩАЕТСЯ очищать прибор с помощью посудомоечной машины. Храните и транспортируйте прибор в оригинальном защитном футляре. Перед длительным хранением извлекайте элементы питания из прибора. Храните прибор в сухом вентилируемом месте вдали от нагревательных приборов и попадания прямых солнечных лучей.

При транспортировке и хранении запрещается подвергать прибор механическим воздействиям, которые могут привести к повреждению прибора и снижению целостности упаковки. Необходимо беречь упаковку прибора от попадания воды и других жидкостей.

IV. ПЕРЕД ОБРАЩЕНИЕМ В СЕРВИС-ЦЕНТР

Table with 3 columns: Problem description, Possible causes, Recommended solution. Rows include: Display not working, Weight measurement error, Device not switching on, etc.

В случае если неисправность устранить не удалось, обратитесь в авторизованный сервисный центр.

II. ЭКСПЛУАТАЦИЯ ПРИБОРА

1. Установите кухонные весы на твердую ровную горизонтальную поверхность. Эти условия являются обязательными, если вы хотите получить точные результаты взвешивания.

Нажмите кнопку ON/T, дождитесь, пока на дисплее отобразится «0». Нажав на кнопку II, выберите необходимую единицу измерения: g/lb/oz/kg (граммы, фунты/унции, килограммы).

Для обозначения массы продукта в емкости, установленной на платформе весов. На дисплее отобразится вес емкости. Если емкость нажать на кнопку ON/T. Значение веса отобразится на дисплее платформы. На дисплее отобразится только масса продукта, т.к. весы были обнулены и масса емкости не учитывается.

Снимите продукт с платформы, при этом на дисплее отобразится «0». Нажав на кнопку II, выберите необходимую единицу измерения. Настраивая массу продукта, т.к. весы были обнулены и масса емкости не учитывается.

III. УХОД ЗА ПРИБОРОМ

Для очистки устройства не пользуйтесь абразивными средствами, жидкостями или металлическими щетками и т.д. Очищайте платформу весов влажной мягкой тканью, за тем протрите насухо.

ЗАПРЕЩАЕТСЯ погружать прибор в воду или промывать под струей воды! ЗАПРЕЩАЕТСЯ очищать прибор с помощью посудомоечной машины. Храните и транспортируйте прибор в оригинальном защитном футляре. Перед длительным хранением извлекайте элементы питания из прибора. Храните прибор в сухом вентилируемом месте вдали от нагревательных приборов и попадания прямых солнечных лучей.

При транспортировке и хранении запрещается подвергать прибор механическим воздействиям, которые могут привести к повреждению прибора и снижению целостности упаковки. Необходимо беречь упаковку прибора от попадания воды и других жидкостей.

II. OPERATION OF THE APPLIANCE

1. Place the kitchen scale on a firm, level horizonal surface. These conditions are mandatory if you want accurate weighing results.

2. Press the ON/T button, wait until the display shows "0". Press the UNIT button to select the desired unit of measurement: g/lb/oz/kg (grams, pounds, ounces, kilograms).

3. If you want to weigh the product in a container, install onto the weighing plate. The display will show the weight of the container. If you want to weigh the product, press the ON/T button to reset the container weight. The weight value will be reset to zero.

4. To indicate the mass of the product in the container, place the weight of the container with a minus sign on the weighing platform. The display will show only the weight of the product, because the scales have been reset to zero and the container weight is not included.

5. Remove the product from the platform, and the display will show "0". Press the UNIT button to select the desired unit of measurement. Adjusting the mass of the product, because the scales have been reset to zero and the container weight is not included.

III. CARE OF THE APPLIANCE

To clean the device, do not use abrasive detergents, metal brushes, etc. to clean the device. Clean the weighing plate with a damp soft cloth, then wipe dry.

DO NOT immerse the device in water or rinse it with a stream of water!

DO NOT clean the appliance with a dishwasher. Storage and transportation Remove batteries from the device before long-term storage. Store the appliance in a dry, ventilated place away from heating appliances and direct sunlight.

During transportation and storage, it is forbidden to subject the device to mechanical stresses that may damage the device and/or damage the integrity of the package. The packaging of the device must be protected from water and other liquids.

IV. BEFORE CONTACTING THE SERVICE CENTER

Table with 3 columns: Problem description, Possible causes, Recommended solution. Rows include: Display not working, Weight measurement error, Device not switching on, etc.

If the problem persists, contact an authorized service center.

I. BEFORE YOU BEGIN TO USE

Carefully remove the product and its accessories from the box. Remove all packing materials and promotional labels.

Be sure to keep the warning signs in place, adhesive, directional stickers (if any) and a plate with serial number of the product on its body. After transportation or storage at low temperature, temperature, the device may be unusable. Store the batteries for at least 2 hours before switching on.

Wipe the body of the product with a damp cloth and let it dry. Make sure that the batteries are installed properly. To do this, turn the scales over and remove battery compartment cover. Make sure the batteries are installed correctly, observing polarity. After setting, close the battery compartment cover.

ATTENTION! The batteries included in the delivery are intended only for testing the functionality of the product. For long term operation of the scales over an extended battery compartment cover. Make sure the batteries, keep your hands and the device dry.

V. WARRANTY OBLIGATIONS

This product is warranted for a period of 12 months from the date of purchase. During the warranty period, the manufacturer undertakes to eliminate by repair, replace parts or replace the entire product any manufacturing defects. The warranty is only valid if the date of purchase is confirmed by the store seal and the seller's signature on the original warranty card. This warranty is recognized only if the product has been used in accordance with

III. CARE OF THE APPLIANCE

To clean the device, do not use abrasive detergents, metal brushes, etc. to clean the device. Clean the weighing plate with a damp soft cloth, then wipe dry.

DO NOT immerse the device in water or rinse it with a stream of water!

DO NOT clean the appliance with a dishwasher. Storage and transportation Remove batteries from the device before long-term storage. Store the appliance in a dry, ventilated place away from heating appliances and direct sunlight.

During transportation and storage, it is forbidden to subject the device to mechanical stresses that may damage the device and/or damage the integrity of the package. The packaging of the device must be protected from water and other liquids.

IV. BEFORE CONTACTING THE SERVICE CENTER

Table with 3 columns: Problem description, Possible causes, Recommended solution. Rows include: Display not working, Weight measurement error, Device not switching on, etc.

If the problem persists, contact an authorized service center.

II. OPERATION OF THE APPLIANCE

1. Place the kitchen scale on a firm, level horizonal surface. These conditions are mandatory if you want accurate weighing results.

2. Press the ON/T button, wait until the display shows "0". Press the UNIT button to select the desired unit of measurement: g/lb/oz/kg (grams, pounds, ounces, kilograms).

3. If you want to weigh the product in a container, install onto the weighing plate. The display will show the weight of the container. If you want to weigh the product, press the ON/T button to reset the container weight. The weight value will be reset to zero.

4. To indicate the mass of the product in the container, place the weight of the container with a minus sign on the weighing platform. The display will show only the weight of the product, because the scales have been reset to zero and the container weight is not included.

5. Remove the product from the platform, and the display will show "0". Press the UNIT button to select the desired unit of measurement. Adjusting the mass of the product, because the scales have been reset to zero and the container weight is not included.

III. CARE OF THE APPLIANCE

To clean the device, do not use abrasive or alcohol-based detergents, metal brushes, etc. to clean the device. Clean the weighing plate with a damp soft cloth, then wipe dry.

DO NOT immerse the device in water or rinse it with a stream of water!

DO NOT clean the appliance with a dishwasher. Storage and transportation Remove batteries from the device before long-term storage. Store the appliance in a dry, ventilated place away from heating appliances and direct sunlight.

During transportation and storage, it is forbidden to subject the device to mechanical stresses that may damage the device and/or damage the integrity of the package. The packaging of the device must be protected from water and other liquids.

V. WARRANTY OBLIGATIONS

This product is warranted for a period of 12 months from the date of purchase. During the warranty period, the manufacturer undertakes to eliminate by repair, replace parts or replace the entire product any manufacturing defects. The warranty is only valid if the date of purchase is confirmed by the store seal and the seller's signature on the original warranty card. This warranty is recognized only if the product has been used in accordance with

II. OPERATION OF THE APPLIANCE

1. Place the kitchen scale on a firm, level horizonal surface. These conditions are mandatory if you want accurate weighing results.

2. Press the ON/T button, wait until the display shows "0". Press the UNIT button to select the desired unit of measurement: g/lb/oz/kg (grams, pounds, ounces, kilograms).

3. If you want to weigh the product in a container, install onto the weighing plate. The display will show the weight of the container. If you want to weigh the product, press the ON/T button to reset the container weight. The weight value will be reset to zero.

4. To indicate the mass of the product in the container, place the weight of the container with a minus sign on the weighing platform. The display will show only the weight of the product, because the scales have been reset to zero and the container weight is not included.

5. Remove the product from the platform, and the display will show "0". Press the UNIT button to select the desired unit of measurement. Adjusting the mass of the product, because the scales have been reset to zero and the container weight is not included.

III. CARE OF THE APPLIANCE

To clean the device, do not use abrasive or alcohol-based detergents, metal brushes, etc. to clean the device. Clean the weighing plate with a damp soft cloth, then wipe dry.

DO NOT immerse the device in water or rinse it with a stream of water!

DO NOT clean the appliance with a dishwasher. Storage and transportation Remove batteries from the device before long-term storage. Store the appliance in a dry, ventilated place away from heating appliances and direct sunlight.

During transportation and storage, it is forbidden to subject the device to mechanical stresses that may damage the device and/or damage the integrity of the package. The packaging of the device must be protected from water and other liquids.

IV. BEFORE CONTACTING THE SERVICE CENTER

Table with 3 columns: Problem description, Possible causes, Recommended solution. Rows include: Display not working, Weight measurement error, Device not switching on, etc.

If the problem persists, contact an authorized service center.

I. BEFORE YOU BEGIN TO USE

Carefully remove the product and its accessories from the box. Remove all packing materials and promotional labels.

Be sure to keep the warning signs in place, adhesive, directional stickers (if any) and a plate with serial number of the product on its body. After transportation or storage at low temperature, temperature, the device may be unusable. Store the batteries for at least 2 hours before switching on.

Wipe the body of the product with a damp cloth and let it dry. Make sure that the batteries are installed properly. To do this, turn the scales over and remove battery compartment cover. Make sure the batteries are installed correctly, observing polarity. After setting, close the battery compartment cover.

ATTENTION! The batteries included in the delivery are intended only for testing the functionality of the product. For long term operation of the scales over an extended battery compartment cover. Make sure the batteries, keep your hands and the device dry.

V. WARRANTY OBLIGATIONS

This product is warranted for a period of 12 months from the date of purchase. During the warranty period, the manufacturer undertakes to eliminate by repair, replace parts or replace the entire product any manufacturing defects. The warranty is only valid if the date of purchase is confirmed by the store seal and the seller's signature on the original warranty card. This warranty is recognized only if the product has been used in accordance with

III. CARE OF THE APPLIANCE

To clean the device, do not use abrasive or alcohol-based detergents, metal brushes, etc. to clean the device. Clean the weighing plate with a damp soft cloth, then wipe dry.

DO NOT immerse the device in water or rinse it with a stream of water!

DO NOT clean the appliance with a dishwasher. Storage and transportation Remove batteries from the device before long-term storage. Store the appliance in a dry, ventilated place away from heating appliances and direct sunlight.

During transportation and storage, it is forbidden to subject the device to mechanical stresses that may damage the device and/or damage the integrity of the package. The packaging of the device must be protected from water and other liquids.

IV. BEFORE CONTACTING THE SERVICE CENTER

Table with 3 columns: Problem description, Possible causes, Recommended solution. Rows include: Display not working, Weight measurement error, Device not switching on, etc.

If the problem persists, contact an authorized service center.

II. OPERATION OF THE APPLIANCE

1. Place the kitchen scale on a firm, level horizonal surface. These conditions are mandatory if you want accurate weighing results.

2. Press the ON/T button, wait until the display shows "0". Press the UNIT button to select the desired unit of measurement: g/lb/oz/kg (grams, pounds, ounces, kilograms).

3. If you want to weigh the product in a container, install onto the weighing plate. The display will show the weight of the container. If you want to weigh the product, press the ON/T button to reset the container weight. The weight value will be reset to zero.

4. To indicate the mass of the product in the container, place the weight of the container with a minus sign on the weighing platform. The display will show only the weight of the product, because the scales have been reset to zero and the container weight is not included.

5. Remove the product from the platform, and the display will show "0". Press the UNIT button to select the desired unit of measurement. Adjusting the mass of the product, because the scales have been reset to zero and the container weight is not included.

III. CARE OF THE APPLIANCE

To clean the device, do not use abrasive or alcohol-based detergents, metal brushes, etc. to clean the device. Clean the weighing plate with a damp soft cloth, then wipe dry.

DO NOT immerse the device in water or rinse it with a stream of water!

DO NOT clean the appliance with a dishwasher. Storage and transportation Remove batteries from the device before long-term storage. Store the appliance in a dry, ventilated place away from heating appliances and direct sunlight.

During transportation and storage, it is forbidden to subject the device to mechanical stresses that may damage the device and/or damage the integrity of the package. The packaging of the device must be protected from water and other liquids.

IV. BEFORE CONTACTING THE SERVICE CENTER

Table with 3 columns: Problem description, Possible causes, Recommended solution. Rows include: Display not working, Weight measurement error, Device not switching on, etc.

If the problem persists, contact an authorized service center.

I. BEFORE YOU BEGIN TO USE

Carefully remove the product and its accessories from the box. Remove all packing materials and promotional labels.

Be sure to keep the warning signs in place, adhesive, directional stickers (if any) and a plate with serial number of the product on its body. After transportation or storage at low temperature, temperature, the device may be unusable. Store the batteries for at least 2 hours before switching on.

Wipe the body of the product with a damp cloth and let it dry. Make sure that the batteries are installed properly. To do this, turn the scales over and remove battery compartment cover. Make sure the batteries are installed correctly, observing polarity. After setting, close the battery compartment cover.

ATTENTION! The batteries included in the delivery are intended only for testing the functionality of the product. For long term operation of the scales over an extended battery compartment cover. Make sure the batteries, keep your hands and the device dry.

V. WARRANTY OBLIGATIONS

This product is warranted for a period of 12 months from the date of purchase. During the warranty period, the manufacturer undertakes to eliminate by repair, replace parts or replace the entire product any manufacturing defects. The warranty is only valid if the date of purchase is confirmed by the store seal and the seller's signature on the original warranty card. This warranty is recognized only if the product has been used in accordance with

III. CARE OF THE APPLIANCE

To clean the device, do not use abrasive or alcohol-based detergents, metal brushes, etc. to clean the device. Clean the weighing plate with a damp soft cloth, then wipe dry.

DO NOT immerse the device in water or rinse it with a stream of water!

DO NOT clean the appliance with a dishwasher. Storage and transportation Remove batteries from the device before long-term storage. Store the appliance in a dry, ventilated place away from heating appliances and direct sunlight.

During transportation and storage, it is forbidden to subject the device to mechanical stresses that may damage the device and/or damage the integrity of the package. The packaging of the device must be protected from water and other liquids.

IV. BEFORE CONTACTING THE SERVICE CENTER

Table with 3 columns: Problem description, Possible causes, Recommended solution. Rows include: Display not working, Weight measurement error, Device not switching on, etc.

If the problem persists, contact an authorized service center.

II. OPERATION OF THE APPLIANCE

1. Place the kitchen scale on a firm, level horizonal surface. These conditions are mandatory if you want accurate weighing results.

2. Press the ON/T button, wait until the display shows "0". Press the UNIT button to select the desired unit of measurement: g/lb/oz/kg (grams, pounds, ounces, kilograms).

3. If you want to weigh the product in a container, install onto the weighing plate. The display will show the weight of the container. If you want to weigh the product, press the ON/T button to reset the container weight. The weight value will be reset to zero.

4. To indicate the mass of the product in the container, place the weight of the container with a minus sign on the weighing platform. The display will show only the weight of the product, because the scales have been reset to zero and the container weight is not included.

5. Remove the product from the platform, and the display will show "0". Press the UNIT button to select the desired unit of measurement. Adjusting the mass of the product, because the scales have been reset to zero and the container weight is not included.

III. CARE OF THE APPLIANCE

To clean the device, do not use abrasive or alcohol-based detergents, metal brushes, etc. to clean the device. Clean the weighing plate with a damp soft cloth, then wipe dry.

DO NOT immerse the device in water or rinse it with a stream of water!

DO NOT clean the appliance with a dishwasher. Storage and transportation Remove batteries from the device before long-term storage. Store the appliance in a dry, ventilated place away from heating appliances and direct sunlight.

During transportation and storage, it is forbidden to subject the device to mechanical stresses that may damage the device and/or damage the integrity of the package. The packaging of the device must be protected from water and other liquids.

IV. BEFORE CONTACTING THE SERVICE CENTER

Table with 3 columns: Problem description, Possible causes, Recommended solution. Rows include: Display not working, Weight measurement error, Device not switching on, etc.

If the problem persists, contact an authorized service center.

I. BEFORE YOU BEGIN TO USE

Carefully remove the product and its accessories from the box. Remove all packing materials and promotional labels.

Be sure to keep the warning signs in place, adhesive, directional stickers (if any) and a plate with serial number of the product on its body. After transportation or storage at low temperature, temperature, the device may be unusable. Store the batteries for at least 2 hours before switching on.

Wipe the body of the product with a damp cloth and let it dry. Make sure that the batteries are installed properly. To do this, turn the scales over and remove battery compartment cover. Make sure the batteries are installed correctly, observing polarity. After setting, close the battery compartment cover.

ATTENTION! The batteries included in the delivery are intended only for testing the functionality of the product. For long term operation of the scales over an extended battery compartment cover. Make sure the batteries, keep your hands and the device dry.

V. WARRANTY OBLIGATIONS

This product is warranted for a period of 12 months from the date of purchase. During the warranty period, the manufacturer undertakes to eliminate by repair, replace parts or replace the entire product any manufacturing defects. The warranty is only valid if the date of purchase is confirmed by the store seal and the seller's signature on the original warranty card. This warranty is recognized only if the product has been used in accordance with

III. CARE OF THE APPLIANCE

To clean the device, do not use abrasive or alcohol-based detergents, metal brushes, etc. to clean the device. Clean the weighing plate with a damp soft cloth, then wipe dry.

DO NOT immerse the device in water or rinse it with a stream of water!

DO NOT clean the appliance with a dishwasher. Storage and transportation Remove batteries from the device before long-term storage. Store the appliance in a dry, ventilated place away from heating appliances and direct sunlight.

During transportation and storage, it is forbidden to subject the device to mechanical stresses that may damage the device and/or damage the integrity of the package. The packaging of the device must be protected from water and other liquids.

IV. BEFORE CONTACTING THE SERVICE CENTER

Table with 3 columns: Problem description, Possible causes, Recommended solution. Rows include: Display not working, Weight measurement error, Device not switching on, etc.