

USER MANUAL.

**Globetrotter
Calendar
Caliber 706,3**

Your Fromanteel watch

To maintain the precision and reliability of your Fromanteel watch, we advise you to mind the following (practical) guidelines.

Preventive maintenance

Dust and dirt tend to collect in gaps in the back of the case or band, so clean the watch occasionally. For the case: use a toothbrush with soapy water and a soft cloth for drying. Avoid contact with solvents, detergents, perfumes, cosmetic products, since they may damage the bracelet, the case or the gaskets. Avoid speakers or refrigerators, since these have strong magnetic fields. Avoid shocks whether thermal or other. Avoid temperatures above 60°C (140°F), below 0°C (32°F) or extreme temperature changes. For the Chronograph: do not operate the pushers under water in order to prevent water entering the mechanism. Store your

watch in a dry place when not using it. Replace an empty battery as soon as possible. This can be done at a regular jewel- and watch store. 'End Of Life' indication: when the second hand jumps every 4 seconds, the battery should be changed in the next 2-3 weeks.

Water-resistant:


Your Fromanteel watch is 5 ATM water-resistant.

Service centers:

At Fromanteel, we value a continued relationship with you. Your watch comes with an international warranty for a period of two years. Please contact us at service@fromanteel.nl with your questions and/or comments.

Adjusting your Ronda Caliber 706.3:

These instructions apply for a Ronda Caliber 706.3 movement, as found in the Globetrotter Calendar™ watch. Contact us for more info or questions on: service@fromanteel.nl

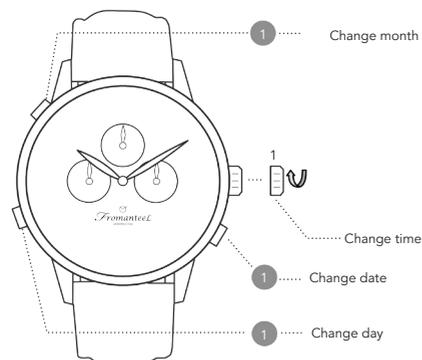

Caliber 706,3
Change time + date

IMPORTANT: Calendar functions must not be altered between 11.30PM and 5.30AM, automatic changes are in progress at these times. Pressing the pusher during these times may damage the movement.

 Battery life of 5 years

