

USER MANUAL.

Globetrotter Moon Phase Caliber 706.3

Your Fromanteel watch

To maintain the precision and reliability of your Fromanteel watch, we advise you to mind the following (practical) guidelines.

Preventive maintenance

Dust and dirt tend to collect in gaps in the back of the case, so clean the watch occasionally. For the case: use a toothbrush with soapy water and a soft cloth for drying. Avoid contact with solvents, detergents, perfumes, cosmetic products, since they may damage the bracelet, the case or the gaskets. Avoid speakers or refrigerators, since these have strong magnetic fields. Avoid shocks whether thermal or other. Avoid temperatures above 60°C (140°F), below 0°C (32°F) or extreme temperature changes. For the Chronograph: do not operate the pushers under water in order to prevent water entering the mechanism. Store your watch in a dry place when not using it. Replace an empty

battery as soon as possible. This can be done at a regular jewel- and watch store. "End Of Life" indication: when the second hand jumps every 4 seconds, the battery should be changed in the next 2-3 weeks.

Water-resistant:


Your Fromanteel watch is 5 ATM water-resistant.

Service centers:

At Fromanteel, we value a continued relationship with you. Your watch comes with an international warranty for a period of two years. Please contact us at service@fromanteel.nl with your questions and/or comments.

Adjusting your Caliber 706.3:


These instructions apply for a Caliber 706.3 movement, as found in the Globetrotter Moon Phase™ watch. Contact us for more info or questions on: service@fromanteel.nl

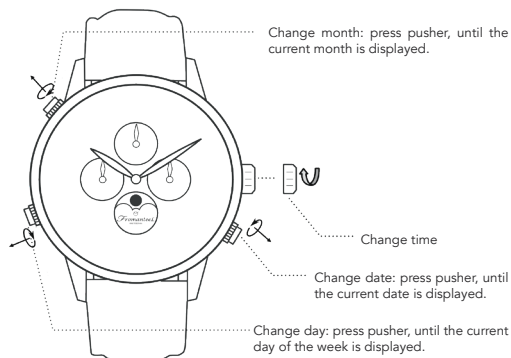


Caliber 706.3

Change time + date

IMPORTANT: Moon Phase functions must not be altered between 11.30PM and 5.30AM, automatic changes are in progress at these times. Pressing the pushers during these times may damage the movement.

 Battery life of 5 years

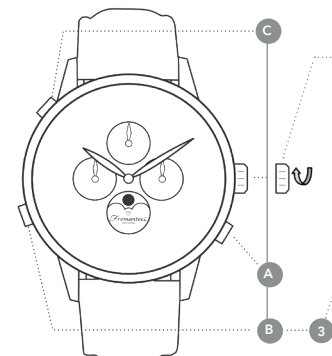

Setting sequence for: moonphase display, day of the week, day and time

1. Pull crown out to position II (watch is stopped).
2. Set the Moon Phase display:
Turn the hands forward by turning the crown, until the full Moon Phase position appears. Turn the crown until the time of 06.00 am appears (= beyond the blocked time period).
4. Set the time: Turn the crown until the current time is displayed (remember the 24-hour cycle). Push crown back into position I.

Set the current day, date and month.

3. Set the month, date and day of the week:
Set the date with pusher A, the day of the week with pusher B and the month with pusher C of the last full moon (see table).

FULL MOON DATES

	JAN	FEB	MAR	APR	MAY	JUN	JUL	AUG	SEP	OCT	NOV	DEC
2018	02/31	11	02/31	02/31	30	30	28	28	25	24	23	22
2019	21	19	21	21	9	9	17	17	14	13	12	12
2020	10	09	09	09	08	08	05	05	02	01/31	30	30