


Lyric™ T6 Pro Wi-Fi Programmable Thermostat

User Guide

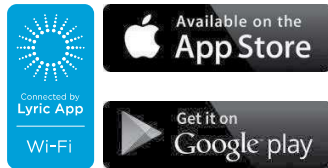

*TH6320WF2003 shown. Other models may vary.

Welcome

This user guide is designed to help you get acquainted with your new Lyric T6 Pro Wi-Fi thermostat. Check out the table of contents on page 2 to browse by topic.

Need help? Get in touch.

Web: lyric.honeywell.com

Email: MyLyric@honeywell.com

Phone: 1-800-633-3991

Social: Twitter: @HoneywellHome, Facebook: Honeywell Home

Table of contents

Thermostat features	3
Thermostat overview	4
Lyric app overview	5
Basic thermostat operation	
Adjusting the temperature	5
Schedule overrides	6
Adjusting the temperature in Auto mode	7
Selecting system mode.....	8
Built-in compressor protection.....	9
Setting the fan.....	9
Wi-Fi® connectivity	
Connecting to a Wi-Fi network.....	10
Disconnecting and reconnecting to a Wi-Fi network.....	11
Main menu settings	
Overview.....	12
Scheduling options	13
Location-based temperature control (geofence technology).....	13
Smart scheduling	13
Time-based scheduling.....	15
No schedule.....	18
Screen lock settings.....	19
Ventilation settings	20
Wi-Fi settings	21
WAC settings	21
Turning thermostat Wi-Fi on and off.....	21
Adjusting backlight brightness	22
Enabling/disabling Adaptive Intelligent Recovery.....	22
Setting the time and date	23
Cleaning the thermostat screen.....	24
Choosing Fahrenheit or Celsius.....	24
Reset options.....	25
Viewing equipment status.....	25
Viewing thermostat information.....	26
Alerts and maintenance reminders	27
Appendices	
General system information	29
Troubleshooting.....	30
Frequently asked questions (FAQs).....	31
Regulatory information	33
Warranty information	34

Thermostat Features

Flexible scheduling: You can choose to use location-based temperature control (geofence technology), program a set schedule or use a combination of both to make sure your home is always comfortable.



- **Location-based temperature control:** Using geofence technology, the Lyric T6 Pro Wi-Fi thermostat will automatically use your smartphone's location, which can save energy when you leave and make your home comfortable by the time you return. See page 13 for more.
- **Smart scheduling:** Adds a Sleep period to location-based temperature control. See page 13 for more.
- **Time-based scheduling:** You can program a schedule where every day is different, a schedule where weekdays and weekends are different or a schedule where every day is the same. There are four adjustable periods per day: Wake, Away, Home and Sleep. See page 15 for more.
- **No schedule:** You can also choose not to set a schedule and adjust the thermostat manually. See page 18 for more.

Tip: The Lyric app can be used to manage multiple thermostats and multiple users in a household.



Smart Alerts: The Lyric T6 Pro Wi-Fi thermostat will send alerts for things like extreme indoor temperatures and reminders for things like filter changes.



Auto change from heat to cool: When Auto mode is selected, the Lyric T6 Pro Wi-Fi thermostat can automatically determine whether your home needs heating or cooling to reach the desired temperature.



Adaptive Intelligent Recovery: The Lyric T6 Pro Wi-Fi thermostat learns your heating and cooling cycle times to make sure the system delivers the temperature you want, when you want it.

Thermostat overview

Desired temperature


Shows desired indoor temperature.

Indoor Temperature

Shows current indoor temperature.

Adjust temperature

Touch + or - to set your desired temperature.

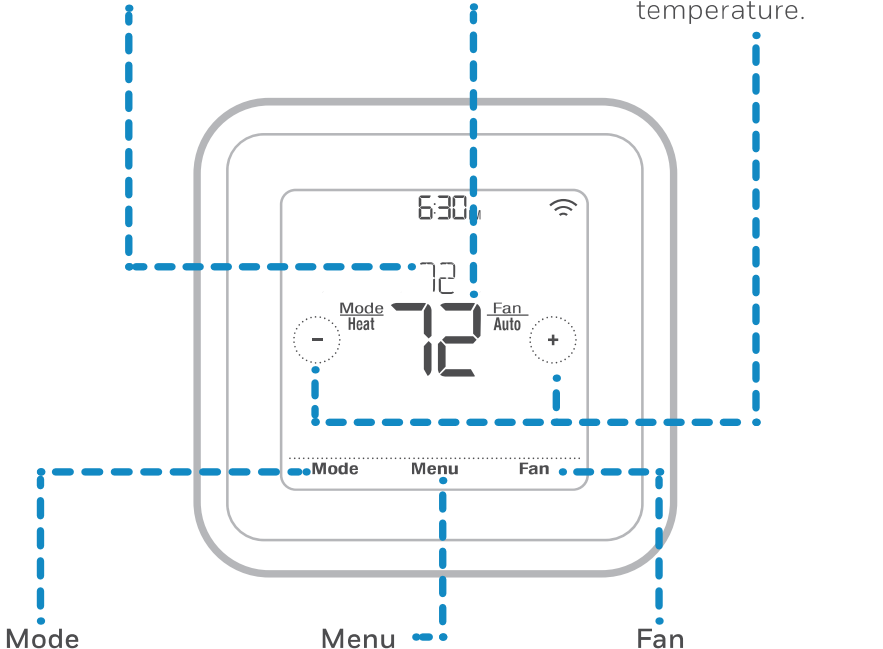

Mode

Touch to select system mode:

- Auto (if enabled)
- Heat
- Cool
- Off
- Em Heat (Emergency Heat)

Menu

Touch to program a schedule and see other customizable options.

Fan


Touch to select fan mode:

- Auto
- On
- Circulate

Idle mode

The thermostat will enter idle mode 45 seconds after the last button touch. The screen may dim to save power depending on the brightness setting. See page 22 to learn how to adjust the screen's brightness.

Lyric app overview

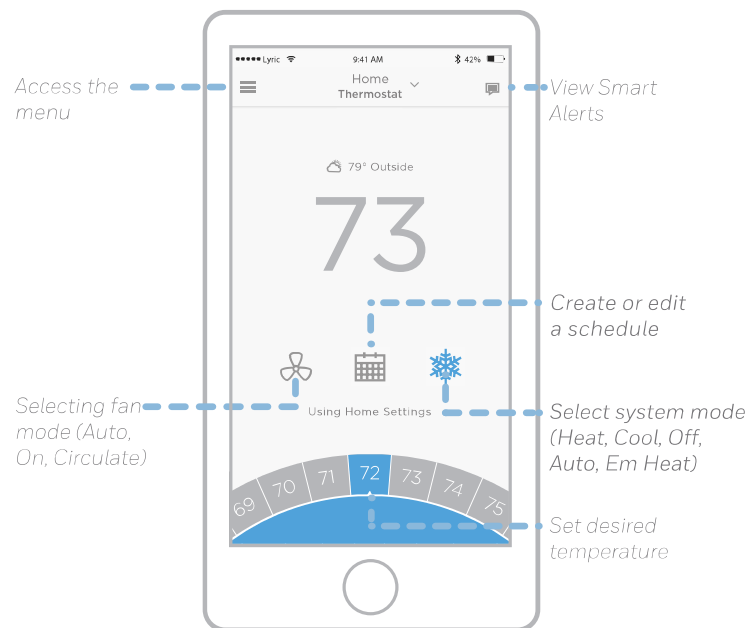


To see all the products connected by the Honeywell Lyric app, visit yourhome.honeywell.com.

The Lyric app is regularly enhanced and may change.

Adjusting the temperature

To adjust the desired temperature up or down, touch **+** or **-** on the thermostat home screen.

If you're using location-based temperature control or a time-based schedule, adjusting the temperature will override the current set point until the next schedule period or geofence event, unless you want to use one of the schedule overrides below.

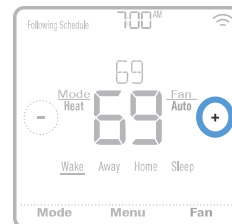

Schedule overrides

Hold Until (temporary hold): Overrides the current temperature set point for a maximum of 12 hours. You might use this feature to hold a temperature until a specific time.



Permanent hold: Overrides the current temperature set point permanently until you manually change it or reactivate a schedule.

Vacation hold: Overrides the current temperature set point for a longer period of time. You might use this feature when you know you'll be gone for awhile. (Note: Vacation hold can only be activated using the Lyric app.)

Setting temporary hold (for use with time-based schedules only)

- 1 Touch **+** or **-** on the thermostat home screen to set your desired temperature. Hold Until will appear together with the time the hold will end.
- 2 To change when the hold will end, touch the time and wait until the time starts blinking. Then, touch **+** or **-** to set when you want the hold to end. Touch **Hold Until** once more to confirm changes and return to the home screen.



After the hold period ends, the thermostat will automatically return to the program schedule. If you want to cancel the hold, touch **Hold Until** and then touch **Run Schedule**.

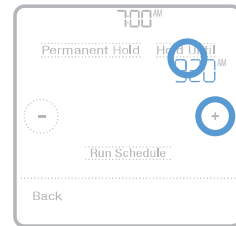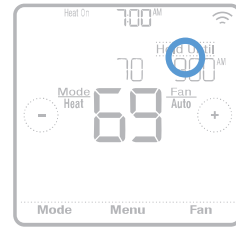


Setting permanent hold


- 1 Touch **+** or **-** on the thermostat home screen to reach your desired temperature. Hold Until will appear together with the time you want the hold to end.
- 2 Touch **Hold Until**. Permanent Hold will appear on screen. Touch **Permanent Hold** to hold this temperature until you manually change it.

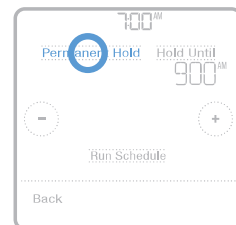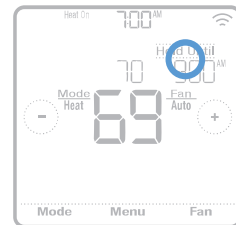

To end permanent hold and return to the program schedule, touch **Permanent Hold** and then touch **Run Schedule**.



Setting vacation hold (must be set using the Lyric app)

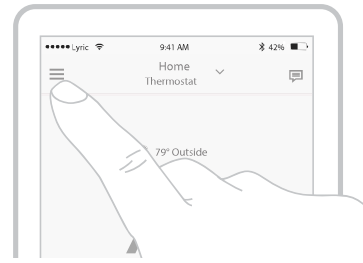- 1 Open the Lyric app. Tap the **Menu** icon  in the upper-left corner of the screen, then tap **Vacation**.
- 2 Turn **Vacation Settings** on, then choose a start date/time and an end date/time.
- 3 Tap the Lyric device you wish to include in your vacation settings, then adjust your preferred temperatures. When you're done, tap the back arrow to save your changes.








You can manually adjust the temperature set point during vacation hold using the Lyric app or by touching  or  on the thermostat. This new set point will remain in effect until the end of vacation hold. To cancel vacation hold, touch **Run Schedule** on the thermostat screen to return to the program schedule, or tap **Vacation Until** in the app and then tap **End Vacation**.

Adjusting the temperature in Auto mode

Auto mode (when the thermostat automatically chooses heating or cooling to reach your desired temperature) is disabled by default. If your heating or cooling professional enabled it, you'll see Auto appear as an option under Mode on the thermostat home screen.

To choose your preferred temperatures for both heating and cooling in Auto mode, follow the steps below.

- 1 Touch **Mode** on the thermostat home screen until Auto appears. Then touch  or  to choose your preferred temperature for the mode that's currently active (heating or cooling).
- 2 Next, touch the text area where the active mode is displayed to switch to the inactive mode.
- 3 Touch  or  to choose your preferred temperature in the other mode. After 5 seconds of inactivity, your setting will take effect, and the thermostat screen will show the set point of the active mode.

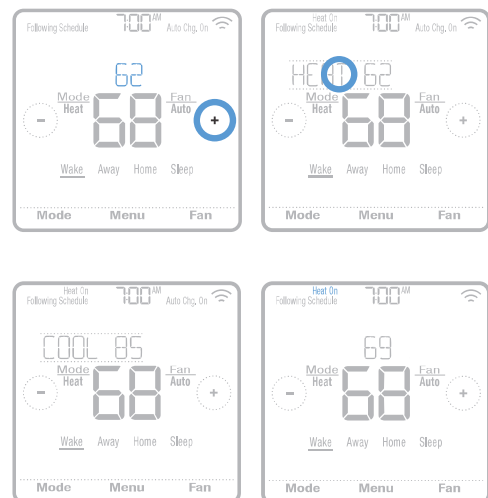



Selecting system mode

Current system mode (Heat, Cool, Off, Em Heat) is displayed to the left of current indoor temperature on the thermostat home screen.

The mode that's currently running (Heat On, Cool On, Em Heat On) is displayed in the upper-left corner of the thermostat home screen.

To cycle through the available modes, touch **Mode** on the thermostat home screen and select the appropriate mode for your desired temperature.

- **Heat:** Controls the heating system.
- **Cool:** Controls the cooling system.
- **Off:** Turns the heating and cooling systems off.
- **Auto:** When enabled, the thermostat will automatically use heating or cooling to reach the desired temperature.
- **Em Heat:** Controls auxiliary or emergency heat; only available on systems with a heat pump.

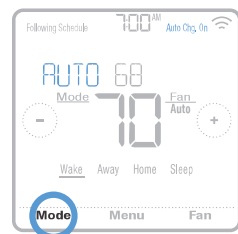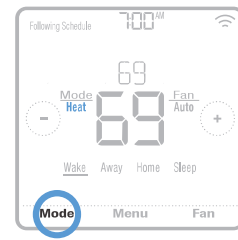

Notes:

- Em Heat and Auto modes may not appear on the thermostat screen or in the app depending on your equipment and how your thermostat was installed.
- Em Heat is only available for heat pump systems. The thermostat must also be configured to control a heat pump and an auxiliary/emergency heat stage.
- When Auto mode is selected, Auto Chg. On will appear in the upper-right corner of the thermostat home screen, and the active mode (Heat or Cool) will display under Mode. To set your temperature preferences in Auto mode, see page 7.

Built-in compressor protection

If the compressor is restarted too soon after a shutdown, system damage can occur. The built-in compressor protection feature forces the compressor to wait a few minutes before restarting, helping to prevent damage to the heating or cooling system.

During the brief wait period, the thermostat will flash Cool On (or Heat On if you have a heat pump) until the wait period is over, at which point the compressor will turn back on.

Note: The flashing Cool On or Heat On message is also used for startup delay protection if AC power loss occurs.




Setting the fan

Touch **Fan** on the thermostat home screen to cycle through available fan modes until the desired mode is displayed. Your changes will save automatically.

Available fan modes:

- **On:** The fan will run continuously.
- **Auto:** The fan will run only when the heating or cooling system is on.
- **Circ:** The fan will run at random intervals at least 35% of the time to keep air circulating throughout your home.

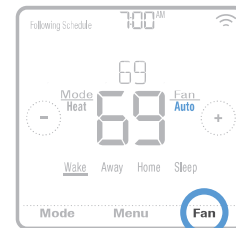


Connecting to a Wi-Fi network


To configure and control your Lyric T6 Pro Wi-Fi thermostat remotely, the thermostat needs to be connected to the Lyric app through your home's Wi-Fi network. Follow the simple steps below to get connected.

- 1 Make sure your smartphone or tablet is connected to a 2.4 GHz Wi-Fi signal. (Many Wi-Fi routers broadcast both a 2.4 GHz signal and a 5.0 GHz signal. If given the option, choose the 2.4 GHz signal.)
- 2 At the thermostat, press and hold the indoor temperature in the center of the screen for 5 seconds until the screen changes.
- 3 Download the Lyric app from the App Store or Google Play if you haven't already.

Open the Lyric app. Your thermostat should appear under Thermostat Found. Tap **SET UP NOW** to continue. If your thermostat doesn't appear, tap **INSTALL A DEVICE** and follow the prompts.

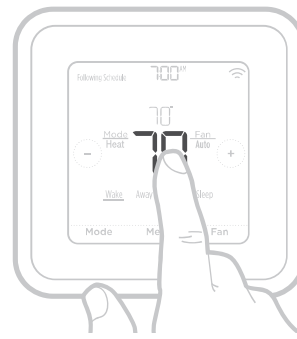

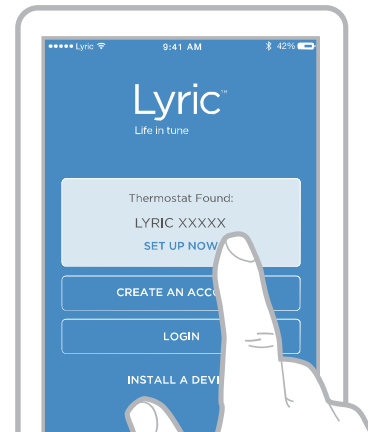


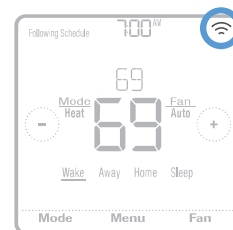
Lyric



Wi-Fi connection status

The thermostat's Wi-Fi connection status is located in the upper-right corner of the screen. To troubleshoot Wi-Fi connectivity issues, see the FAQs on page 31.

- Wi-Fi is connected 
- Wi-Fi is disconnected or Wi-Fi isn't set up 
- Wi-Fi is turned off 







Example of Wi-Fi is connected.

Disconnecting and reconnecting to a Wi-Fi network

If you need to disconnect the thermostat from one Wi-Fi network and reconnect it to another (because you're replacing your Wi-Fi router, for example), follow the steps below.

- 1 Open the Lyric app, tap the **menu** icon ☰ in the upper-left corner and select the thermostat you want to reconnect. Touch **Thermostat Configuration**, and from the options offered, touch **DELETE**.
- 2 At the thermostat, press and hold the temperature in the center of the screen for 5 seconds until the screen changes.
- 3 Open the Lyric app once more. Your thermostat should appear under Thermostat Found. Tap **SET UP NOW** to continue. If your thermostat doesn't appear, tap **INSTALL A DEVICE** and follow the prompts. (Your equipment configuration and preferences will still be in place.)

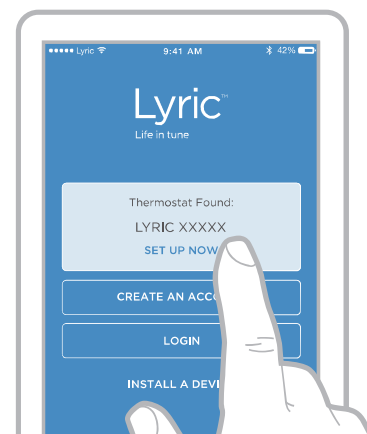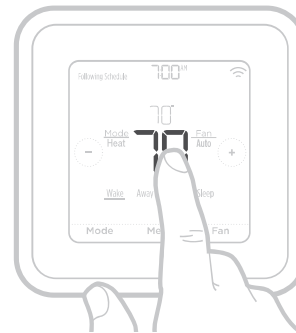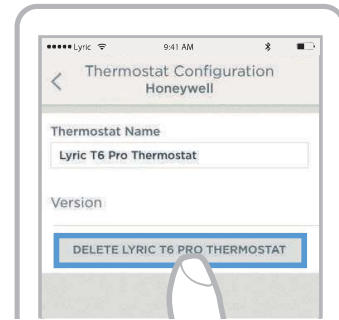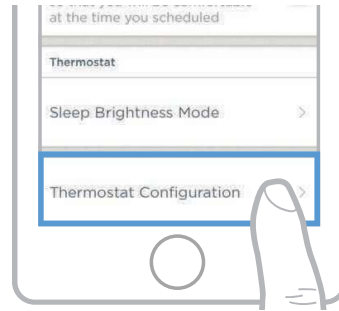

Main menu overview

Touch **Menu** on the thermostat home screen and then use the ◀ or ▶ arrows to page through the following options.

SCHEDULE

Create and edit a schedule for your thermostat to follow.

SCREEN LOCK

Lock the screen to limit access to thermostat settings.

VENTILATION

Set ventilation preferences. (Not available on all thermostats.)

WIFI

Configure or change the thermostat's Wi-Fi settings.

BRIGHTNESS

Set the brightness of the thermostat display.

RECOVERY

Enable or disable the Adaptive Intelligent Recovery feature.

CLOCK / DATE

Manually set the clock, clock format and daylight saving time in the CLOCK sub-menu, and date in the DATE sub-menu. (The thermostat will automatically display this information and the CLOCK and DATE sub-menus won't be available when connected to Wi-Fi.)

CLEAN SCREEN

Disable the touchscreen for 30 seconds so you can clean it.

TEMP SCALE

Choose Fahrenheit or Celsius.

RESET

Schedule: Resets to the default Monday-Friday, Saturday-Sunday schedule.

HomeKit: Clears your Apple® HomeKit™ credentials (provided HomeKit was previously configured).

Wi-Fi: Clears your Wi-Fi router credentials (provided a Wi-Fi router was previously configured).

EQMP STATUS

View current status of your heating or cooling equipment.

DEVICE INFO

View your thermostat's device information, such as MAC ID, model number and firmware version.

ALERTS

View, snooze or dismiss active alerts and reminders (available only when you see the active alert symbol ▲ on the thermostat home screen).

Navigating the menus

Menu: Touch to access all options and sub-menus.

◀ or ▶: Touch to page through options and sub-menus.

⊕ or ⊖: Touch to adjust things such as temperature, time and date.

Back or **Cancel:** Touch to discard changes or go back to the previous menu.

Select: Touch to access a sub-menu.

Done: Touch to confirm selection.

Tip: You can touch **Select** to access a sub-menu, or you can touch the text in the message area (the word SCHEDULE, for example).


Scheduling options


The Lyric T6 Pro Wi-Fi thermostat offers flexible scheduling options that include:

- Location-based temperature control
- Smart scheduling
- Time-based schedule
- No scheduling

On the thermostat home screen, you'll be able to see what kind of schedule is currently running, as well as which schedule period you're currently in.

Schedule status

Indicates if the thermostat is using location-based temperature control  or following a time-based schedule.

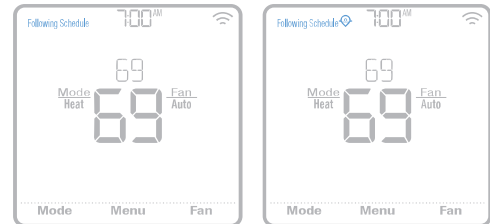

Schedule period

Shows current schedule period (Wake, Away, Home or Sleep).





Location-based temperature control and smart scheduling


Location-based temperature control uses geofence technology and your smartphone's GPS location to automatically adjust your thermostat as you come and go. When you leave the geofence boundary, the thermostat will change to your preferred Away temperature, and when you enter the geofence boundary, the thermostat will change to your preferred Home temperature.

Setting location-based temperature control and smart scheduling in the Lyric app


These two options can only be activated using the Lyric app. To enable location-based temperature control and/or set a smart schedule, follow the steps below.

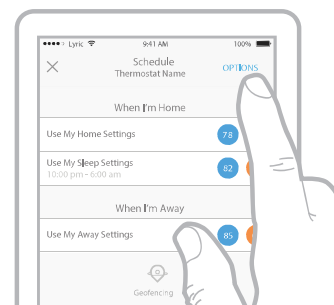


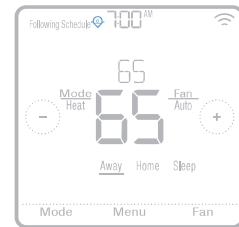
- 1 Open the Lyric app and tap the **scheduling (calendar)** icon .
- 2 Tap **OPTIONS** in the upper-right corner and tap Create New Schedule. Then, make sure the Location tab is selected and tap **USE GEOFENCING**.

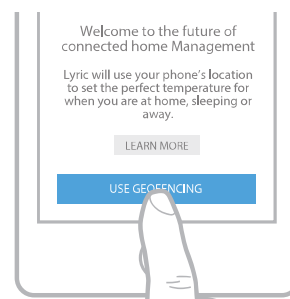

- 3 Choose the temperatures you prefer when you're home (one for cooling and one for heating). Use the up and down arrows to select your preferred temperatures, then tap **NEXT**.
- 4 Choose the temperatures you prefer when you're away, then tap **NEXT**.
- 5 You'll then be asked if you want to set a time and temperature for sleep. (Adding a Sleep period to location-based temperature control is what we call a smart schedule.) If you tap **YES**, choose Sleep Start and Sleep End times along with your preferred temperatures for sleeping, then tap **NEXT**.
- 6 Review your preferences. If you need to make edits, tap the period you want to edit, then tap **Done** when finished.

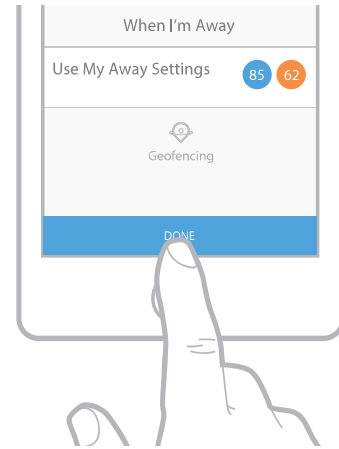


When location-based temperature control is active, you'll see a  symbol in the upper-left corner of the thermostat screen, along with Home or Away status and your preferred temperature. If you set an additional Sleep period in the Lyric app, you'll also see Following Schedule in the upper-left corner of the thermostat screen.



If you manually change the temperature when location-based temperature control is active, the new temperature will remain in effect until you cross the geofence.

To adjust the geofence boundary, follow the steps below.

- 1 Open the Lyric app, tap the **menu** icon  in the upper-left corner and then tap **Geofence**.
- 2 Tap **Geofence Radius**, and when the map and current geofence appear, touch, hold and drag the black dot to adjust the geofence boundary.
- 3 Tap **SAVE** to finish.




Editing location-based temperature control and smart scheduling on the thermostat

To edit your preferred Home, Away and Sleep temperatures or your Wake and Sleep times while location-based temperature control is active, follow the steps below. You can also make edits in the Lyric app.

- 1 Touch **Menu** on the thermostat home screen.
- 2 Touch the ◀ or ▶ arrows until you see SCHEDULE, then touch **Select**.
- 3 Touch the ◀ or ▶ arrows until you see the period you want to view or edit, then touch **Select**. Touch the time or temperature you want to edit and use the + or - buttons to adjust up or down. Touch **Select** to confirm.
- 4 Touch the ◀ or ▶ arrows to edit additional periods, then touch **Back** twice to return to the thermostat home screen.

To learn more about location-based temperature control, [check out these FAQs](#).

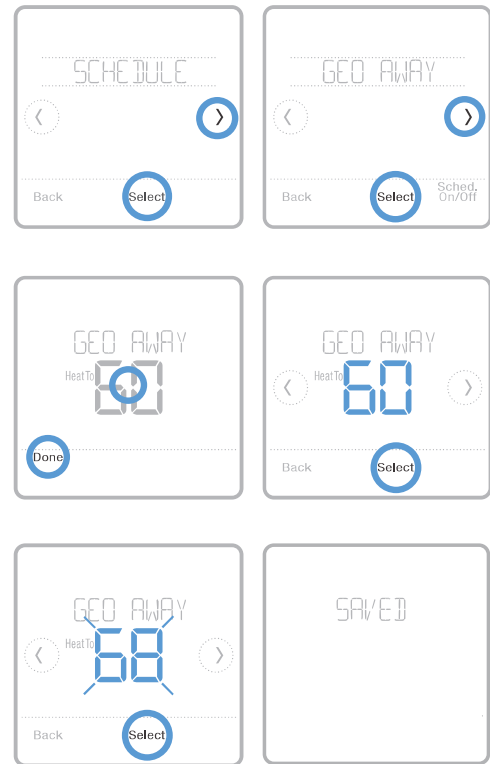

Time-based scheduling

With time-based scheduling, you can program your thermostat to follow a predictable schedule based on time of day or day of the week. Here are the programming options:

- **Everyday:** Every day (Mon-Sun) has the same schedule
- **Weekday & Weekend:** Weekdays (Mon-Fri) have the same schedule and weekends (Sat-Sun) have the same schedule
- **Individual Days:** Each day has a different schedule.


There are also four adjustable periods per day: Wake, Away, Home and Sleep.



Your Lyric T6 Pro Wi-Fi thermostat comes with the following default Weekday & Weekend schedule that can help reduce your heating and cooling expenses. To change schedule types (from Weekday & Weekend to a different option) you must use the Lyric app. See page 13 for instructions.

Period	Start Time	Heat (Mon-Fri)	Cool (Mon-Fri)	Heat (Sat-Sun)	Cool (Sat-Sun)
Wake	6:00 AM	70°	78°	70°	78°
Away	8:00 AM	62°	85°	62°	85°
Return	6:00 PM	70°	78°	70°	78°
Sleep	10:00 PM	62°	82°	62°	82°

Setting a time-based schedule in the Lyric app





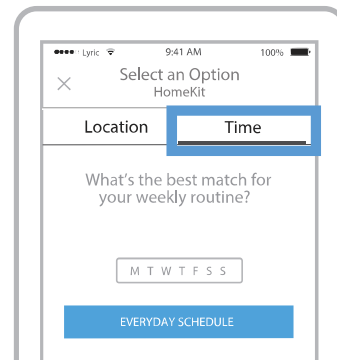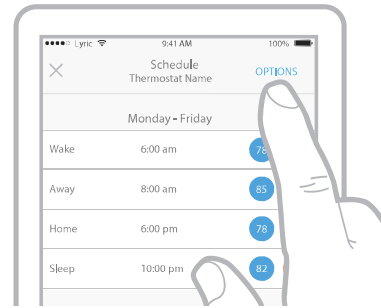

To select a schedule type and set a time-based schedule in the Lyric app, follow the steps below.



- 1 Tap the **scheduling (calendar)** icon , tap **OPTIONS** in the upper-right corner and then tap **Create New Schedule**.
- 2 Make sure the Time tab is selected, then choose the schedule type that best matches your weekly routine.
- 3 A default schedule will appear. Tap the period you want to edit (Wake, for example), then choose the time you want the period to start and your preferred temperatures for cooling and heating. Tap **SAVE** to finish and move on to other periods.
- 4 After you're done editing your schedule, tap **DONE**.





Setting a time-based schedule on the thermostat

To edit a time-based schedule on the thermostat, follow the steps below.


- 1 Touch **Menu** on the thermostat home screen.
- 2 Touch the  or  arrows until you see SCHEDULE, then touch **Select**.
- 3 Touch the  or  arrows to select a period in a day or set of days, then touch **Select** on the period you want to edit. (You can only edit a period of days according to the schedule type selected. To change schedule type, use the Lyric app.)
- 4 Touch the time area, then touch  or  to adjust when the period starts. Touch **Select** to confirm.

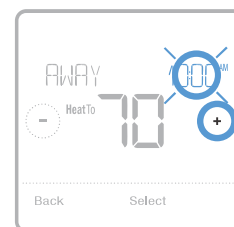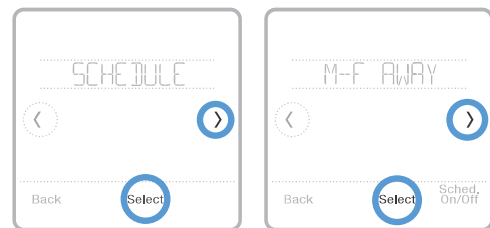

- 5 Touch the temperature area, then touch \oplus or \ominus to adjust your preferred temperature for the mode that's currently active (either heating or cooling). Touch **Select** to confirm. Then touch \oplus or \ominus to adjust your preferred temperature for the inactive mode. Touch **Select** to confirm.
- 6 Edit the next period or use the \rightarrow until you see DONE, then press **Select** to save changes and go to the home screen.

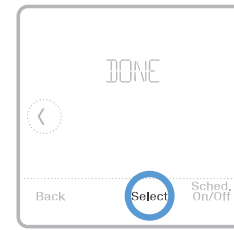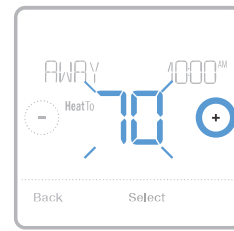


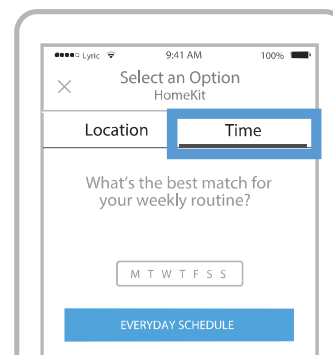
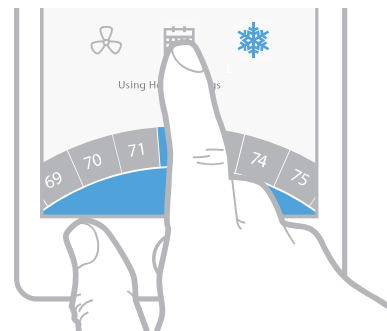
Note: To temporarily cancel a schedule period (such as Saturday–Sunday Away, for example, because you'll be home), go to the SCHEDULE option and touch the \leftarrow or \rightarrow arrows to select a period. Touch **Select** on the period you want to cancel, then touch **Cancel Period**. To reactive the period you cancelled, touch **Cancel Period** again to select period start time and preferred temperature.

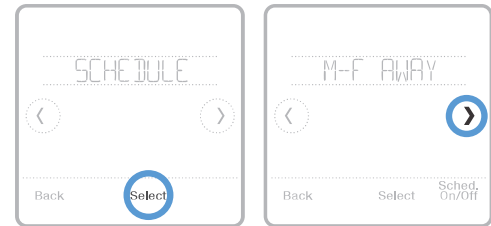

Changing schedule type on the Lyric app

To change from a Weekday & Weekend schedule to an Everyday or Individual Days schedule (for example), follow the steps below. You must use the Lyric app to change schedule types.



- 1 Open the Lyric app and tap the **scheduling (calendar)** icon .
- 2 Tap **OPTIONS** in the upper-right corner. To select an Everyday or Weekday & Weekend schedule, tap **Create New Schedule**, make sure the Time tab is selected and then choose your preferred schedule type. To select an Individual Days schedule, tap **OPTIONS** and then **View by Individual Days**.
- 3 Set your temperature preferences for the new schedule type and touch **DONE** to finish.



Resetting the thermostat to the default schedule

To reset your thermostat to the default Monday-Friday, Saturday-Sunday schedule, follow the steps below.


- 1 Touch **Menu** on the thermostat screen.
- 2 Touch the ◀ or ▶ arrows until you see **RESET**, then touch **Select**.
- 3 Touch the ◀ or ▶ arrows until you see **SCHEDULE**, then touch **Select**.
- 4 Touch **Yes** to confirm.

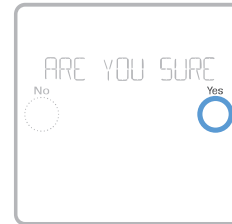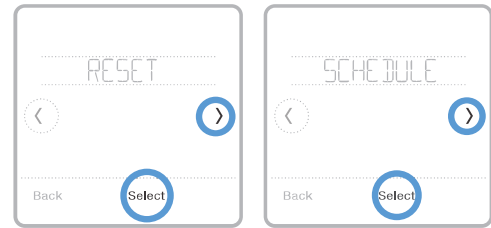

Turning off scheduling

To turn off scheduling and control the temperature manually, follow the steps below.

- 1 Touch **Menu** on the thermostat screen.
- 2 Touch the ◀ or ▶ arrows until you see **SCHEDULE**, then touch **Select**.
- 3 Touch **Sched. On/Off** to toggle between Schedule On and Schedule Off. (It may take a few seconds for your selection to become active.)
- 4 Then, touch **Back** twice to return to the thermostat home screen.

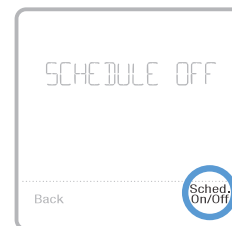


Screen lock settings

To prevent unauthorized access to the thermostat, or to limit changes to the system settings, there are two screen lock settings you can apply.

- **Partial lock:** Only the temperature can be changed.
- **Full lock:** No access is allowed without a PIN number.


Applying a screen lock setting


- 1 Touch **Menu** on the thermostat home screen.
- 2 Touch the ◀ or ▶ arrows until you see SCREEN LOCK, then touch **Select**.
- 3 Touch the ◀ or ▶ arrows to select your desired screen lock setting, then touch **Select**.
- 4 A PIN number will appear on screen. Write it down and keep it in a safe place.
- 5 Touch **Select**, and confirm your screen lock setting by touching **Yes**.

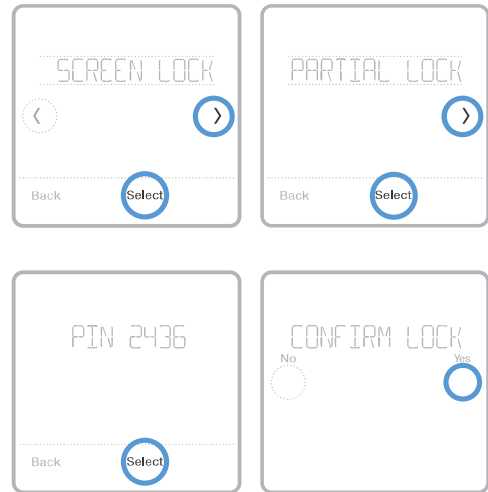

A partially or fully locked screen will be indicated by a lock symbol at the bottom of the thermostat screen.

Unlocking the screen

- 1 Touch the lock symbol  on the thermostat home screen.
- 2 When prompted to enter a PIN number, touch + or - to select the first number of the PIN code. Touch Select to confirm, and repeat for the remaining numbers.

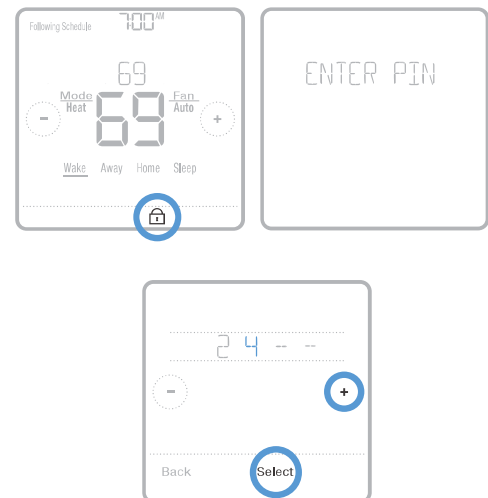

When you enter the correct PIN, you'll return to the thermostat home screen. To re-lock the screen after you're done making changes, follow the steps above to apply a lock setting.






Ventilation settings

Depending on your Lyric thermostat model number and how your system was configured, the following ventilation settings may be available:

- **Vent mode:** Turns ventilation on and off.
 - **Auto:** Ventilation will run as programmed by the installer.
 - **On:** Ventilation is always on.
 - **Off:** Ventilation will remain off unless turned on using the timer.
- **Boost:** Provides temporary ventilation (for 20-180 minutes) for situations such as strong cooking smells or when you'd like a little more fresh air.
- **Lockout:** Prevents ventilation from running during the Sleep period.

To change your ventilation settings, follow the steps below.


- 1 Touch **Menu** on the thermostat home screen.
- 2 Touch the ◀ or ▶ arrows until you see VENTILATION, then touch **Select**.
- 3 Touch the ◀ or ▶ arrows to choose VENT MODE, BOOST or LOCKOUT, then touch Select.
 - **Vent mode:** Touch the ◀ or ▶ arrows to select AUTO, ON or OFF, then touch **Done** to confirm.
 - **Boost:** Touch + or - to choose how many minutes ventilation will run, then touch **Done** to confirm. To cancel temporary boost, go into the Boost menu again, where you'll be asked if you want to enter a new value in minutes. Touch **Yes** to enter a new value, then touch the - button to set the value to 0. Touch Done to confirm.
 - **Lockout:** In the lockout menu, you'll be prompted to confirm whether you want to prevent ventilation from running during the Sleep period. Touch **Yes** or **No** to confirm.

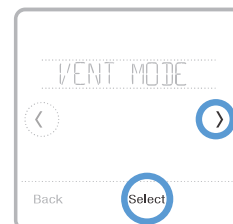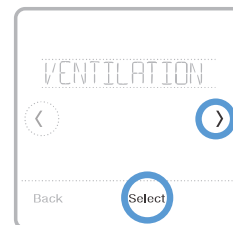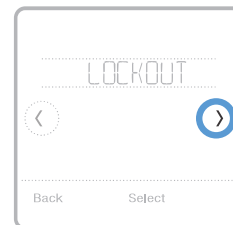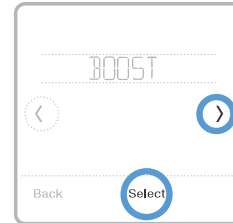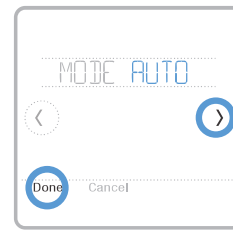

Wi-Fi settings

To access the Wi-Fi settings option, follow the steps below.

- 1 Touch **Menu** on the thermostat home screen.
- 2 Touch the ◀ or ▶ arrows until you see **WIFI**, then touch **Select**.
- 3 Touch the ◀ or ▶ arrows to cycle through the following options **SETUP WIFI**, **WAC SETTING** and **WIFI ON/OFF**, and touch **Select** on the option you want to edit.

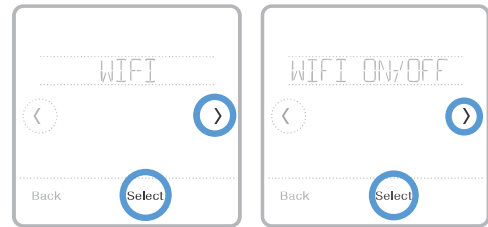

Choose the **SETUP WIFI** option to get your thermostat connected to your home's Wi-Fi network (see instructions on page 10 for more). For **WAC SETTING** and **WIFI ON/OFF** information, see below.


WAC setting

The Wireless Accessory Configuration (WAC) setting is an iOS-specific setting that enables Wi-Fi credentials to be securely transferred from an iOS device to the thermostat. The WAC setting is enabled by default to simplify the Wi-Fi connection process. If you choose to disable it (not recommended), you'll have to use a different process to get your thermostat connected to Wi-Fi.

Turning thermostat Wi-Fi on and off

If you want to disconnect your thermostat from Wi-Fi, follow the steps below.


- 1 Touch **Menu** on the thermostat home screen.
- 2 Touch the ◀ or ▶ arrows until you see **WIFI**, then touch **Select**.
- 3 Touch the ◀ or ▶ arrows until you see **WIFI ON/OFF**, then touch **Select**.
- 4 Touch the ◀ or ▶ arrows to choose **WIFI ON** or **WIFI OFF**. Then touch **Done** to confirm.

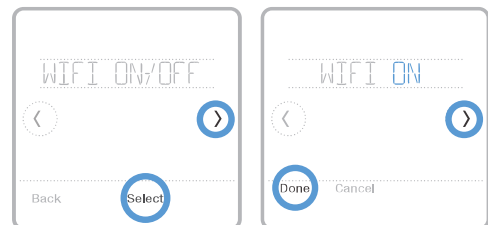

Adjusting backlight brightness

When the thermostat is in idle mode, you can adjust how bright you'd like the screen. You can choose a brightness level from 00 (display backlight is off, which is the default) up to 05 (maximum brightness). To adjust backlight brightness, follow the steps below.


- 1 Touch **Menu** on the thermostat home screen.
- 2 Touch the ◀ or ▶ arrows until you see BRIGHTNESS, then touch **Select**.
- 3 Touch ⊕ or ⊖ to adjust the brightness level, which will change immediately.
- 4 Touch **Done** to confirm.

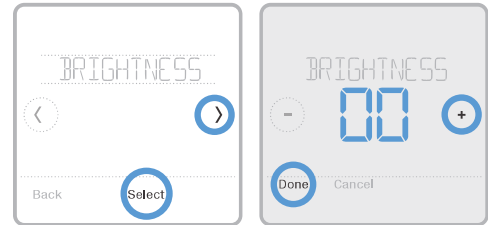


Enabling/disabling Adaptive Intelligent Recovery

Over time, your Lyric T6 Pro Wi-Fi thermostat will learn how long it takes your system to reach the desired temperature. It can then turn on your heating or cooling equipment at the right time to make sure your home is comfortable by the time you expect. This feature is enabled by default. To disable it, follow the steps below.

- 1 Touch **Menu** on the thermostat home screen.
- 2 Touch the ◀ or ▶ arrows until you see RECOVERY, then touch **Select**.
- 3 Touch the ◀ or ▶ arrows to select RECOVERY ON or RECOVERY OFF, then touch **Done** to confirm.

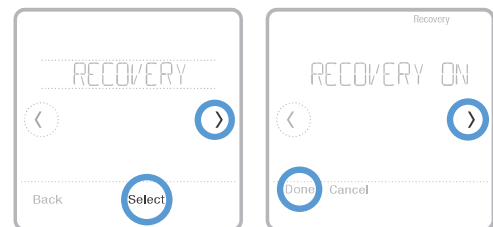

When Adaptive Intelligent Recovery is active, you'll see the recovery symbol in the upper-right corner of the thermostat screen.

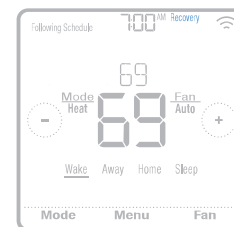


Setting the time and date

When the thermostat is connected to Wi-Fi and registered to your Lyric app account, it will set the time and date and adjust for daylight saving time automatically. (The CLOCK and DATE sub-menus won't be available.)

If your thermostat is not connected, you'll need to set the time and date manually using the steps below.



Setting the time

- 1 Touch **Menu** on the thermostat home screen.
- 2 Touch the ◀ or ▶ arrows until you see CLOCK, then touch **Select**.
- 3 Touch the ◀ or ▶ arrows until you see SET TIME, then touch **Select**.
- 4 Press ⊕ or ⊖ to set the time (or press and hold the buttons to move more quickly). Touch **Done** when finished.
- 5 Set clock format (12 hours or 24 hours) and daylight saving time in the same CLOCK sub-menu.

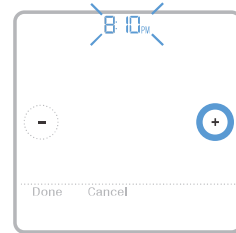

Setting the date

- 1 Touch **Menu** on the thermostat home screen.
- 2 Touch the ◀ or ▶ arrows until you see DATE, then touch **Select**.
- 3 Touch ⊕ or ⊖ to set the month, then touch **Select** to confirm.
- 4 Continue to set day and year in the same way. Touch **Select** to save your changes.

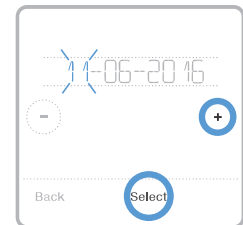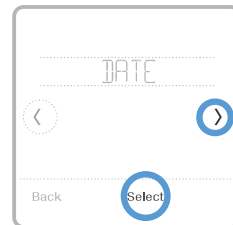

Cleaning the thermostat screen

With the clean screen option, you can lock the thermostat screen so you don't accidentally change your settings when you clean. Follow the steps below to activate clean screen mode.

- 1 Touch **Menu** on the thermostat home screen.
- 2 Touch the ◀ or ▶ arrows until you see CLEAN SCREEN, then touch **Select**.

The screen will deactivate for 30 seconds. A countdown timer will display the amount of time until screen reactivation.


Tip: To clean the thermostat screen, spray water or household cleaner onto a cloth, then use the cloth to clean the screen. Avoid abrasive cleaners and do NOT spray liquid directly on the thermostat.



Choosing Fahrenheit or Celsius

To select a temperature scale, follow the steps below.

- 1 Touch **Menu** on the thermostat home screen.
- 2 Touch the ◀ or ▶ arrows until you see TEMP SCALE, then touch **Select**.
- 3 Touch the ◀ or ▶ arrows to select FAHRENHEIT or CELSIUS then touch **Done** to save your changes.
- 4 Touch **Back** to return to the thermostat home screen.

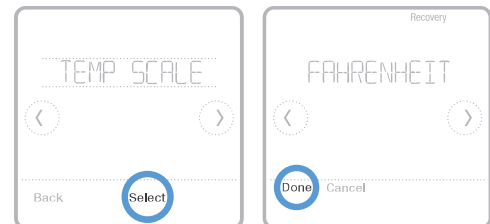


Reset options

To clear your settings or device credentials, use one of the reset options below.

- **Schedule reset:** Resets your schedule back to the default Monday–Friday, Saturday–Sunday schedule.
- **HomeKit:** Clears your Apple® HomeKit™ device credentials (provided HomeKit was previously configured).
- **Wi-Fi reset:** Clears your Wi-Fi router credentials (provided a Wi-Fi router was previously configured).

Selecting a reset option

- 1 Touch **Menu** on the thermostat home screen.
- 2 Touch the ◀ or ▶ arrows until you see RESET, then touch **Select**.
- 3 Touch the ◀ or ▶ arrows to choose a reset option, then touch **Select**.
- 4 Touch **Yes** to complete the reset or **No** to return to the reset sub-menu.

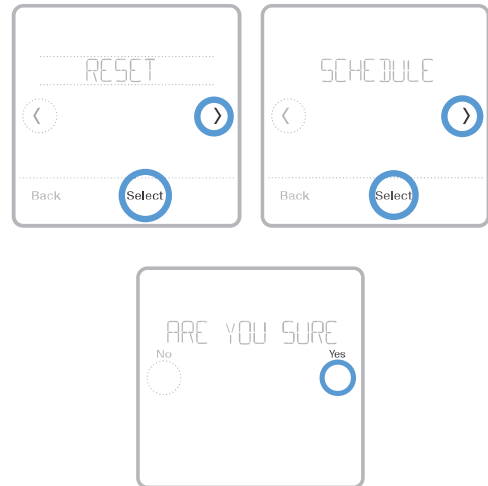


Viewing equipment status

You can check the status of your heating or cooling equipment and fan by following the steps below. Please note that system data may vary depending on thermostat model and how the thermostat was installed.

- 1 Touch **Menu** on the thermostat home screen.
- 2 Touch the ◀ or ▶ arrows until you see EQMT STATUS, then touch **Select**.
- 3 Touch the ◀ or ▶ arrows to select which system you want status information on.


After 3 seconds, system status information will scroll on the screen.

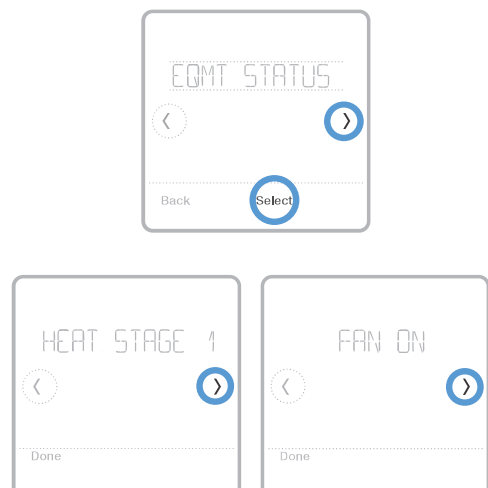

Viewing thermostat information

To see your thermostat's technical information, follow the steps below.


- 1 Touch **Menu** on the thermostat home screen.
- 2 Touch the ◀ or ▶ arrows until you see DEVICE INFO, then touch **Select**.
- 3 Touch the ◀ or ▶ arrows to view information such as:
 - MAC ID
 - IP address
 - Date code
 - Model number
 - Build
 - Stat app
 - Stat app boost
 - Firmware
 - Wi-Fi radio app
 - Wi-Fi radio boot

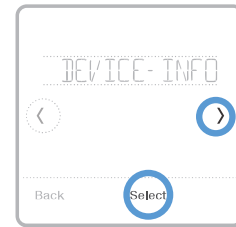



Alerts and maintenance reminders

The Lyric T6 Pro Wi-Fi thermostat comes with a set of Smart Alerts that help keep your heating and cooling system running correctly and efficiently. You'll get reminders when it's time to change the filter, for example, and notifications in the event of extreme indoor temperatures.

Non-critical alerts and maintenance reminders can be snoozed for up to 7 days and/or dismissed. Some critical alerts cannot be snoozed or dismissed as your heating or cooling system may require service.

To turn off/on alerts and notifications in the Lyric app, log into the app and tap the **menu** icon  in the upper-left corner. Then tap Alerts and Notifications to set your preferences. To turn off/on alerts and notifications on the thermostat, contact your heating or cooling professional.

When there's an active alert or maintenance reminder, you'll see the alert symbol  on the thermostat home screen. To see alert information, follow the steps below.

- 1 Touch **Menu** on the thermostat home screen, then you'll see the ALERTS sub-menu. (The ALERTS sub-menu will only be available when there's an active alert.)
- 2 Touch **Select** to view the alert. A 3-digit alert code will appear by the thermostat's clock and a description of the alert will scroll on the screen.
- 3 If the alert is non-critical, you'll have the option to Snooze or Dismiss it. If you have multiple alerts, touch the  or  arrows to page through the list of active alerts and follow steps 1 and 2 above.

To see what each 3-digit alert code means and the action you should take, refer to the chart below.

Number	Alert/Reminder	Recommended action
164	Heat Pump Needs Service	Contact your heating or cooling professional to diagnose and service the heat pump.
168	Wi-Fi Radio Error	The wireless module isn't operating, and wireless features aren't available. Contact your heating or cooling professional for assistance.
170	Internal Memory Error	The thermostat's memory has encountered an error. Contact your heating or cooling professional for assistance.
171	Set the Date and Time	Please set the time and date on the thermostat to ensure features like scheduling can operate. See page 23 for instructions.
173	Thermostat Temperature Sensor Error	The temperature sensor on the thermostat has encountered an error. Contact your heating or cooling professional for assistance.
175	AC Power Resumed	AC power to the thermostat has been restored after power loss. You don't need to take any action.
177	Indoor Temperature Sensor Error	The wired indoor temperature sensor is not connected or there is a wiring short. Contact your heating or cooling professional for assistance.

Number	Alert/Reminder	Recommended action
178	Outdoor Temperature Sensor Error	The wired outdoor temperature sensor is not connected or there is a wiring short. Contact your heating or cooling professional for assistance.
181	Replace Air Filter (1)	Replace the air filter or contact your heating or cooling professional. Reset the air filter timer by touching Dismiss on the thermostat screen after replacement.
182	Replace Air Filter (2)	Replace the air filter or contact your heating or cooling professional. Reset the timer by touching Dismiss on the thermostat screen after replacement.
183	Clean Humidifier Tank and Replace Water Filter	Clean humidifier tank and replace the water filter, or contact dealer to do this for you. Reset the timer by touching the Dismiss button on the thermostat screen after it is replaced.
184	Replace Humidifier Pad	Replace the humidifier pad or contact your heating or cooling professional. Reset the timer by touching Dismiss on the thermostat screen after replacement.
185	Replace Dehumidifier Filter	Replace the dehumidifier filter or contact your heating or cooling professional. Reset the timer by touching Dismiss on the thermostat screen after replacement.
186	Clean Ventilator Core	Clean the ventilator core or contact your heating or cooling professional. Reset the timer by touching Dismiss on the thermostat screen after you're done.
187	Clean or Replace Ventilator Filter	Clean or replace the ventilator filter or contact your heating or cooling professional. Reset the timer by touching Dismiss on the thermostat screen after you're done.
188	Replace UV Bulb (1)	Replace the UV bulb or contact your heating or cooling professional. Reset the timer by touching Dismiss on the thermostat screen after you're done.
189	Replace UV Bulb (2)	Replace the UV bulb or contact your heating or cooling professional. Reset the timer by touching Dismiss on the thermostat screen after you're done.
210	Register Online For Outdoor Temperature	You need to register online to receive outdoor temperature information from the Internet. Based on the installation settings, this information is required for correct operation of your system. Please download the Lyric app and register your thermostat.
388	Register Online for Remote Access and Outdoor Temperature	You need to register online for remote thermostat access and outdoor temperature information. Please download the Lyric app and register your thermostat.
399	No Internet	The internet connection has been lost. Please check your network settings.
400	No Wi-Fi Signal	The Wi-Fi signal has been lost. Please wait for the thermostat to reconnect or select a new Wi-Fi network. See page 11 for Wi-Fi reconnection instructions.
508	Wi-Fi Not Configured	Please download the Lyric app and follow the steps to connect your thermostat to Wi-Fi. See page 11 for Wi-Fi connection instructions.

General system information



REQUIRED: 24 VAC POWER ("C" WIRE)



CAUTION: ELECTRICAL HAZARD

Can cause electrical shock or equipment damage. Disconnect power before beginning installation.



CAUTION: EQUIPMENT DAMAGE HAZARD

Compressor protection is bypassed during testing. To prevent equipment damage, avoid cycling the compressor quickly.



CAUTION: MERCURY NOTICE

If the Lyric T6 Pro Wi-Fi thermostat is replacing a thermostat that contains mercury in a sealed tube, do not place the old thermostat in the trash. Please contact your local waste management authority for proper recycling or disposal instructions.

Compatibility

- The Lyric T6 Pro Wi-Fi thermostat is compatible with most single-stage and multi-stage conventional and heat pump heating and cooling systems
- 24 VAC power (via a "C" or common wire) is required
- Does not work with electric baseboard heat (120-240V)
- Does not work with millivolt systems
- Provides remote thermostat control through iOS or Android smartphones and tablets
- Compatible with Apple® HomeKit™ and Amazon Echo®

Wi-Fi Communication

2.4GHz range, 802.11 b/g/n home wireless router

Temperature Ranges

Adjustable Heat Temperature Range Setting: 40-90 °F (4.5-32.0 °C)

Adjustable Cool Temperature Range Setting: 50-99 °F (10.0-37.0 °C)

Temperature Sensor Accuracy

± 1.5 °F at 70 °F (0.85 °C at 21.0 °C)

Electrical Ratings

Terminal	Voltage (50/60Hz)	Running Current
W Heating	20-30 Vac	0.02-1.0 A
(Powerpile)	750 mV DC	100 mA DC
W2 (Aux) Heating	20-30 Vac	0.02-1.0 A
E Emergency Heat	20-30 Vac	0.02-0.5 A
Y Compressor Stage 1	20-30 Vac	0.02-1.0 A
Y2 Compressor Stage 2	20-30 Vac	0.02-1.0 A
G Fan	20-30 Vac	0.02-0.5 A
O/B Changeover	20-30 Vac	0.02-0.5 A
L/A Input	20-30 Vac	0.02-0.5 A
U Universal	20-30 Vac	0.02-0.5 A

Power Consumption

Typical (Backlight On, Wi-Fi On): 1.0VA

Maximum (Backlight On, Wi-Fi installation): 1.5VA

Troubleshooting

If the thermostat screen is blank:

- Check the circuit breaker or fuse that's connected to your heating or cooling system and turn it on if it's switched off.
- Make sure the power switch at the heating or cooling system is on.
- Make sure the furnace door is closed securely.

If the screen is difficult to read:

- Increase screen brightness (see page 22 for instructions).

If the heating or cooling system isn't responding:

- Touch **Mode** on the thermostat home screen and set the system to Heat. Make sure the temperature set point (the smaller of the two numbers) is higher than the indoor temperature (the large number in the center of the screen).
- Touch **Mode** on the thermostat home screen and set the system to Cool. Make sure the temperature set point (the smaller of the two numbers) is lower than the indoor temperature (the large number in the center of the screen).
- Check the circuit breaker or fuse that's connected to your heating or cooling system and turn it on if it's switched off.
- Make sure the power switch at the heating or cooling system is on.
- Make sure the furnace door is closed securely.
- After making these changes, wait 5 minutes for the system to respond.

If the temperature setting doesn't change:

- Make sure the heating and cooling set points are within the operating range.
 - Heat: 40 °F to 90 °F (4.5 °C to 32.0 °C)
 - Cool: 50 °F to 99 °F (10.0 °C to 37.0 °C)

If Cool On or Heat On is flashing:

- The compressor protection feature is engaged. Wait a few minutes for the system to safely restart to avoid damaging the compressor. See page 9 for more information.

Frequently asked questions (FAQs)

Wi-Fi connection questions

Q: Will the thermostat still work if the Wi-Fi connection is lost?

A: Yes, you can still manually adjust the temperature at the thermostat. However, some features such as location-based temperature control (geofence technology) can only be managed through the Lyric app and will not function without a Wi-Fi connection. The thermostat will automatically reconnect to Wi-Fi once the network is restored.

Q: Why is the thermostat not finding my Wi-Fi network?

A: The Lyric T6 Pro Wi-Fi thermostat operates in the 2.4GHz range. Smartphones operate in both the 2.4 and 5.0 GHz ranges, so your smartphone may “see” your Wi-Fi network when your thermostat does not. Most Wi-Fi routers will broadcast two networks: 2.4 GHz and 5.0 GHz. If you have an option, make sure your smartphone is connected to the 2.4 GHz network.

Q: Is there a way to extend the strength of my Wi-Fi signal?

A: The range (distance) of your Wi-Fi signal is determined by your router. Try moving your router closer to the location of the thermostat, or use a router with a stronger signal range.

Q: There’s an alert that says “Wi-Fi Signal Lost” – what should I do?

A: Wait 5 minutes for the thermostat to reconnect or select an alternate network (if you have one) in the Lyric app configuration menu. If the thermostat isn’t able to reconnect, you’ll need to troubleshoot the router to determine the cause.

Q: Why is there an offline symbol (Wi-Fi icon with a strikethrough) in the upper-right corner of the thermostat screen?

A: The thermostat has lost its connection to the Wi-Fi network. First, make sure your Wi-Fi router is plugged in and broadcasting a signal. If it is, try resetting the router (consult the router’s manual for instructions). When the Wi-Fi network has been restored, the thermostat will automatically reconnect.

Lyric account and app questions

Q: Why haven’t I received an account activation email?

A: If you haven’t received an activation email after 5 minutes, check your Spam folder and look for an email from Connected-Home@alarmnet.com. If you don’t see it, tap **Resend** to have the activation email resent. If you still don’t receive it, please contact the Lyric Technical Support team at 1-800-633-3991.

Q: Can I set up my thermostat with multiple users?

A: Yes. To add users, log into the Lyric app and tap the **menu** icon in the upper-left corner. Select Manage Users, tap Add User and type in the email addresses of the people you’d like to invite. If they already have a Lyric account set up, the thermostat and its location will automatically be added to their account. If they don’t have an account, they’ll receive an email prompting them to download the Lyric app and create a new account.

Q: Can I set up location-based temperature control with multiple users?

A: Yes. Location-based temperature control (geofence technology) will activate based on the last person who leaves and the first person to return. Each user will need to create their own Lyric account with a login ID and password. Two users should not share the same account. Each user will then need to enable location-based temperature control. See page 13 for instructions.

Q: Why doesn't a change I made in the app show up on the thermostat?

A: There may be a short delay when you make temperature and settings changes in the Lyric app. Wait a few minutes, and if you still don't see your changes on the thermostat, make sure the thermostat is still connected to Wi-Fi and restart your Lyric app.

Alerts and maintenance notification questions

Q: What should I do when the alert symbol  appears on the thermostat home screen?

A: When you see the alert symbol on the thermostat screen, touch **Menu** and the ALERTS sub-menu will appear. Touch **Select** to view alert information. Or, you can view alert information in the Lyric app. See page 27 for a list of all alert codes, what they mean and the action you should take.

Software and security questions

Q: How can I be sure my thermostat is running the most up-to-date firmware?

A: When your thermostat is connected to Wi-Fi, it will automatically receive over-the-air firmware updates from Honeywell. These firmware updates contain things such as new features as well as security upgrades. Keep your thermostat connected to Wi-Fi to ensure it receives these updates.

Q: How can I prevent a cybercriminal from making unauthorized changes to my thermostat?

A: If a cybercriminal gains access to your Wi-Fi router, they can tamper with a wide range of online activities, including the settings on your connected devices. Make sure you change the default password on your Wi-Fi router, and when you select a new password, make sure it uses multiple upper- and lower-case letters and special characters.

Thermostat removal questions

Q: How can I safely remove my thermostat?

A: Thermostat removal should ideally be handled by a trained professional as improper removal can cause electrical shock and equipment damage. If you wish to remove the thermostat yourself, be sure to turn off the circuit breaker that controls your heating or cooling equipment before you disconnect any wires. If you don't know which breaker controls your equipment, you can shut off the main breaker.

Q: How can I uninstall my Lyric T6 Pro Wi-Fi thermostat?

A: If you want to replace your Lyric T6 Pro Wi-Fi thermostat, or if you're moving out of your home and leaving the thermostat behind, you'll first want to clear out the personal settings that are stored on the thermostat. (Even when disconnected from power, the thermostat will keep your settings and home router information in memory.) We recommend resetting the thermostat's schedule, Wi-Fi and HomeKit settings (if previously connected). See page 25 for more information on reset options.

Regulatory information

FCC REGULATIONS

§ 15.19 (a)(3)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

IC REGULATIONS

RSS-GEN

This device complies with Industry Canada's license-exempt RSSs.

Operation is subject to the following two conditions:

- This device may not cause interference; and
- This device must accept any interference, including interference that may cause undesired operation of the device.

FCC Warning (Part 15.21) (USA only)

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warranty information

Honeywell warrants this product, to be free from defects in the workmanship or materials, under normal use and service, for a period of five (5) years from the date of purchase by the consumer. If at any time during the warranty period the product is determined to be defective or malfunctions, Honeywell shall repair or replace it (at Honeywell's option).

If the product is defective,

(i) return it, with a bill of sale or other dated proof of purchase, to the place from which you purchased it; or

(ii) call Honeywell Customer Care at 1-800-468-1502. Customer Care will make the determination whether the product should be returned to the following address: Honeywell Return Goods, Dock 4 MN10-3860, 1985 Douglas Dr. N., Golden Valley, MN 55422, or whether a replacement product can be sent to you.

This warranty does not cover removal or reinstallation costs. This warranty shall not apply if it is shown by Honeywell that the defect or malfunction was caused by damage which occurred while the product was in the possession of a consumer.

Honeywell's sole responsibility shall be to repair or replace the product within the terms stated above. HONEYWELL SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE OF ANY KIND, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING, DIRECTLY OR INDIRECTLY, FROM ANY BREACH OF ANY WARRANTY, EXPRESS OR IMPLIED, OR ANY OTHER FAILURE OF THIS PRODUCT. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.

THIS WARRANTY IS THE ONLY EXPRESS WARRANTY HONEYWELL MAKES ON THIS PRODUCT. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED TO THE FIVE-YEAR DURATION OF THIS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

If you have any questions concerning this warranty, please write Honeywell Customer Relations, 1985 Douglas Dr, Golden Valley, MN 55422 or call 1-800-468-1502.

Home and Building Technologies

In the U.S.:

Honeywell International Inc.

1985 Douglas Drive North

Golden Valley, MN 55422-3992

<http://customer.honeywell.com>

Honeywell

® U.S. Registered Trademark.

© 2016 Honeywell International Inc.

33-00257EFS-01 M.S. 12-16

Printed in U.S.A.



33-00257EFS-01