 


Warranty and Customer Service

LOFTEK offers a 12-month limited warranty on quality-related issues. Please register on our website to extend your warranty and view this manual in other languages.

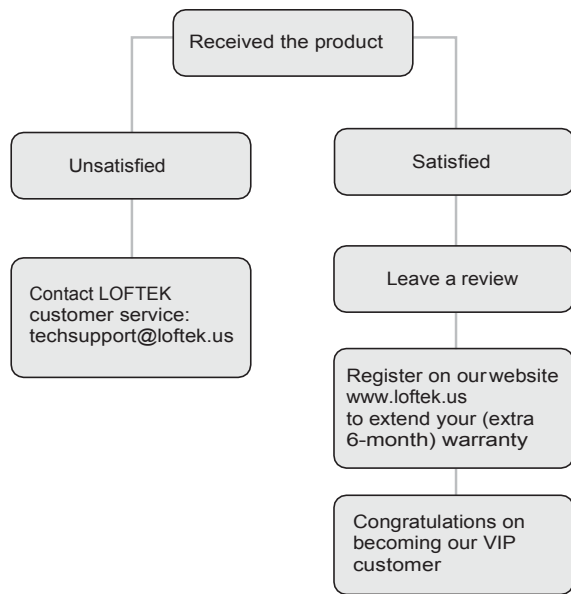 


Discover a wonderful life!

✉ techsupport@loftek.us

f www.facebook.com/loftek.us/

LOFTEK®

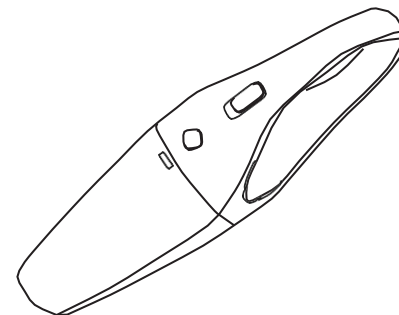

Wireless Vacuum Cleaner

www.loftek.us



DANGER






Before using this product, please read and understand all instructions and safety warnings carefully. Failure to follow the instructions may result in electric shock, fire or serious injury. Do not discard this information. If the damage is caused by failure to follow the instructions, the warranty does not apply.

! WARNING:


- 1.) Do not use the appliance to pick up combustion or any materials that could catch fire, such as a burning cigarette.
- 2.) Do not cover the air inlet or air outlet when operating the product, otherwise it may be deformed or catch fire due to overheating.
- 3.) Do not use a non-original charging cable to charge the product. If the charging cable is damaged, please stop using it immediately.
- 4.) Do not pull or fold the hose forcibly, otherwise the hose may be easily deformed or damaged.
- 5.) Do not dismantle or short-circuit the batteries. Protect the batteries from fire, heat and direct sunlight.

Contact LOFTEK

-  Email: techsupport@loftek.us Facebook:
 www.facebook.com/loftek.us Website:
 www.loftek.us

Accessories

1

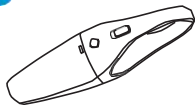


Host

2



Charger

 3



Multi-functional accessories

4



HEPA

How to use the vacuum cleaner

- 1.) Please charge the product with a charger before use. After the battery is fully charged, turn on the switch to use it.
- 2.) Different multi-functional accessories can be used on different occasions. When using any one of them, making it flat against the ground will get better cleaning results.
- 3.) There is a fixed switch for dust bins at the front and rear of the power switch. Press to dismount the front cover to clean the strainer.
- 4.) Promptly wash and dry the HEPA filter after using.

Troubleshooting

Problem	Possible reason	Possible solution
Poor cleaning and dust pick up.	<ol style="list-style-type: none"> 1. Blocked opening in tool. 2. Blocked opening in unit. 3. Filter dirty. 4. Dust collector not correctly fitted to the unit. 	<ol style="list-style-type: none"> 1. Check openings in tools for blockages. 2. Remove tool and check for blockages. 3. Clean filter. 4. Check fitting. 5. Recharge battery.
Cleaning time low.	Battery flat	Recharge battery
Unit fails to operate	Battery flat	Recharge battery

If the problem still can't be solved, please contact us via techsupport@loftek.us.

Specification

Power:	120W
Rated voltage:	8.4V
Working time after fully charged:	≥ 20mins
Weight:	1.82lb