



Honda Tail Light Installation Instructions

1. Remove your seat, open the back hatch, and remove the plastic in between the seat and the back hatch that covers your battery.
2. Unplug and push out your tail light, you may need to spray some lubricant on the plastic and use a small socket to push on the plastic tabs of the tail light in order to get it to pop out.
3. Using the 2 supplied screws, screw in your new tail light. Do not over tighten it, just tighten it enough that the OEM rubber gromets start to compress.
4. Plug the tail light into the OEM connector
5. Take the wire harness with the relay and connect the red wire (this has a round terminal on the end) to the positive side of your battery.
6. Plug the blue wire from that into the tail light
7. Connect the 8 (or 10) pin wire harness in between your OEM connectors, located on the right side, even with the back of your seat, just behind the top of the side plastic.
8. Run the white wire from there under the plastics back to the tail light, secure it with cable ties
9. Plug this white wire into the white wire from the other harness.
10. Secure everything with cable ties.
11. Put the plastic and seat back on.
12. Done!

