

User Manual


only apply to Tail Box

Thank you for purchasing, in order to better use the product. Read it first.

Unlock and lock

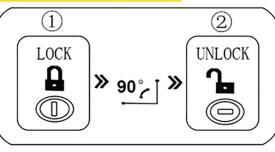


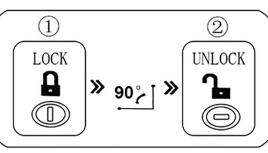


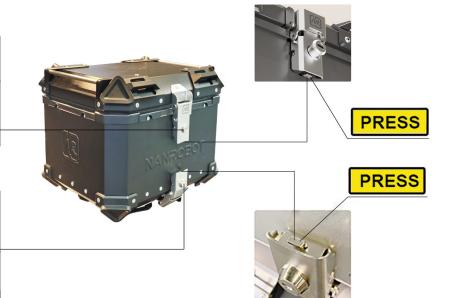


STEPS



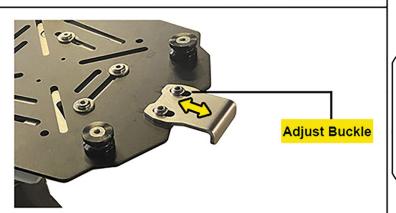

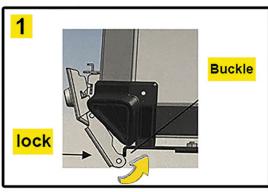

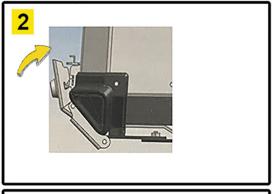



WARN


Without special instructions, please refer to download weight, speed limit

Maximum load: 10kgs(X1, X2, X4, X6)

12kgs(X3)

Speed limit: 120km/h

INSTALLS THE INSTRUCTION FOR USE

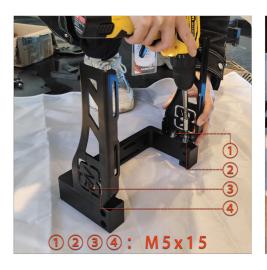

①Tighten the screws with a 5mm hex wrench,which is included in the basic tool kit.
(Screw x4、Nutsert x4、Gasket x4)



②Tighten the screws with a 6mm hex wrench. (Screw x2)



3Aligning the bracket with the center mount, and then tighten the fixing bolt with a 6mm hex wrench according to priority. (Screw x4)



(4) Tighten the screws with a 5mm hex wrench. (Screw x4)



⑤Tighten the screws with a 6mm hex wrench according to priority. (Screw x4、Nutsert x4)



6 Tighten the screws with a 6mm hex wrench according to priority. (Screw x4、Nutsert x4)



Taligning the trunk with the center mount, and then push the trunk for -ward until it snaps.



®Fasten up the buttons,as shown on the right.

