


KODA™

12" LED CEILING LIGHT WITH MOOD LIGHTING

Model: LM030082

CARE & USE INSTRUCTIONS

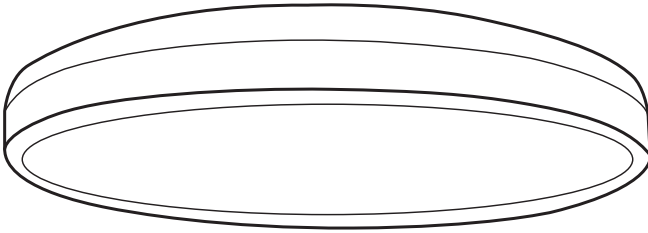

@KodaBuiltOfficial kodabuilt.com

IMPORTANT INFORMATION. PLEASE READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE.

For assistance with assembly, installation, parts or customer service,
please contact us:



info@kodabuilt.com



1-866-294-9244, Monday to Friday, 8am to 5pm Pacific Time



2975 Red Hill Ave., Suite 100, Costa Mesa, CA 92626, USA

IMPORTANT SAFETY INSTRUCTIONS AND PRODUCT INFORMATION:

WARNING - To reduce risk of fire, electric shock, or personal injury:


- This light fixture is intended to be installed utilizing a NEC compliant junction box.
- Turn OFF the main power at the fuse or circuit breaker before installing the light fixture or making any electrical connection.
- **CAUTION:** A loose wire increases the risk of fire; tighten all connections securely.
- Do not suspend any fixture by the house wires. Suspending a fixture by the house wires and wire connectors may result in the fixture falling, possibly causing personal injury and the danger of electrical shock or fire.
- It is recommended that a qualified electrician perform all wiring connections. All electrical connections must be in accordance with all national and local electrical codes.
- This light fixture is designed for use in a 110 – 120VAC, 60Hz fuse circuit.
- Failure to disconnect the power supply prior to installation may result in serious injury or death.
- LED light output is strong enough to injure human eyes. Precautions must be taken to prevent looking directly at the LEDs without installing the diffuser (cover) for more than a few seconds.
- If the light fixture is damaged, it shall be exclusively replaced by the manufacturer or the service agent or qualified person in order to avoid a hazard.
- Do not tamper with or attempt to repair the LED component or fixture. The light source is designed for this specific application and should not be serviced by untrained personnel. Contact the Koda Customer Service team if any servicing is required.
- The warnings, precautions, and instructions discussed in this manual cannot cover all possible conditions and situations that may occur. The operator must understand that common sense and caution are factors which cannot be built into this product, but must be managed by the operator.
- If using this light fixture in a damp location, this light fixture must be connected to a supply circuit that is protected by a Ground Fault Circuit Interrupter (GFCI) to reduce the risk of personal injury, electrical shock, or death.
- This device does not have a plug; rewiring is required. If you are unsure how to rewire this light, please contact a qualified electrician to install instead of attempting to rewire yourself.
- Power will still run to the light even after the LED lifespan runs out. Always shut the power from the fuse (breaker) when conducting any type of maintenance on the light.
- For indoor use only. Suitable for damp locations.

CLEANING:

- Clean the outside of the fixture with a soft, dry cloth or slightly dampened clean cloth. Never use a cleaner with chemicals, solvents, or harsh abrasives to clean the product.
- Do not spray cleaner directly onto any part of the fixture or LEDs as this may permanently damage the light or its functions.

PACKAGE CONTAINS:

Please lay out all parts and read the instructions prior to installation.

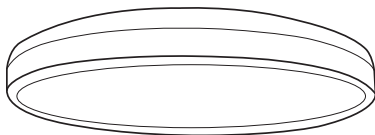

1 x 12" LED Ceiling Light

Installation Kit:

 


2 x Screws



2 x Wire Nuts

Remote Control and Batteries:



1 x Remote Control



2 x AAA Batteries

Tools Needed (not included):



#2 Phillips-Head Screwdriver

BEFORE INSTALLATION:


Carefully remove the light fixture and installation kit from the box, and check that all parts are included. Do not attempt to assemble the product if any part is missing or damaged. Please contact the Koda Customer Service team first.

The outlet box described in this manual is not provided. A standard outlet box needs to be pre-installed in the ceiling and the power supply wires running to the outlet box need to be rated 120Vac. If an outlet box does not exist, contact a qualified electrician for installation.


Turn OFF the main power at the fuse or circuit breaker before installing the light fixture or making any electrical connection. You may use a non-contact voltage tester to ensure no power running to the wires.

Warning: Failure to disconnect the power supply prior to installation may result in serious injury or death.


INSTALLATION PROCEDURE:

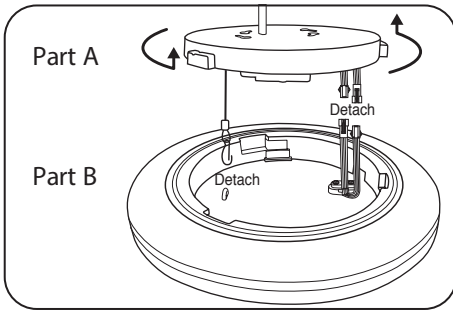

1. Rotate the top cover (Part A) counter-clockwise to detach it from the lamp body (Part B). Detach the power connector and then the support hanging wire from the lamp body part, to take out the top cover completely.

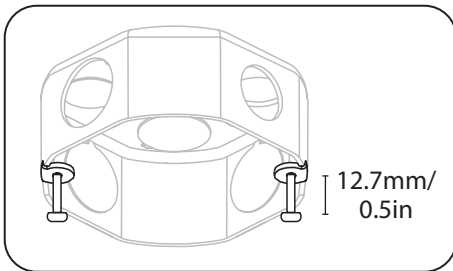

2. Install the included mounting screws into the outlet box until there is roughly a 1/2 inch between the ceiling and underside of the screw head.

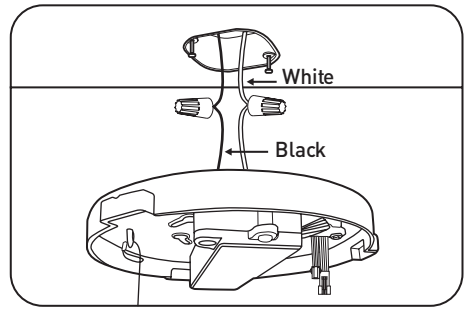


Warning: Never connect the ground wire to the hot or neutral power supply wires.


3. Make the following spliced wire connections using wire nuts:

- White (neutral) supply wire to the common/neutral wire from the outlet box (most likely white).
- Black (hot) supply wire to the hot wire from the outlet box (most likely black or colored).


Screw the wire nuts in a clockwise direction. Ensure no bare wire or wire strands are visible after making the connections.

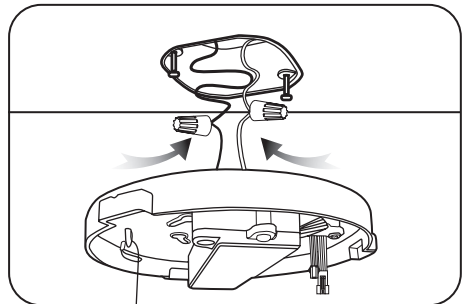


4. Carefully place all the wires and wire connections into the outlet box.

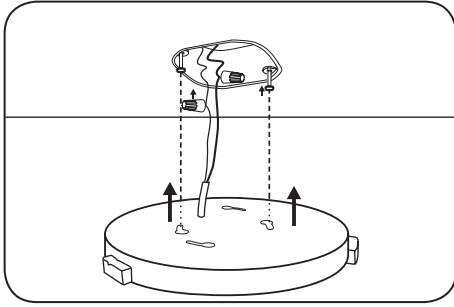


5. Place the top cover over the outlet box and feed the mounting screws through the inner keyhole slots. There are two pairs of keyhole slots. Please choose the appropriate pair keyhole slots to fit with the outlet box.

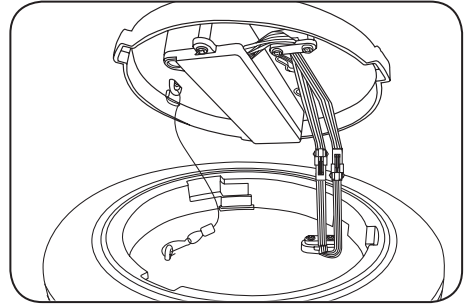


8. Connect the support hanging wire and power connectors to the lamp body, and then reattach the lamp body towards the top cover.

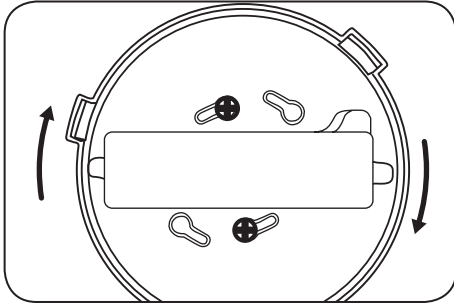


6. Rotate the top cover clockwise so that the mounting screws slide into the narrow ends of the keyhole slots.

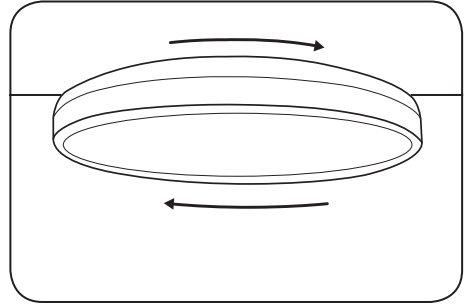

9. Rotate the lamp body clockwise until you hear a 'click' sound, indicating the light is secured in place.

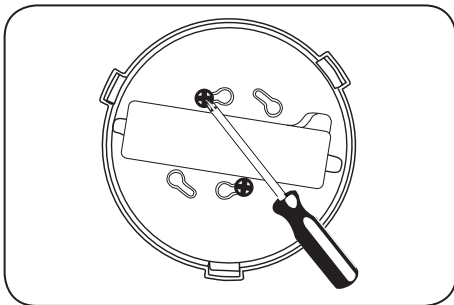

7. Tighten the mounting screws with the screwdriver to ensure the top cover is secured against the ceiling.

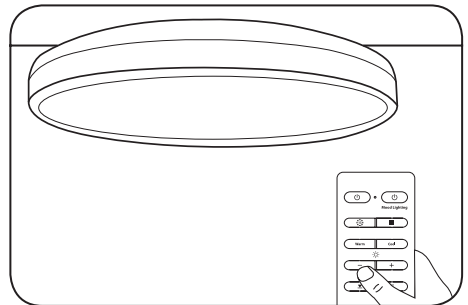

10. When the installation is finished, you can turn on the main power switch and the light will turn on. If the light does not turn on, please refer to the Troubleshooting section on page 7 of this manual.


WIRELESS REMOTE:

Before use, please open the switch cover on the back of the remote, and insert two AAA batteries.


When using the remote, you must point the remote directly at the light to ensure the signals can be sent to the light. When the light receives the remote signal, the light will blink once as a visual confirmation. When the light receives the remote signal of either Ambiance Light Sensor OFF or Motion Sensor OFF, the light will blink twice as a visual confirmation.

Note: This remote uses infrared (IR) to send commands to the LED Ceiling Light. It is possible to control multiple LED Ceiling Lights from one remote as long as the lights are within line-of-sight of the remote to receive commands.

REMOTE SETTINGS:

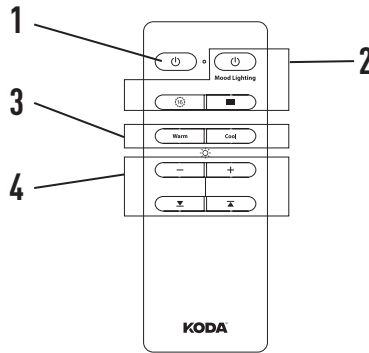



1. Power Button

Press  to turn the light on or off.

2. Mood Lighting

 - Turn Mood Lighting on or off.

 - Single color mode, and you can choose the color by pressing the button.

 - Choose from various modes: Glow, Blink, Fade, and Prism. Press the button to go through the different modes available until you find your desired mode.

3. Light Color

You can adjust the light color from 2700K to 5000K by pressing the **Warm** and **Cool** buttons continuously. Press **Warm** for a warmer color and press **Cool** for a cooler color. You may also long-press **Warm** to reach 2700K warm white color gradually, or long-press **Cool** to reach 5000K cool white color gradually.

4. Brightness

You can adjust the brightness from 10% to 100% brightness by pressing **+** continuously. Press **+** to brighten, and press **-** to dim. You may also press **▲** to reach 100% brightness instantly or press **▼** to reach 10% brightness instantly.

Product Specifications:


- Operating Voltage: 120 Vac, 60 Hz
- Wattage: 16.5 W (Main Light); 5 W (Mood Lighting)
- Light Output: 1500 lumens (Main Light)
- Color Temperature: 2700K - 5000K (Main Light)
- LED Life Cycles: up to 50,000 hours*
- Color Accuracy / CRI: 80 (Main Light)
- Operating Temperature: 0°C to 40°C / 32°F to 104°F

*50,000-hour lifespan is for the Main Light LED only. Lifespan depends on operating temperature, environmental conditions, etc.



Intertek

This product is ETL/cETL Listed

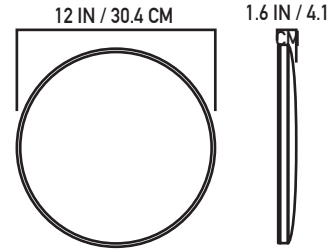

Troubleshooting:

Problem	Possible Cause	Solution
Light does not illuminate. Light does not turn on.	Power is off.	Ensure the power supply and circuit breaker are both set to the on position.
	Faulty wire connection.	Check wiring to ensure all wires are correctly in place and secured.
	Faulty light switch.	Test and/or replace switch.
	End of life for the integrated LED.	Replace the light.
Fuse blows or circuit breaker trips when light is illuminated.	Turn off the circuit breaker supplying power to the light fixture. Check the wires and ensure they are properly connected and secured in place. Turn the circuit breaker back on and test the light. If the wiring looked correct and the light still isn't functioning, please contact a qualified electrician to check the condition of your wires.	Turn power to the light off from the breaker. Check the wires to ensure the wires were properly connected. If everything looks correct, contact a qualified electrician to check your wires.
My junction box does not have a ground wire.	The junction box is already grounded.	Look for a ground screw inside the junction box. Wrap the ground wire from the light to that ground screw.
Light settings cannot be changed from the remote.	Batteries not inserted correctly.	Open the battery compartment cover and confirm the batteries were inserted correctly. Replace with new battery if needed.
	Batteries are out.	Replace with two new AAA batteries.
	Remote control is out of range.	Move closer to the LED Ceiling Light to select changes from the remote.
Buzzing noise coming from the LED Ceiling Light.	The LED Ceiling Light is connected to a dimmer switch.	This LED Ceiling Light is not compatible with dimmer switches. Turn the dimmer switch to 100% to see if the buzzing goes away. If the buzzing does not go away, you can continue to use the LED Ceiling Light or you will need to remove as the product is not compatible for your setup. If the LED Ceiling Light is not connected to a dimmer switch, please contact customer support.

Warranty:

This Koda product carries a 5-year warranty against defects in workmanship and materials subject to the conditions and additional warranty information available at:

www.kodabuilt.com/warranty

DISCLAIMER OF WARRANTIES, INCLUDING WARRANTY OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR PARTICULAR PURPOSE: EXCEPT AS SPECIFICALLY SET FORTH HEREIN, NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, IS MADE AS TO THE LED CEILING LIGHT. KODA AND/OR ITS AFFILIATES EXPRESSLY DISCLAIMS, WITHOUT LIMITATION, ANY STATUTORY WARRANTIES AND ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

FCC / IC Compliance Statement:

12" LED Ceiling Light

Model: LM030082

Responsible Party:

Koda

Address: 2975 Red Hill Ave., Ste. 100, Costa Mesa, CA 92626, USA

Tel: 1-866-294-9244

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-005(B) / NMB-005(B)

MADE IN CHINA

 Have a comment or question? Email us at info@kodabuilt.com or visit us online at www.KodaBuilt.com

KODA™

A Horizon Brands Company

2975 Red Hill Ave., Ste. 100, Costa Mesa, CA 92626, USA | Tel: 1-866-294-9244

© 2021 Koda. All rights reserved.

ML-030082_V1