



M

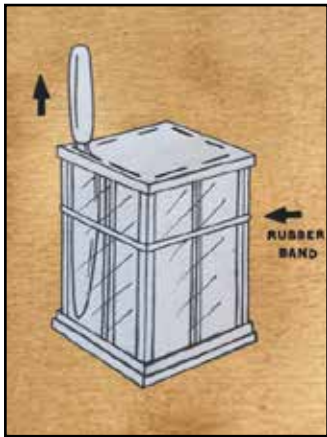


Remove all the blades from the block.
Use a rubber band to fasten the four glasses.

M

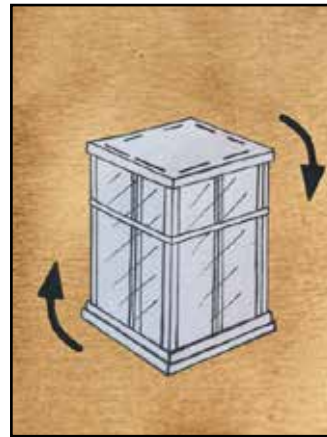


Turn upside down the wooden block.

M

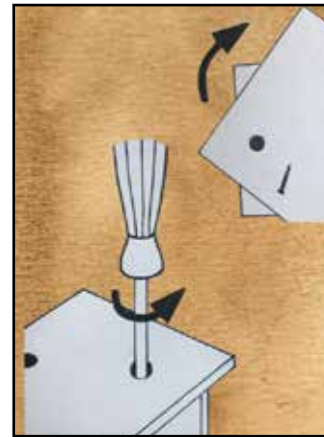

Place the bottom of the block accordingly the screw beneath and loose the screw. Turn the bottom to the next screw repeating the actions until the four screws are off.

M

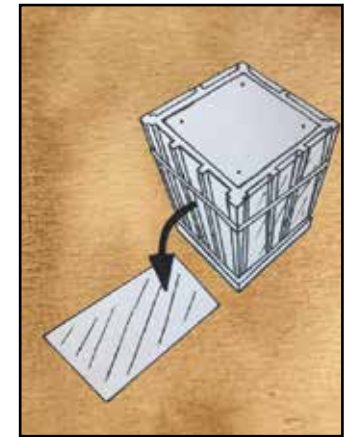

In order to clean the panels, carefully remove the bottom and the plate crystals.
Reverse procedure to re-install the knife set.