



LM

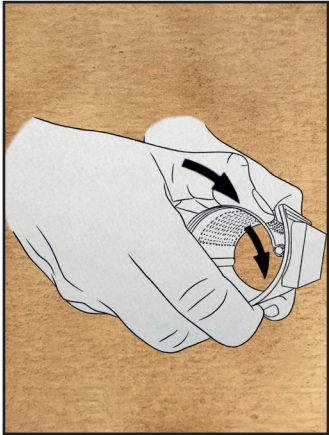


Press the grate with both hands to remove it.

LM

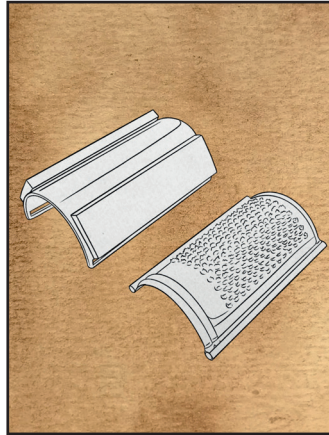


Remove the grater from the handle in order to wash it in the dishwasher.

LM

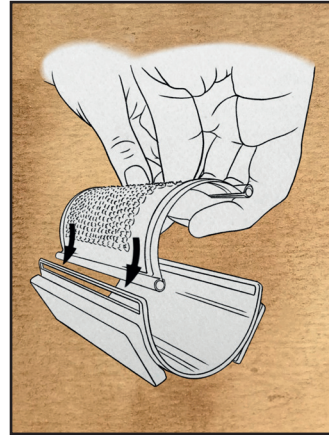

After cleaning, insert one side of the grater into the handle.

LM

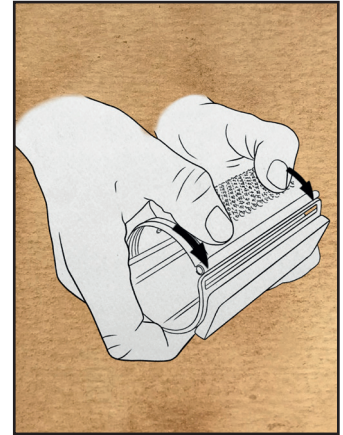

Then, press the grater on the other side in order to get it stuck.