
SEAVIEW// ELEVATE YOUR ELECTRONICS

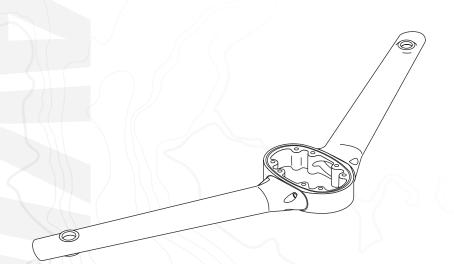

INSTALLATION INSTRUCTIONS


For Seaview Spreader Kits:

SP1MOD, SP1MODBLK SP2MOD, SP2MODBLK

Refer to website for most up to date instructions and videos.

WWW.SEAVIEWGLOBAL.COM

PARTS INCLUDED

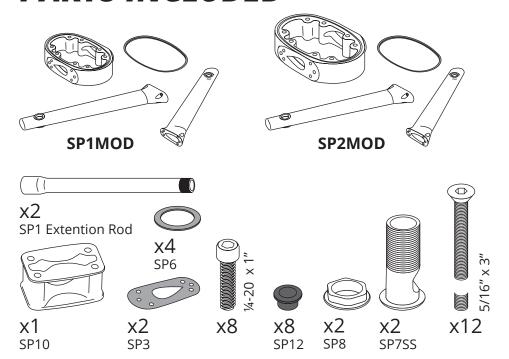

TOOLS NEEDED




1

Apply the rubber grommet onto the threaded adapter and then insert through the spreader.

Apply another rubber grommet and plastic nut on the threaded adapter.


Note:

Apply Tef-Gel around the inside of each hole where the SP7SS passes through

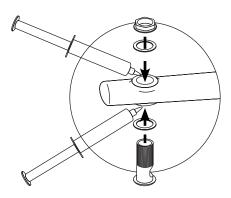


2

If you are using a satellite dome the plastic extension rod is not needed. Apply marine adhesive sealant to the threads of the adapter and screw on the GPS unit. Route the cables through the spreader.

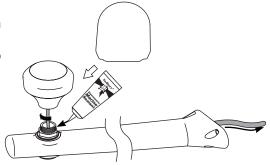


3


If you are using a closed dome radar use the provided plastic extion rods. Apply marine adhesive sealant to the threads of the adapter and screw on the GPS unit. Route the cables through the spreader.

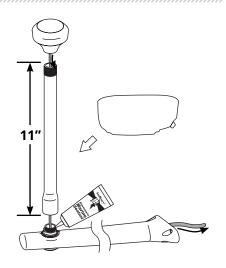


If your fiberglass antenna is less then 4' tall then you are ok.

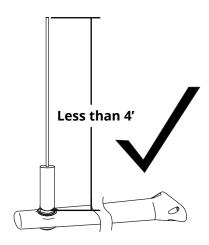

Do <u>NOT</u> use 4' or taller fiberglass antennas with Seaview Spreader Kits. Please call 800-523-7558.

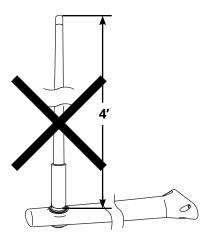


Place the rubber gaskets onto the sides of the center spreader body. Make sure that the six mounting holes line up.

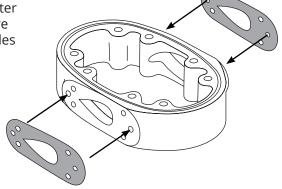




Route the cables through the center spreader body.

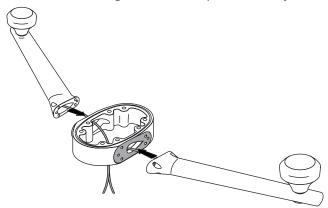



Insert the eight black plastic shoulder washers into the spreader bolt holes.


Using the eight 1/4-20 x 1" bolts tighten the spreaders with an allen wrench.

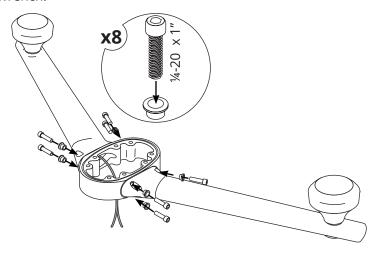

9

Place the rubber gasket in the groove on the top of the Seaview mount.


Then place the Spreader Kit on top of the mount assembly.

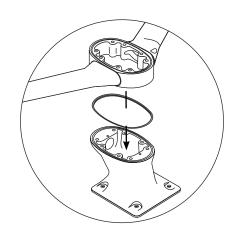


10

Place the rubber gasket that comes with the Seaview Top Plate Kit into the groove on the top of the Spreader Kit center body.

Bolt the assembly together using the eight 5/16 x 3" bolts.

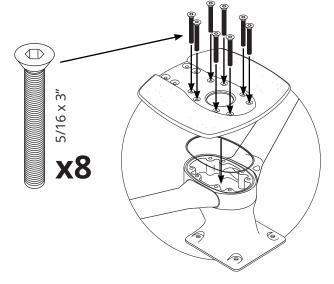


If you are using an optional Seaview
Lightbar wrap the rubber bushing around the end of the lightbar.

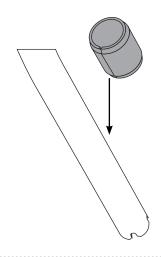


Place the white plastic adapter piece ontop of the rubber bushing.


Place the stainless steel bracket onto the bottom of the rubber bushing.

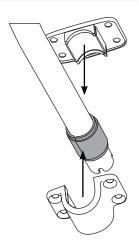

Place the white plastic spacer ontop of the adapter.

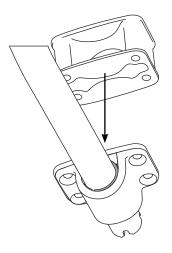


Insert the lightbar into the back of the Seaview mount.

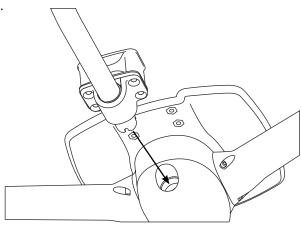

15

Bolt the assembly together with four 5/16 x 3" bolts.

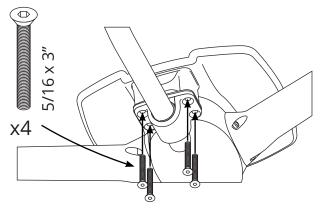


NOTE: Use 4 each of the 5/16" x 3" bolts when installing a light bar if your top plate is 3/4" or thicker.

OPTIONAL ACCESSORIES


Call 800-655-7922 or visit www.seaviewglobal.com for available accessories.

SPREADER FLOOD LIGHT KIT

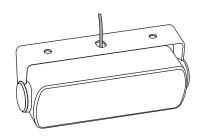


SPLTLED Flood Light Kit for Tapered Mast spreaders.

CABLE SEALS

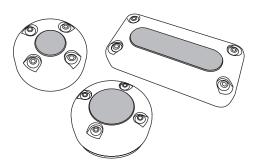


Seaview Cable Glands provide waterproof cable routing.

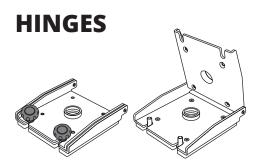

Seaview Hinge Adapters fold in any direction necessary for added height clearance.

WEDGES

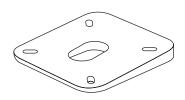


Compensates for plane angle. Available in 2, 4 or 6 degree wedges.


OPTIONAL ACCESSORIES

Call 800-655-7922 or visit www.seaviewglobal.com for available accessories.

LIGHT BARS

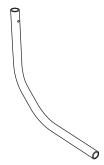


LTBR Fits closed dome radars.

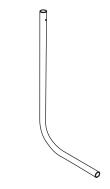


LTBS Fits 20" or smaller satdomes.

LIGHT BAR TOPS

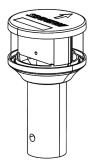

LTBLED12 (White LED nav light) LTBLED12BLK (Black LED nav light)

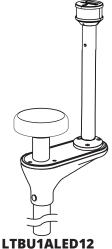

Light bar top with Seaview LED light on 12" post and 1-14 threads for GPS.

THIS PAGE INTENTIONALLY LEFT BLANK.



SEAVIEW//

Tel: 800-655-7922 www.seaviewglobal.com

EUROPEAN OFFICE

Tel: +33 4 94 53 27 70 www.seaviewprogress.com