



**Notes:**

- 1- All dimension units are inches (mm).
- 2- All dimension tolerances are  $\pm 0.12"$  ( $\pm 3$  mm)
- 3- Leave minimum 40" (1016 mm) of space around the machine to provide free circulation and access of air.
- 4- Forklift caps to be installed once machine is in final position.
- 5- A foundation or frame which support the weight of the package is required to provide rigidity.
- 6- Also the compressor frame should be flatted and secured between the foundation and the frame.
- 7- Piping loads should not be on the external connections.

- \* DOORS FULLY OPEN
- \*\* HEAT RECOVERY COOLED SYSTEM(OPTIONAL)
- \*\*\* WATER COOLED SYSTEM(OPTIONAL)

MODELS	TOTAL COOLING AIR FLOW RATE(cfm)	
HVD 18 HDD 22-HVD 22	HVD 18	3029
	HDD 22-HVD 22	3581

MODELS	CENTER OF MASS		WEIGHT (lbs)
HDD 22	A	26.71	1400
	B	14.09	
	H	22.51	
HVD18	A	32.12	1256
	B	13.93	
	H	21.53	
HVD22	A	27.10	1345
	B	14.09	
	H	22.51	

