


Note: This product must be installed by a Licensed Plumber. This is a general installation guide; factors may alter the installation method.

## Alisa Basin/Bath Spout

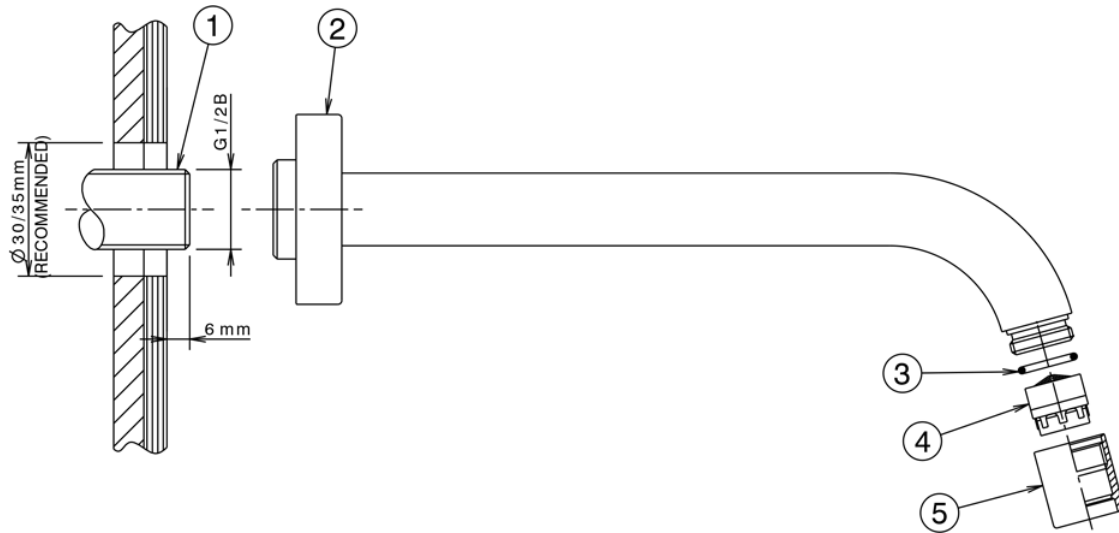

### Before Installation

Flush through the pipe work to ensure removal of debris.

Turn off the water mains and close any isolating valves.

Ensure the mounting surface is clean.

### Installation

Check the threaded nipple (1) is the correct length. Cut to length if required ensuring the face is square. Apply thread tape to the thread.

Screw the wall outlet (2) onto the threaded nipple (1) and position as required. Do not over-tighten.

### Replacing Aerator Insert

Carefully remove aerator housing (5) from wall outlet (2), taking care not to damage the decorative finish.

Remove seal (3) and aerator insert (4) from aerator housing (5). Check that aerator housing is clean.

Fit new aerator insert (4) into aerator housing (5) followed by seal (3) then screw assembly onto wall outlet (2) and tighten securely.

### Turning on the supply

Turn on the water supply and check for leaks.

- 1 Threaded Nipple
- 2 Wall Outlet
- 3 Seal
- 4 Aerator Insert
- 5 Aerator Housing

Hot and cold water inlet pressures should be equal.

Inlet pressure range: 150 – 1000 kPa

Maximum hot water temperature = 80°C



Always use a soft, damp cloth with mild detergent to wipe your tap clean. Avoid using abrasive detergents, cleaning powders, scouring pads, strong disinfectants, cleaners containing hydrochloric acid or phosphoric acid as this will cause damage to the finish.