

Note: This product must be installed by a Licensed Plumber. This is a general installation guide – factors may alter the installation method.

## Elite X Wall Sink Spout

### Before Installation

Flush through the pipe work to ensure removal of debris.

Turn off the water mains and close any isolating valves.

Ensure the mounting surface is clean.

### Installation Wall Spout

Check the threaded nipple (10) is the correct length. Cut to length if required, ensuring end face is square. Apply thread tape to the thread.

Screw wall base (11) onto threaded nipple (10) and position so the outlet tube (15) is vertically up and the base (11) abuts the wall tile/face. (Do not overtighten).


### Removing Aerator Insert

Carefully remove aerator housing (7) from outlet (15). Remove seal (19) and aerator insert (18) from aerator housing. Check Aerator housing is clean.

Fit aerator insert (18) into aerator housing (17) followed by seal (19) then screw assembly into outlet (15) and tighten securely.

### Turning on the supply

Turn on the water supply and check for leaks.

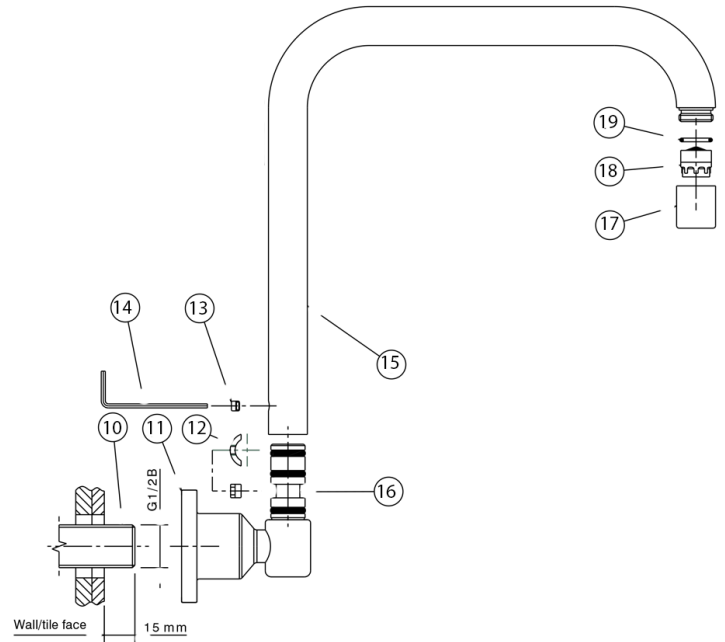

- 10 Threaded Nipple
- 11 Base
- 12 Screw
- 13 Screw
- 14 Allen Key
- 15 Outlet
- 16 Spigot
- 17 Aerator Housing
- 18 Aerator Insert
- 19 Seal



Always use a soft, damp cloth with mild detergent to wipe your tap clean. Avoid using abrasive detergents, cleaning powders, scouring pads, strong disinfectants, cleaners containing hydrochloric acid or phosphoric acid as this will cause damage to the finish.