



15

max. 35 mm

The tailpiece must not extend more than 35 mm from the backplate.

16

Break the tailpiece using two pliers.

17

Find Danalock and the tailpiece adaptor in the box.

18

The tailpiece adapter needs to be inserted in the back of the Danalock.

19

Press until it clicks.

20

Fit the Danalock over the backplate. Ensure that the tailpiece hits the adapter.

21

Align the marks on the backplate and baseplate.

22

Turn clockwise to fasten.

Click!

23

Remove the plastic to activate batteries.

24

Download the Danalock app and leave the door open.

25

Create a user profile by pressing the blue ring. Use this profile each time you sign into the app.

If you have a user profile use the green ring.

Next you need to press "Menu" in the top right corner, and the press "Add lock". A guide will now lead you through the installation and configuration.

26

If you need to dismount the Danalock insert a pen tip into the hole at the top inner edge of the lock and press while turning the lock counter-clockwise until it releases.

This doesn't reset the lock, but it may need to be re-calibrated if fastened to your door again.

