



# **NORMANDY AUTO INSTRUCTION MANUAL**

# CONTENTS

Before using this product, please consult the instruction manual to ensure proper use.

## Products Brief Instruction:

1. Product Brief Instruction .....	3
2. Product Specification .....	3
3. Product Frame .....	3
4. Main Properties and Characteristics .....	4

## Installation

1. Installing Your Roof Tent .....	4
2. Setting up Your Roof Tent .....	6
3. Tips & Tricks .....	7

Important Information .....	8
-----------------------------	---

## Products Brief Instruction

This semi auto roof top tent could be set up easily by 2 persons, set up and fold down in seconds with patented gas strut-assisted opening mechanism. Enjoy the outdoor life in whatever weather !

### Products Specification

- A. The whole frame uses aluminium. alloy, parts of joints are use strong nylon.
- B. Double layer silver coating treatment for outer tent material to offer better heat insulation and waterproof.
- C. With good quality mattress provides comfortable sleep experience
- D. Telescopic aluminum alloy ladder is removable and endure 150kg

Fly: 210D rip-stop polyester PU 3000mm with 3 layer silver coating

Inner: 190G rip-stop polycotton PU 2000mm

Floor: 210D polyoxford PU 3000mm

Frame: Alu. Alloy

Cover: 600g heavy duty PVC floor

### Structure:

Size:1

Inner tent: L200 x W120 x H70.5/112.5cm

Outer tent: L217 x W 134 x H95/134cm

Packing Size: 225 x 30 x 142cm

N.W.: 46.5 kg (including ladder)

G.W.: 60.3 kg

Size:2

Inner tent: L200 x W140 x H75/120cm


Outer tent: L217 x W 154 x H95/143cm

Packing Size: 225 x 30 x 162cm

N.W.: 56 kg (including ladder)

G.W.: 70 kg

## Product Frame

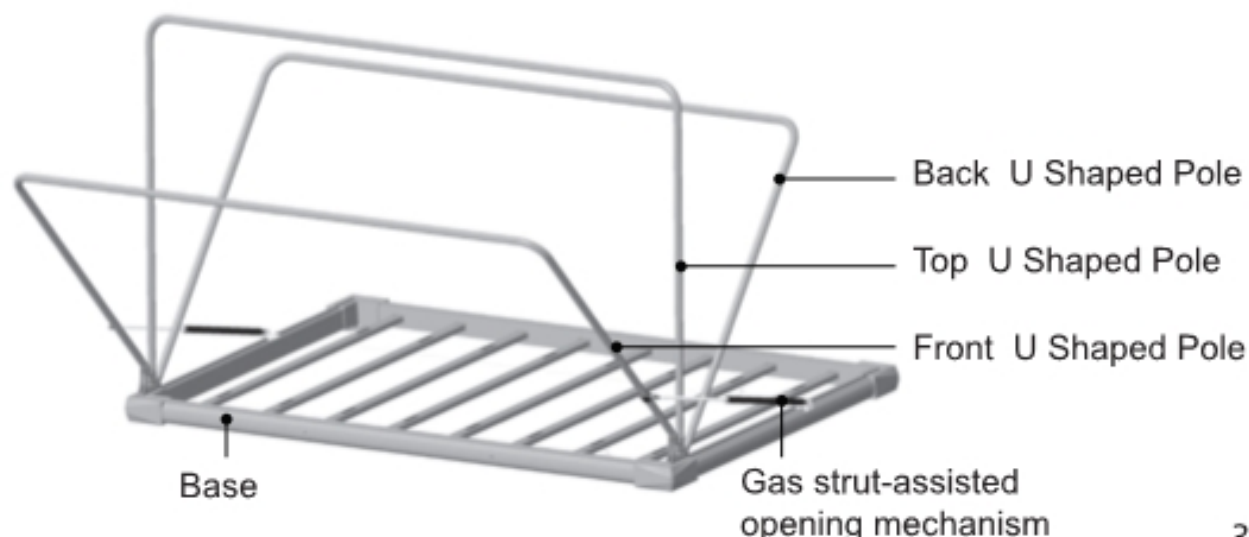

## Main Properties and Characteristics :

- 1) Pull down the strap to fold down the roof tent.
- 2) Release the strap, the roof tent will be set up by gas spring.

## Installation

### 1. Installing your roof tent

A. You must have roof racks correctly fitted to your vehicle, following the rack manufacturer's instructions , before installing the Roof Top tent.

B. Size the Roof Top tent beside the vehicle ensuring it is center to the racks and that it will distribute the weight over the vehicles the weight evenly over the vehicle's roof.

C. Stand back and double check that the tent is centered and that all doors which open towards the sky can still operate without risk of damage to the vehicle.






D. Slide the M8X50 hexagon bolt into the rails from both sides ensuring you have positioned 8 in total(see picture 1), replace the plastic covers of your roof racks(see picture 2). Fix the U-shape stator.



Picture 1



Picture 2

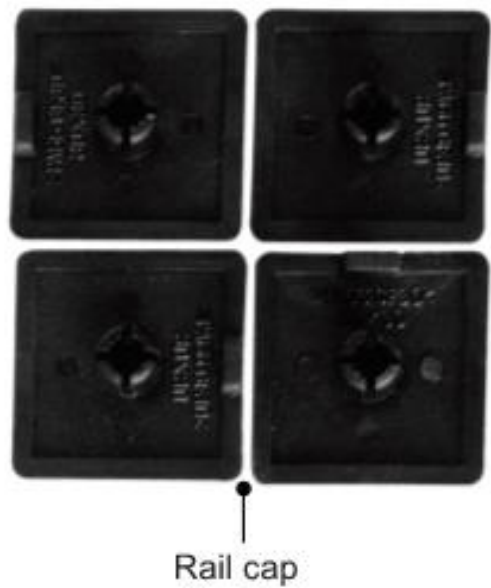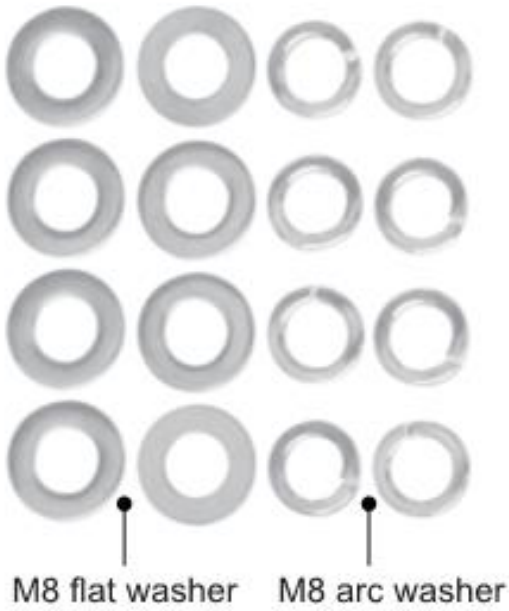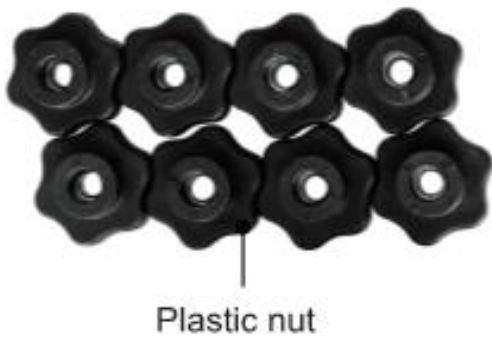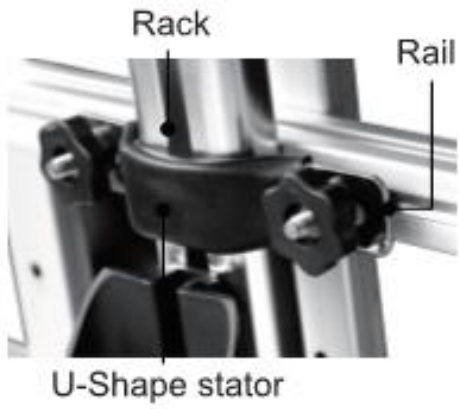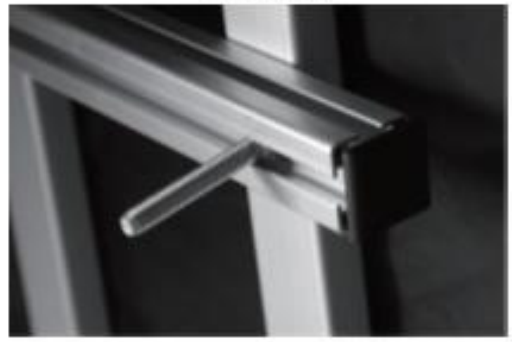

## 2. Setting Up Your Roof Top tent :



① Remove the tent PVC cover .



② Release the adjustable rubber hook from the fixed button



③ Then the roof tent open automatically.



④ Close the roof tent by pulling the webbing.



⑤ Keep pulling the webbing till you get the adjustable rubber hook.



⑥ Fix the rubber hook onto the fixed button and close the roof tent cover.

### 3. Tips & Tricks

- ◆ Always ensure the tent is dry before packing away.
- ◆ Keep the rail of the base clean and dry.

Ensure ladder is always locked into place and angled away from vehicle  
Make sure the tent is packed down completely and secured before driving.

## Important Information

1. When packing away the tent, ensure there is no other objects in the tent (like sleeping bag, pillow).
2. Don't put heavy objects on the tent when the tent is closed.
3. Clean and wipe the tent with wet rag instead of machine washing or hand washing (but the cover of the mattress is washable).
4. Check the connecting points of the tents to the car; ensure all points are probably locked.
5. Please don't jump or other damaging behavior inside the tent or the car tent may probably get damaged due to uneven force.
6. Always keep the tent close when you are driving.
7. If the weather is very windy, please do not open the tent.
8. If there is abnormal noise when setting up or folding down the tent, please check the rail and all connection joints right away.

## Problem and solution

### If the tent stops working

- A. Check if the fabric is dragged into the supporting pole.
- B. Check if the gas-spring is leaking air or not, if yes, replace the gas spring right away. The replace job is quite simple (releasing the both end of the gas spring with the screwdriver.) like following photo.



**Tools:**

Accessory pack



6xL100 cross screwdriver



8-10 open spanner



6mm L shape hexagonal wrench



5mm L shape hexagonal wrench



M6x30mm  
hexagon socket  
head cap screw



M6  
T shape  
slider block



M6  
stainless steel  
flat washer



M6  
spring washer