



The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details.

A quality product of



CONCEPCION MIDEA INC.

20140107



For more information, please visit our website www.midea.com.ph

User's Manual

Single Tub Washing Machine

Before using your product, please read this manual carefully and keep it for future reference.






TABLE OF CONTENTS


Safety Precautions	1
Attention to Installation	2
Installation Areas	3
Preparation Instructions	3
Preparation Before Use	3
Washing Guide	3
Parts Identification	4
Unit	4
Control Panel	4
Accessories	4
Quick Start	4
Usage Method	5
Washing	5
Rinsing	5
Maintenance	5
Cabinet	5
Troubleshooting	6
Technical Specifications	6

SAFETY PRECAUTIONS

Safety Precautions

Observe the following items in order to prevent injuries and damages to the machine.

	See notes below.
	This sign means Prohibited. The picture of the specific item that is prohibited is shown inside the icon.
	This sign means Mandatory Execution. The picture of the specific item that needs to be done is shown inside the graphics.

 This appliance is not intended for use by individuals (including children) with reduced physical, sensory or mental capabilities, or those lacking experience and knowledge, unless they are under the supervision and/or given instruction concerning the use of the appliance by a person responsible for their safety.

This appliance is for indoor use only.

Children should be supervised to ensure that they do not play with the appliance.

Please use the new hose provided with the machine, old hoses should not be reused.

If power cord is damaged, only the manufacturer, service agent or qualified person should repair it, in order to avoid hazard.

 
The openings must not be obstructed with a carpet.

Make sure that the washing machine is placed on a flat and stable floor, and distribute the clothes evenly.


Do not wash waterproof clothes or clothes that float easily to avoid abnormal vibration or damage to the clothes.

Warning


Do not dismantle the machine without authorization.

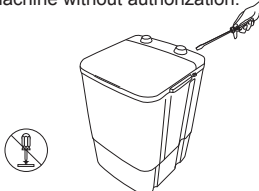

 Do not install the machine in damp or rainy environment to avoid electric shock, fire, machine failure or deformation.

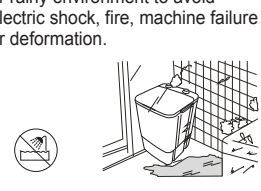


 Do not place flammable materials such as candles, mosquito incense, cigarettes and heat sources on the machine.

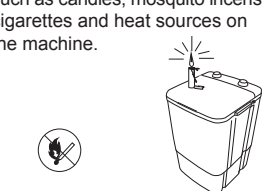


INSTALLATION

 
Do not spray water directly onto the machine.

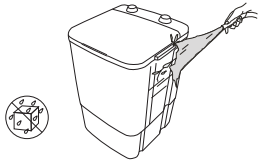

 
Do not place heavy objects on the washing machine.

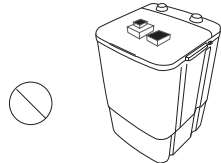

 Do not wash clothes that are stained with kerosene, petrol, alcohol, and other flammable substance.

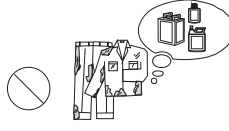

 
Make sure that the water inlet hose is connected to the water inlet.




Do not exceed the maximum water level to avoid water overflow and machine failure.



 
To avoid electric shock resulting from electric leakage please connect grounding wire properly.

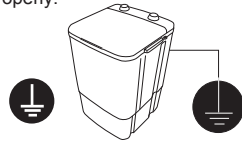

 
Do not let children climb on or play near the machine to avoid accidents.



 When washing with warm water, water temperature should not exceed 50°C.

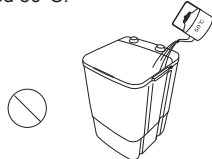

 
Do not wash raincoats and similar heavy and thick items.

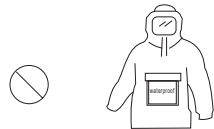


Regularly wipe off dirt and dust from the power plug to prevent poor contact with power supply.



 
Do not put hands inside the tub when the machine is operating.

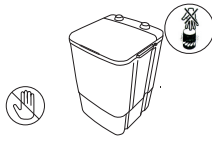


Do not replace power cord by yourself.

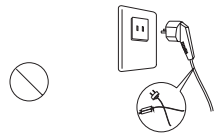 

 Do not damage the power cord and plug to avoid electric shock, short circuit or fire.

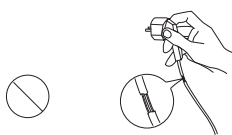

 Securely plug the machine into the correct power source.

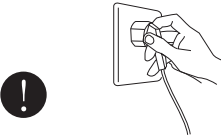

Do not pull the cord when unplugging from the power supply.



INSTALLATION

Installation Areas

In order to avoid electrical failure, discoloration and deformation, do not install the machine in the following places:

• Locations exposed to direct sunlight



• Locations exposed to rain and damp areas



• Locations with uneven or unstable ground



PREPARATION BEFORE USE

- Plug to power supply and connect the water inlet hose to faucet.
- Lay down the drain hose and connect it to the sewer.
- Make sure that there are no objects such as coins, hairpins, mud or sand in the pockets.
- Strings should be knotted to prevent it from tangling.
- Clothes may be sorted for washing according to the texture, dirt degree and/or color.
- For small pieces (e.g., stockings) or fluffy clothes, put them in a nylon net for washing.

Insert one end of the water inlet hose into the water inlet to let water flow into the wash tub.



Washing Guide

	Socks/Underwear	Undershirt	T-shirt	Blouse/Polo	Bath Towel	Pajama sets/Sweater/sheets	Pants (denims)/Work clothes set
Laundry Type							
Approx. weight per pc.	50g	90g	150g	200g	300g	500g	800g


Fabric Type	Laundry Capacity (kg)	Water Level	Wash Selector	Wash Time (minutes)
Synthetics, silk, delicate fabric	up to 3.5	Low	Normal	3
	3.5 - 6	Mid		3 - 5
Cotton or Linen	up to 5	Mid	Normal	7
	5 - 6	High		7 - 10
Heavily soiled	up to 5	Mid	Heavy	10
	5 - 6	High		10 - 15

* For reference only. Clothes weight is dependent on size, fabric type, material, thickness, etc.

PARTS IDENTIFICATION

Unit

 Control Panel

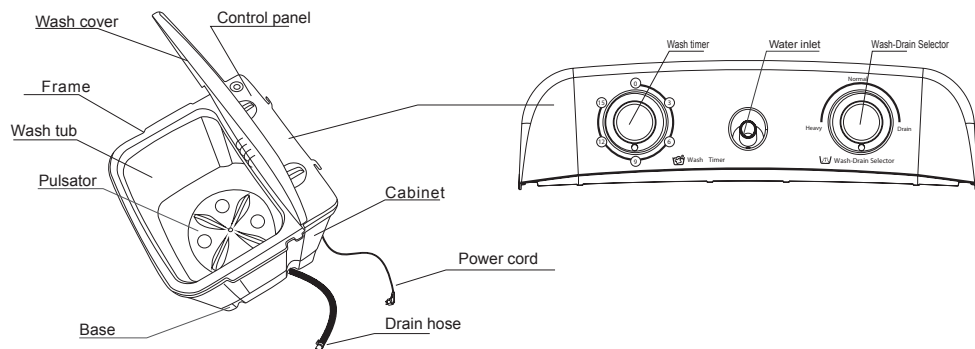


* For reference only; actual parts may vary depending on the model.

- Water inlet: to supply water in the wash tub
- Wash timer: to select appropriate washing time
- Wash-Drain selector: To switch from washing to draining and vice versa.
 - Normal: For light to moderately soiled clothes, light wash load (lesser clothes quantity and/or lighter fabrics)
 - Heavy: For heavily soiled clothes, moderate to heavy washload (mid up to full load and/or thick fabrics)

Accessories



 
Quick Start

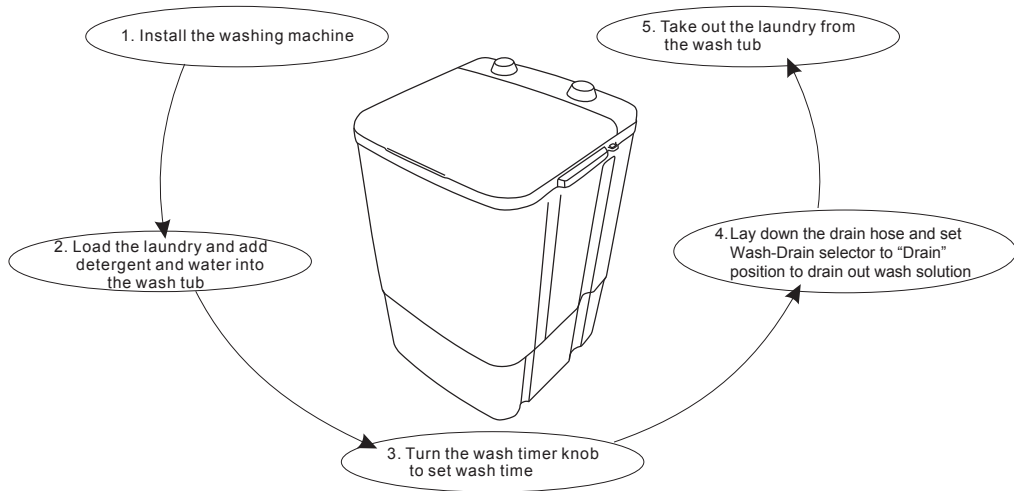

USAGE METHOD

Washing

 1. Connect the water inlet hose into the water inlet.
2. Lay the drain hose on the ground, close to the sewer.
3. Put the laundry into the wash tub, add detergent and water into the wash tub. When water level reaches half of the desired level, turn off the faucet and let the laundry soak in the solution for a couple of minutes after which, fill up to the desired water level.
4. Set the desired wash time using the wash timer knob.
5. When washing is finished, set the Wash-Drain selector to "DRAIN" position and drain the wash tub.

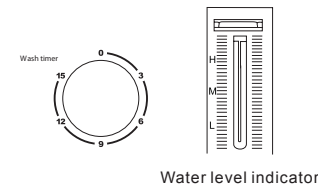

Rinsing

1. After draining the wash solution, set the Wash-Drain selector to normal or heavy position and then fill the tub up to the appropriate water level.
2. Turn the Wash Timer knob to the desired time for rinsing (about 3 to 5 minutes)
3. Drain out the rinse water in the tub.
4. Repeat the process until the appearance of the water becomes clear.

MAINTENANCE

Cabinet maintenance

After using the washing machine, wipe moisture and stain with a piece of soft cloth. To avoid damage to the surface, do not use corrosive or volatile chemicals.



⚠ After using the washing machine, never forget to disconnect the power plug.

Notes

The washing machine uses alternating current with rated voltage and frequency. When voltage fluctuates between -10% and 10% of the rated voltage, the machine can work normally. Connection mode of the power cord of this machine is Y-shaped connection. Users should not detach or reconnect the wires by themselves. If this part needs to be repaired, please contact the designated service center.

- The maximum gradient of the supporting surface for the machine should not exceed 2°.
- Do not tear down electrical wires and components in the machine by yourself.
- There are holes on the base for ventilation. These holes should not be blocked by foreign objects (carpets, etc.).
- Never connect the grounding wire with the live wire, or it may lead to an electric shock.
- If the power cord is damaged, it must be replaced by a qualified person to avoid hazard.

MAINTENANCE

Troubleshooting

If the following symptoms occur, please disconnect the power plug and perform the following:

Symptom	Action
The washing machine does not work.	<ul style="list-style-type: none">• Check that the power supply is in good condition.• Check that the power plug is inserted properly.• Check that the wash timer knob is not in the "0" position.
The drain hose does not work.	<ul style="list-style-type: none">• Check that the drain hose is not laid too high.• Check that the drain hose is not blocked by foreign matter.• Check if Wash-Drain selector is set to "Drain" position.
There is abnormal noise during washing.	<ul style="list-style-type: none">• Check that there are no coins or any other foreign objects dropped into the wash tub.

TECHNICAL SPECIFICATIONS

	Wash
Capacity (dry clothes weight)	6.0kg
Power Supply	220V/60Hz
Input Power	320W
Maximum Time	15 minutes
Overall dimension	474x436x827(mm)
Net weight	11 kg