

Cordless/Rechargeable Chopper with USB Cord

make delicious snacks, drinks, smoothies, appetizers, prep food and more at home or on-the-go

Includes Rechargeable • Main Body cordless travel size goes • Glass Bowl Blends, • Stainless Steel Blade Chops and USB Charging Cord whips with 4 attachments Chisine Cordless recharges via USB

Make delicious smoothies, drinks, whip cream, salsa and more with the cordless rechargeable chopper via USB. Toss in your favorite ingredients, place the main body on top of the bowl and press power to chop or blend in seconds with the stainless steel blade attachment. Components come apart for easy clean up. Recharge via any USB power source with the included charging cord. Perfect for active lifestyles and travel use while keeping your nutrition on target.

PRODUCT INFO

 Green Item No.
 MCG20GR

 UPC
 737770204702

 White Item No.
 MCW30WH

 UPC
 737770309407

Product Name Cordless/Rechargeable Chopper with USB Cord

www.eurocuisine.net

Euro-Cuisine, Inc • P.O. Box 351208 • Los Angeles, CA 90035 USA • (562) 659-7810

The Euro Cuisine name and logo are registered trademarks of Euro-Cuisine, Inc. ©2022 All rights reserved.

SHIPPING INFO

Master Carton

12 pcs