


caddytek

The Explorer V2

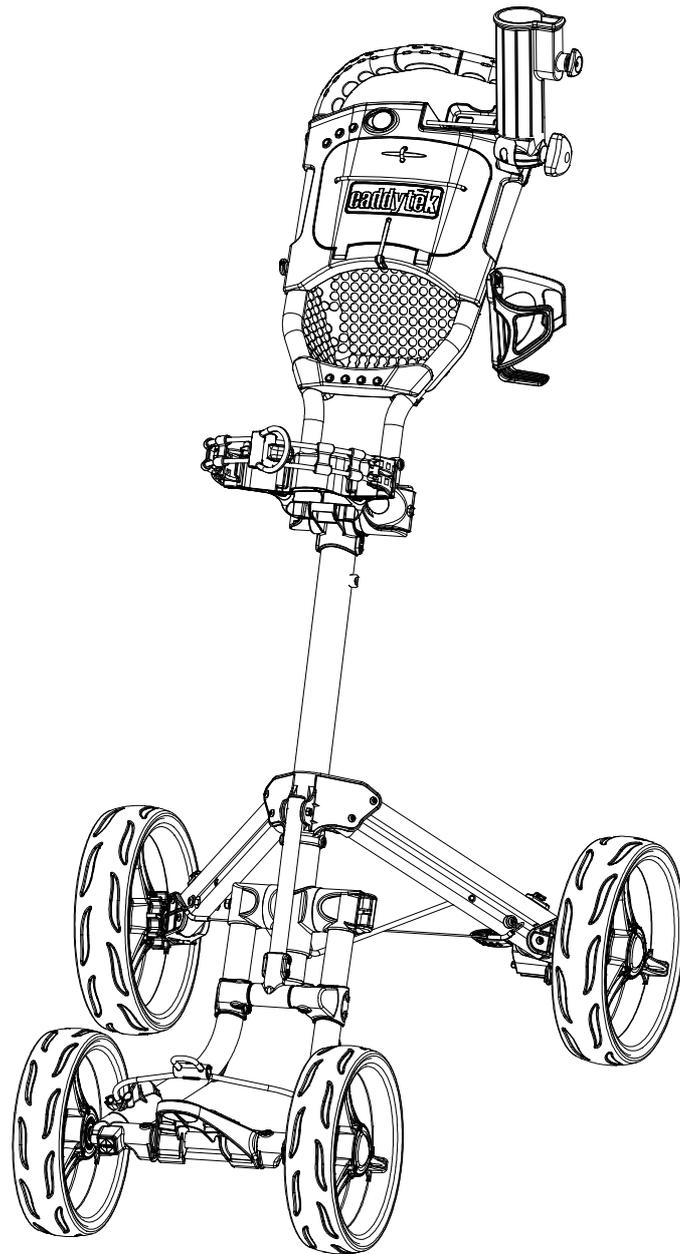

User's Manual


CaddyTek Inc.
20175 S. Atlantic Blvd., # C
Monterey Park, CA 91754, USA
www.caddytek.net

WARNING:


FOR YOUR OWN SAFETY, PLEASE REVIEW THESE WARNINGS AND KEEP THIS USER GUIDE FOR FUTURE REFERENCE.

- Before using this golf cart, please read and understand the important instructions and warnings in this user guide.
- AVOID INJURY by always following the instructions carefully.
- AVOID INJURY by keeping clear of moving parts while adjusting, folding or unfolding this cart.
- ALWAYS make sure the cart is fully extended and locked before use.
- ALWAYS make sure the cart is folded and locked properly before lifting or transporting.
- ALWAYS use the brake when parking the cart.
- DO NOT run while using this cart.
- DO NOT use accessories other than those designed specifically for this cart.
- Keep hands and fingers away from moving parts or sliding sections of the cart.


Assemble and Extend the cart

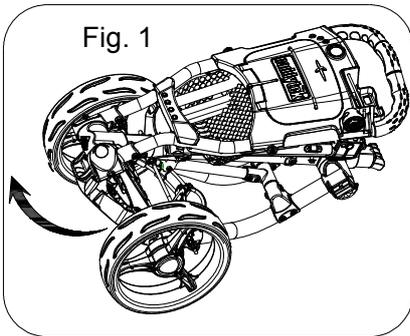

Extend the upper bag holder bracket as shown in Fig. 1

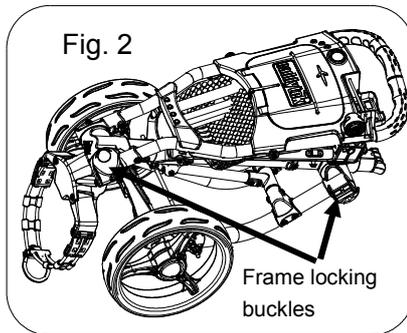

Release handle and front wheel frame locking buckles as shown above Fig.2.

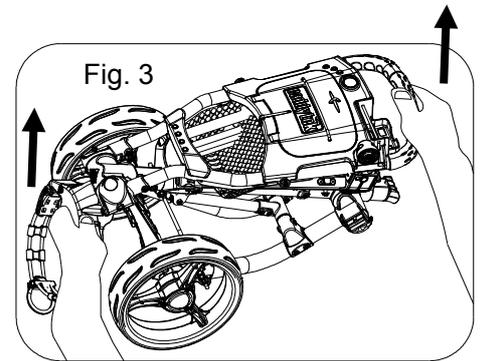

Hold the upper bag holder and the handle frame with hands as shown in Fig. 3

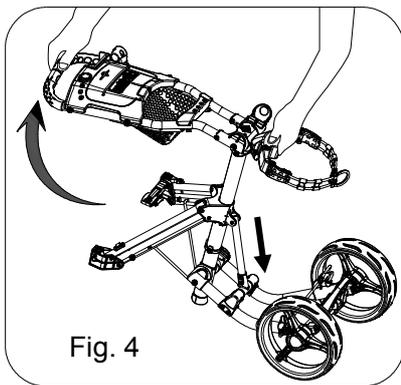


Fig. 4

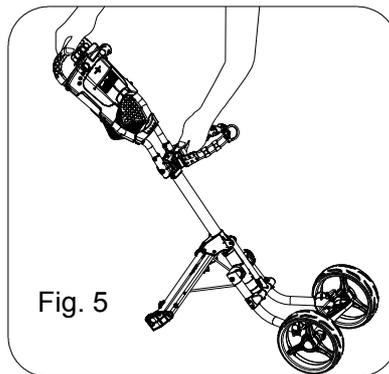


Fig. 5

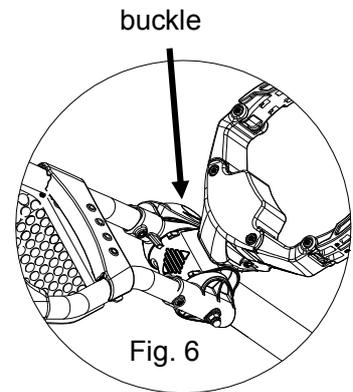


Fig. 6

Pull the handle frame upward to fully extend the handle frame as in Fig. 4 and Fig. 5, and lock the locking buckle as in Fig. 6.

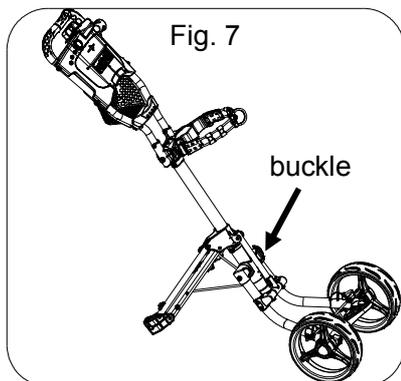


Fig. 7

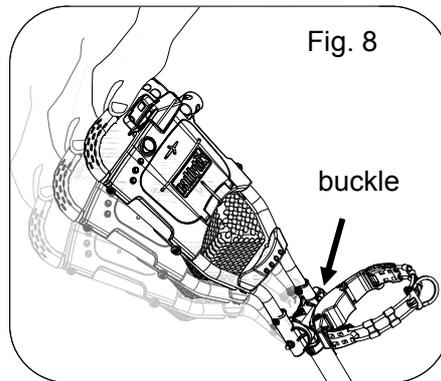


Fig. 8

Fully extend front wheel frame and lock the buckle as in Fig. 7. Hold the handle while releasing the locking buckle to adjust the handle height and lock the buckle again as Fig. 8 shows.

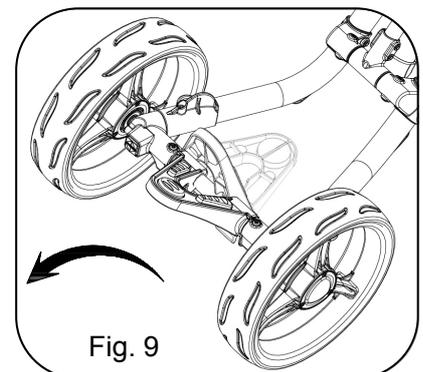


Fig. 9

Extend the lower bag holder assembly as shown in Fig 9.

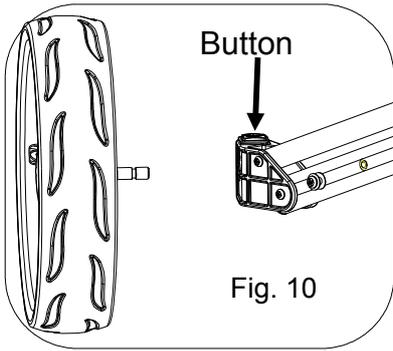


Fig. 10

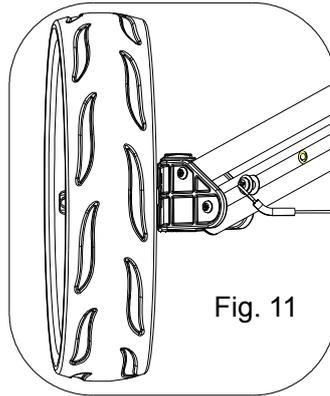


Fig. 11

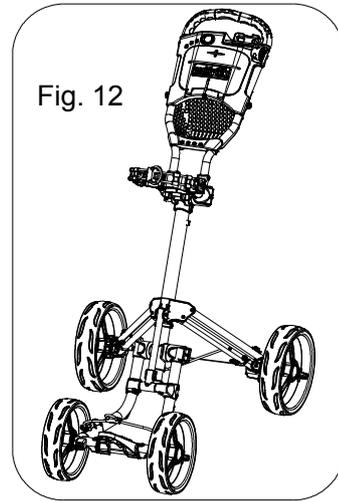


Fig. 12

Press the button and insert the rear wheel into the wheel axel holder as shown in Fig. 10 and Fig. 11. The cart now is ready for use as shown in Fig. 12.

Folding the cart

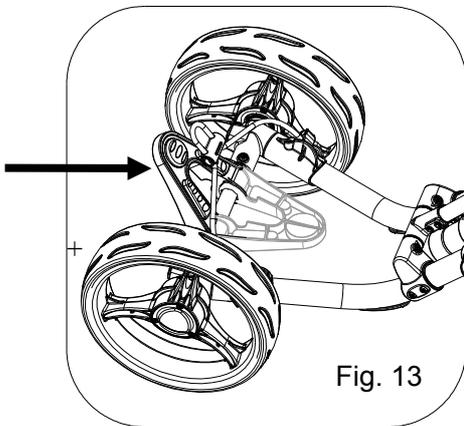


Fig. 13

Fold the lower bag holder as shown above.

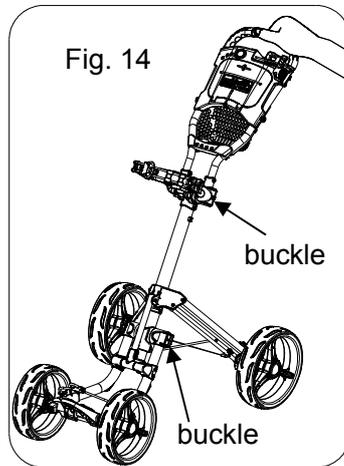


Fig. 14

Release the handle and front wheel frame locking buckles as Fig.14.
CAUTION: Please hold on to the handle when releasing the handle frame locking buckle to avoid the frame dropping abruptly and causing injury.

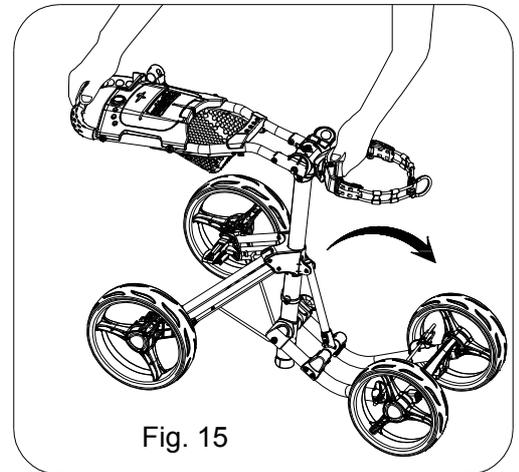


Fig. 15

Holding the handle frame and the upper bag holder bracket, move the handle downward to fold the cart as shown in Fig. 15.

Handle frame locking buckle

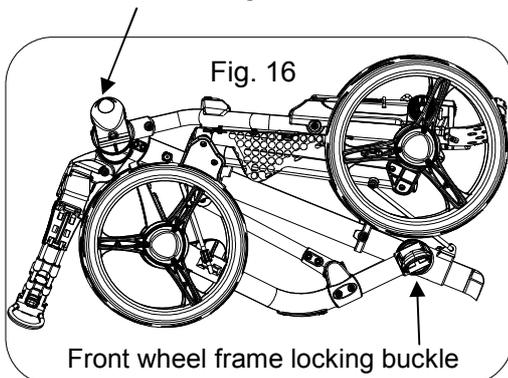


Fig. 16

After the cart is fully folded, lock both locking buckles as show in Fig. 16.

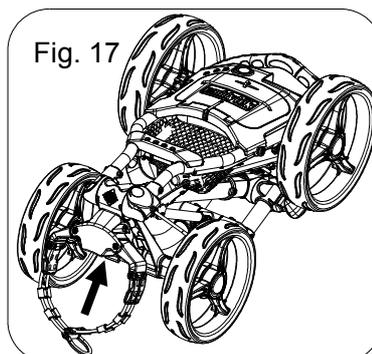


Fig. 17

Fold the upper bag holder as Fig.17 shown above.


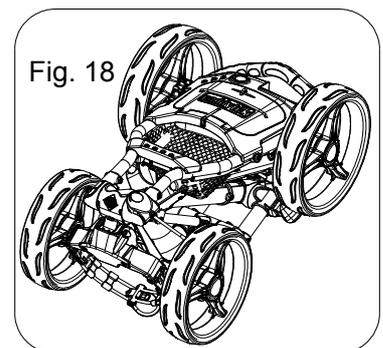


Fig. 18


The cart now is folded completely as Fig.18.

Install the drink holder

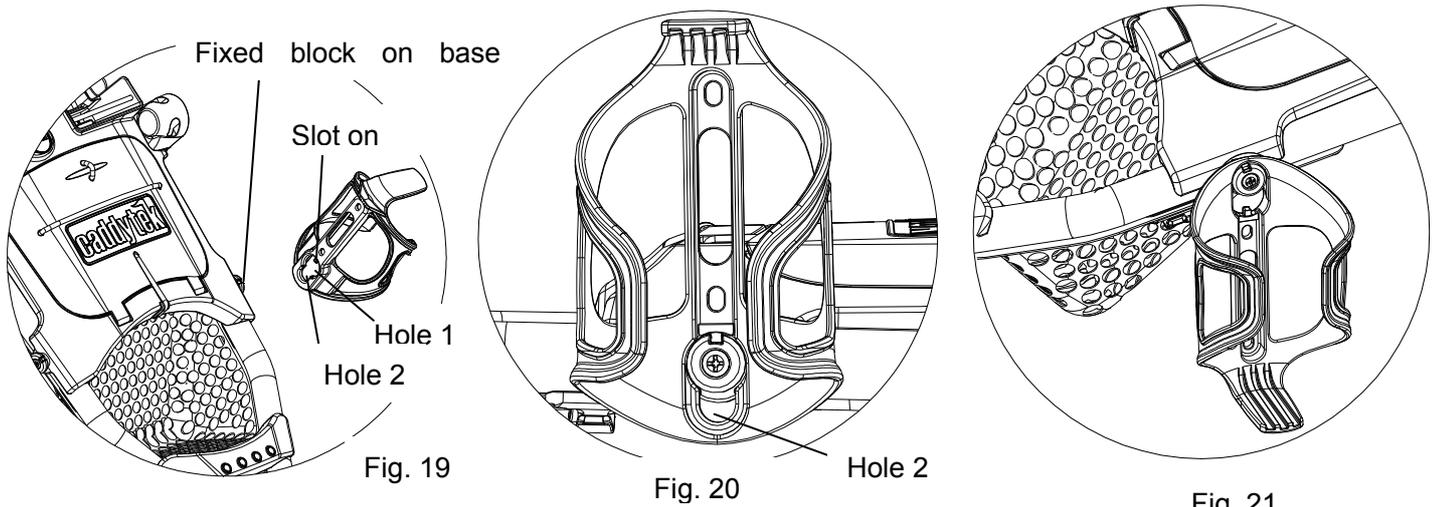


When installing the drink holder as Fig.19, align the smallest part of the slot on the holder with the fixed blocks. Then pull horizontally to fit the holder on the base as Fig.20 & 21.

Install Umbrella Holder

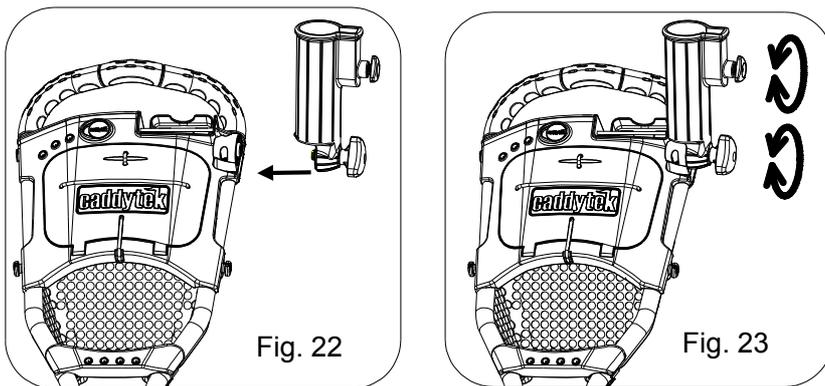


To put in use:
Simply attach the umbrella holder onto the cart as in Fig. 22 & 23.

Use the brake

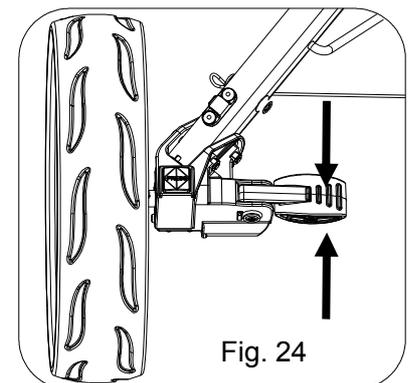


Press the foot brake to brake,
Lift it up to release as Fig.24

Adjusting & tightening the handle buckle

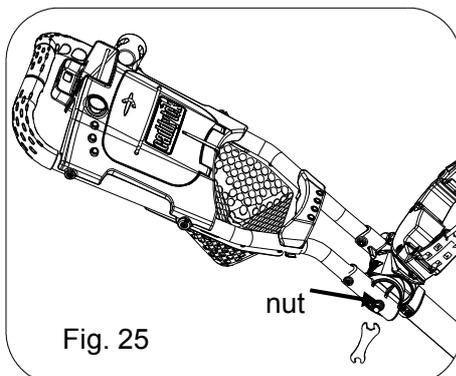

Time to time, please tight the upper connection nut with provided tool, as above Fig. 25, to prevent lose handle and prolong the life of the cart.

Adjust the width between front wheels

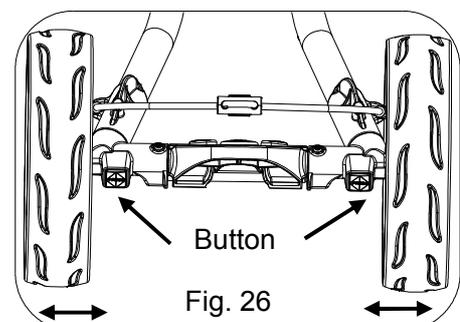

Press the button and slide the front wheel out/in ward to adjust the width between front wheels as Fig. 26, so that different sizes of golf bag can be fitted on the cart.

Front Wheel Alignment

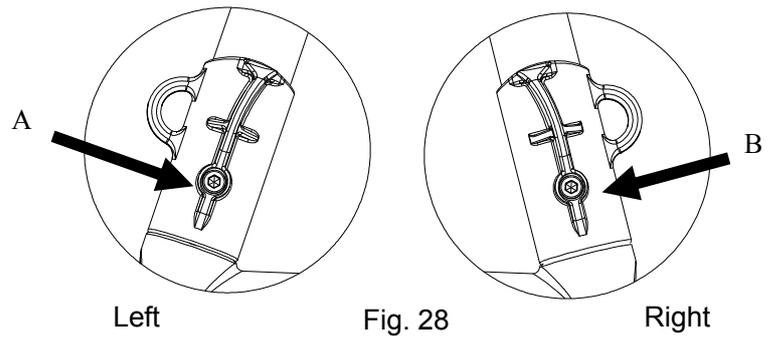
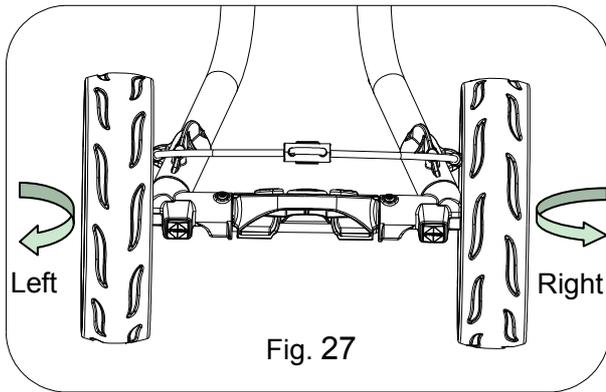


Fig. 28

Alignment adjusting screws A/B




Fig. 29

Hex. wrench

If the cart veers to the left, please use the hex wrench to turn screw A counterclockwise and Screw B clockwise to adjust the alignment.

If the cart veers to the right, please use the hex wrench to turn screw A clockwise and screw B counterclockwise to adjust the alignment.

To open the scorecard holder cover

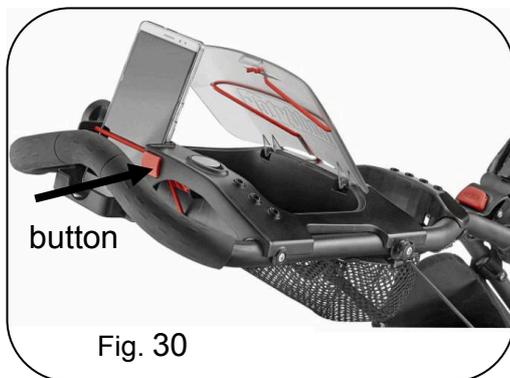

Press the button to open the scorecard holder cover as Fig. 30

WARRANTY

CaddyTek Inc. warrants its products to be free of defects and workmanship for one year from the date of purchase. We will either repair or replace defective products at our option.

Normal wear and fading of products is not considered a manufacturer's defect. This warranty does not apply to claim of damage to items used in connection with CaddyTek Inc. products. In the case of deterioration due to normal use we will repair the item for a nominal charge. CaddyTek Inc. is the sole judge of any claim or warranty.

For customers in the North American, please contact CaddyTek Inc. for the service. For customers outside of North American, please either contact with your dealer for the warranty service or you are welcome to contact CaddyTek Inc. directly.



.....

PRODUCT REGISTRATION

I have read and understand this product's operation and warranty, and wish to record my purchase:

Model: _____

Name(Mr./Mrs./Ms): _____

Address: _____

City: _____ Province: _____ Postal Code: _____

Tel: _____ Email _____

Date of Purchase : _____ Name of Store/Dealer: _____

Round of Golf per Month: _____ H'CAP _____

Signed: _____ Date: _____

Failure to return this card may result in delayed response to you warranty claim

Stamp

Caddytek Inc.
20175 S. Atlantic Blvd., # C
Monterey Park, CA 91754
USA

You can also register your golf cart on www.caddytek.net

