


BlastIR Wireless

The BlastIR Wireless is designed to get your remote control's signal where it needs to go. Control your home theater video sources like Blu-Ray, DVD, video players and receivers, and anything else that uses a standard IR remote control through walls and other obstructions by extending the IR signal wirelessly with this kit. With our unique Multizone technology, you have even more control over where you want your IR signals to go and where not to go.

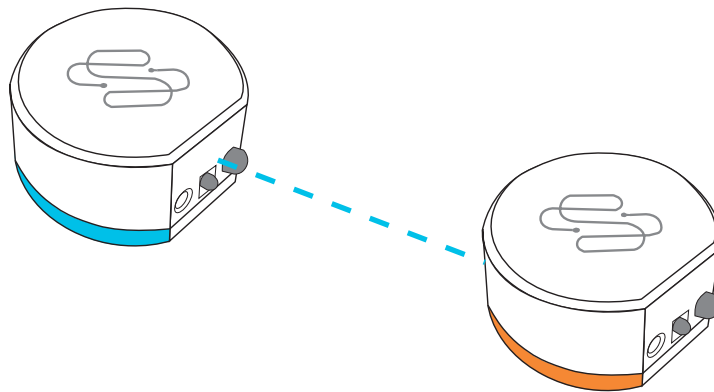

Box Contents

BlastIR Wireless IR Receiver

BlastIR Wireless IR Emitter

Dual IR Emitter Cable

IR Receiver Cable


(2) Airstick™ Microsuction Tape

(2) 3M Adhesive

(2) 5V .5A Power Supply

(2) USB to DC Cable

Setup: Step One

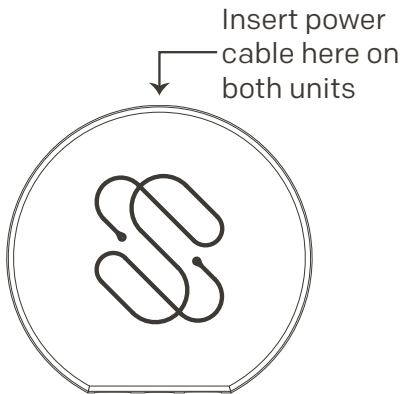

Connect each unit to power using either the included power supplies or the USB to DC cables.


It is easy to mistake the IR cable port on the front for the power port. Please ensure that the power adapter is plugged into the appropriate port at the back.

Setup: Step Two




Place the blue unit next to your display.

Setup: Step Three

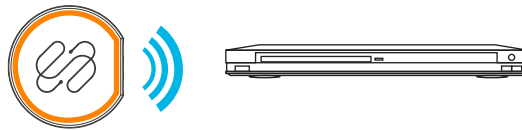


Place the orange unit in front of the device that you wish to control. Ensure that the IR emitter has a clear line of sight to the IR “eye” of your device.

Optional IR Cables

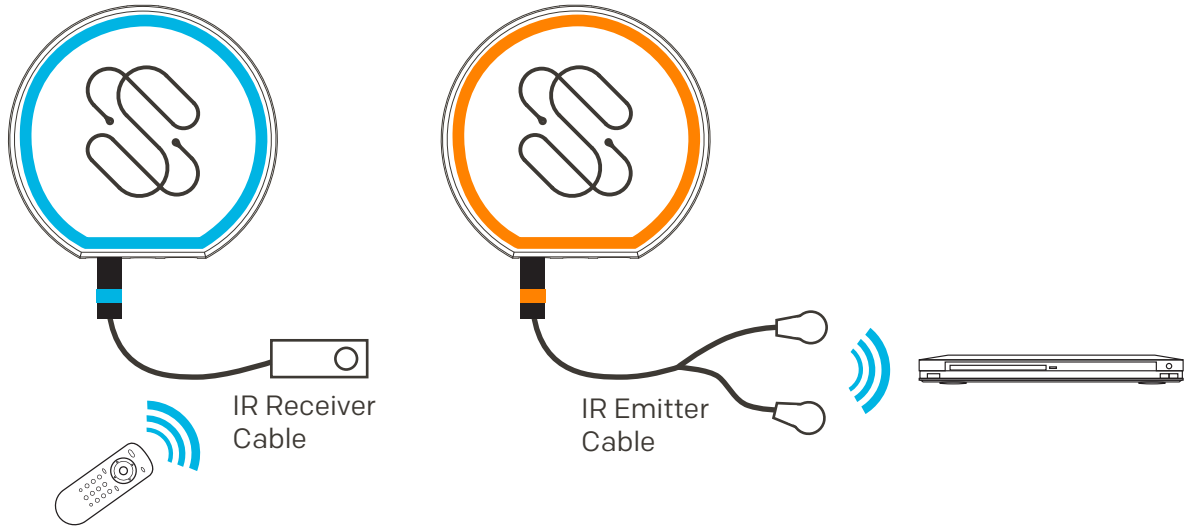


If you want to extend the reach or hide the receiver or emitter, connect the appropriate color-coded cable to the device. The blue IR receiver cable will add another receiver you can point your remote at. The orange IR emitter cable can attach to the IR “eye” of the device you wish to control.

Adhesive Placement

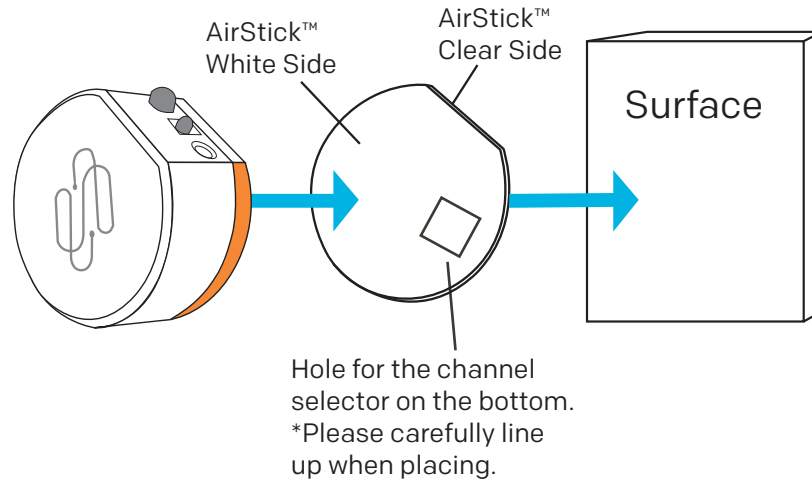




To keep the BlastIR Wireless in one place, we have included Airstick™ and 3M™ adhesive. Airstick™ is used as pictured above and it is designed to be reusable and leave no residue. The 3M™ adhesive is used the same way and is used for a more permanent placement.

Multizone

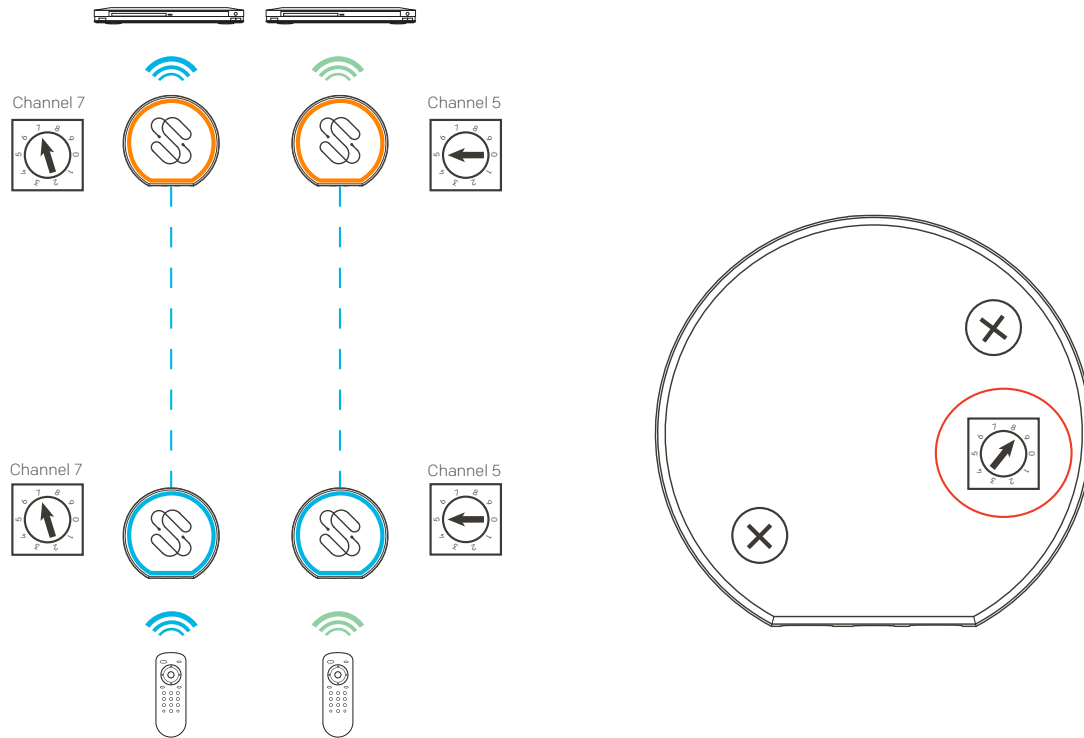


BlastIR Wireless Receivers will only communicate with the BlastIR Wireless Emitters that are set to the same zone. The Blast IR Wireless supports up to ten unique zones of communication. Setting the zone to "0" will allow communication to previous models of the BlastIR Wireless. After changing the zone, please reset the device.

Possible Setups

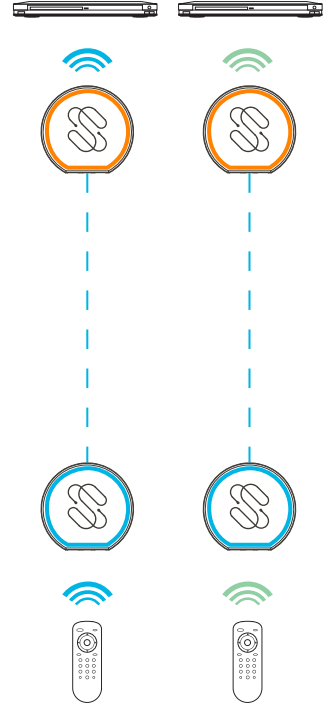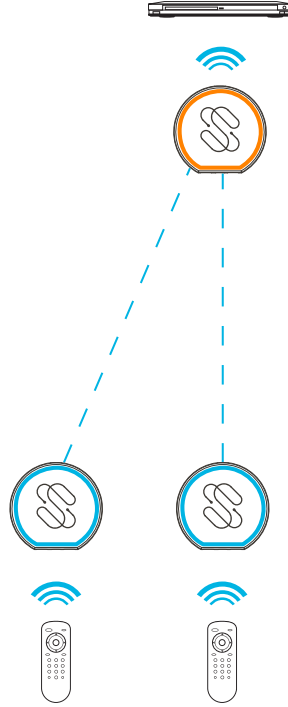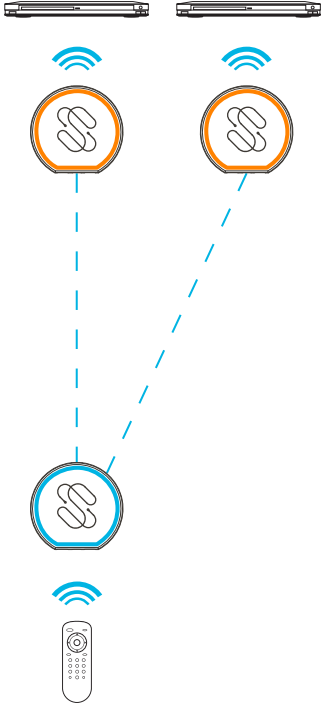

Port Diagram

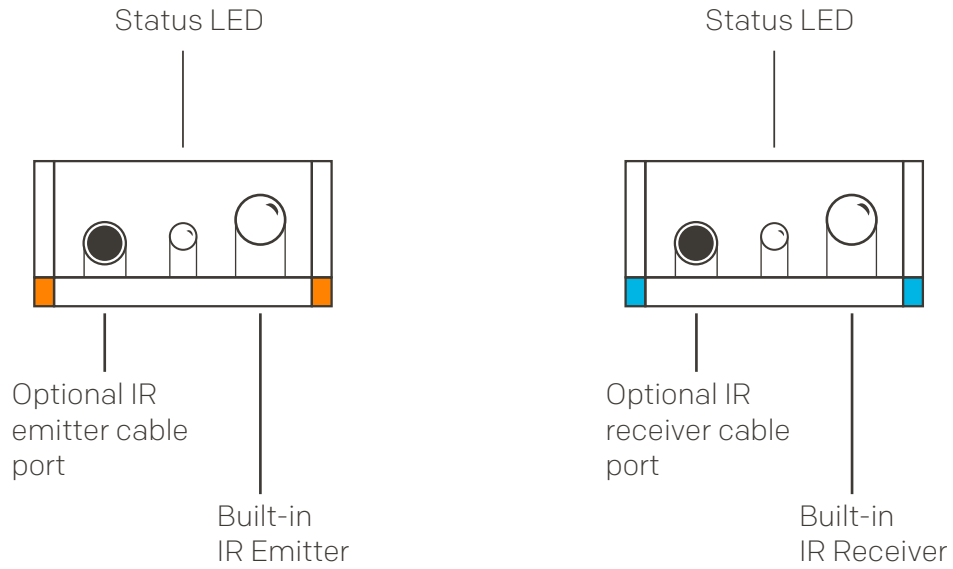

Safety

Please read all instructions carefully before using the device.

- Unpack the equipment carefully and save the original box and packing material for possible future shipment.
- Follow basic safety precautions to reduce the risk of fire, electrical shock and injury.
- Do not dismantle the housing or modify the module in any way. It may result in electrical shock or burn.
- Using equipment or parts not meeting the product's specifications may cause damage, deterioration or malfunction.
- Refer all servicing to qualified service personnel at Sewell Direct.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
- Unplug the power cord when left unused for a long period of time.
- Please do not burn or mix with general household waste.

FCC Statement



- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Need Help?

Phone 800.709.1345

Email support@sewelldirect.com

Chat sewelldirect.com/support

Live support available Monday
through Friday 9AM-8PM EST

If you have anything less than a 5-star experience,
please let us be the first to know and we'll make it right!

 sewelldirect.com/support
