 





 
 
 
 
 





 
 

 
 
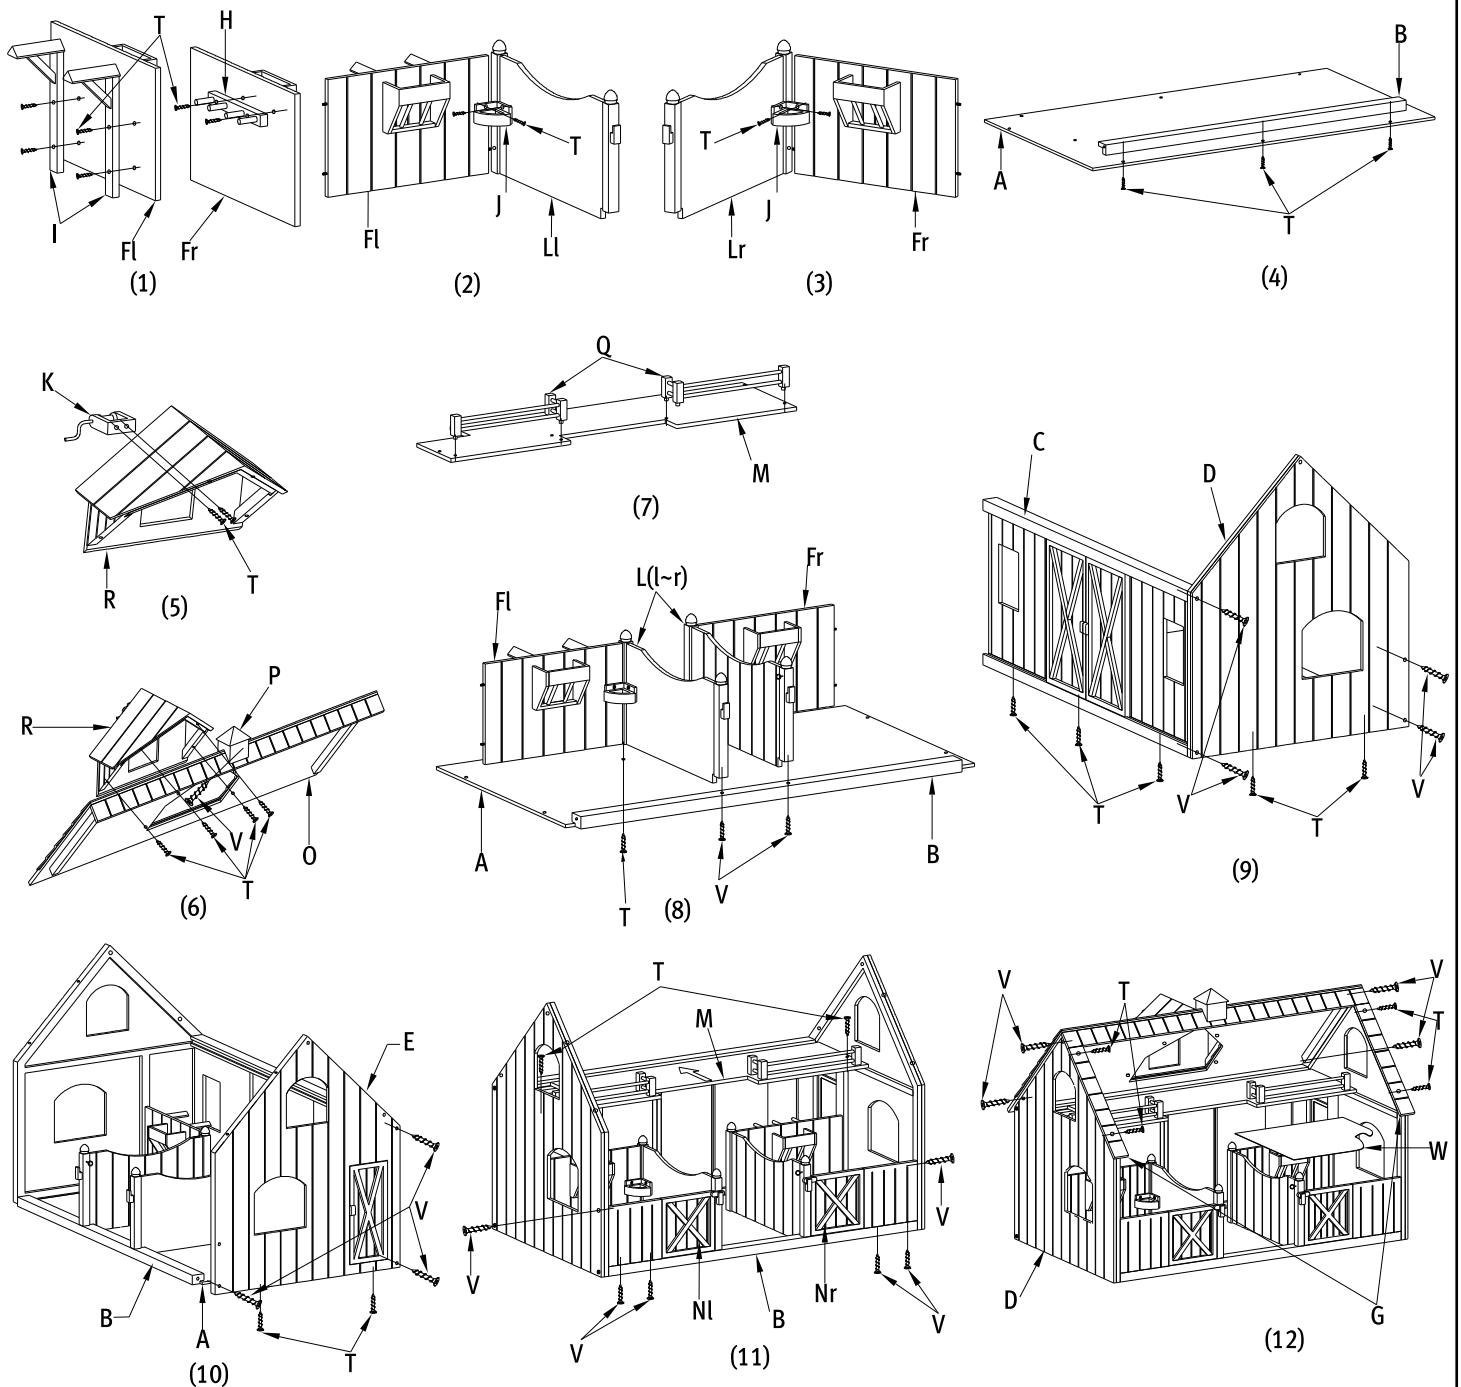


Parts:

											
A 1pc	B 1pc	C 1pc	D 1pc	E 1pc	F(r~l) 2 pcs	G 2pcs	H 1pc	I 2pcs	J 2pcs	K 1pc	L(r~l) 2pcs
											
M 1pc	N(r~l) 2pcs	O 1pc	P 1pc	Q 2pcs	R 1pc	T 39pcs	V 16pcs	(floor mat) W 2pcs			

Setting:



WARNING: Assembly should be done by adult or under adult supervision.

ASSEMBLY: The screws and joints must be correctly placed and tightened with Phillips screw driver before allowing children to play with the toy.

CAUTION: Check the equipment regularly for loose screws & joints. If the loose screws & joints not fixed before use, the toy may cause injury due to overturning or toppling. Check the equipment for wear & tear. Do not use if broken or damaged.



WARNING:

**CHOKING HAZARD - Small parts.
Not for children under 3 years.**