

fig.4



☞ **Cleaning: (fig.4)**

**Clean the trimmer after each use.**

- First ensure that the battery cover is firmly closed.
- Clean the trimmer by holding it under running water, but do not fully submerge in water (fig. 4).

**Cleaning the inner blade:**

- Remove the black blade cover by gripping and twisting counter clockwise (fig. 4).
- Turn black blade cover upside down under running water to allow water to rinse through (fig. 4). DO NOT remove the white inner blade from the cover.
- Reattach the blade cover by turning clockwise, then dry with a soft cloth.

\*Hair can also be removed from the trimmer with the included brush.



**Need help? Have a product question? Feedback?**

Contact us: [Info@ToiletTreeProducts.com](mailto:Info@ToiletTreeProducts.com)


or Toll Free 1-888-251-0985

View more great products at  
[www.ToiletTreeProducts.com](http://www.ToiletTreeProducts.com)



# Nose & Ear Trimmer

Water resistant

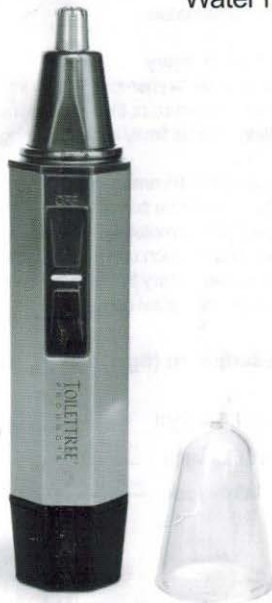

## Instructions for use

Before operating this trimmer, please read these instructions completely.

## CAUTION

- \* This trimmer is designed for cutting body hair; It is intended for personal use and not intended for commercial use.
- \* May be a danger to children and should be kept out of reach of children.
- \* This trimmer is designed to trim the nose and ear hairs. Do not attempt to use it for any other purpose.

## Other potential risks of injury


- \* Never insert the trimmer deeper than 0.5cm into your ear or nose as you may injure your eardrum or the mucous membrane in your nose.
- \* Be sure the cutting head is firmly in place during use.

## Caution - Damage to the trimmer

- \* When cleaning the trimmer, be sure that the battery cover is tightly closed.
- \* Never immerse the unit completely in water.
- \* Turn the trimmer off after each use and replace the protective cover.
- \* Always remove a dead battery from the trimmer immediately because it may leak and cause damage.

## General description: (fig.1)

fig. 1

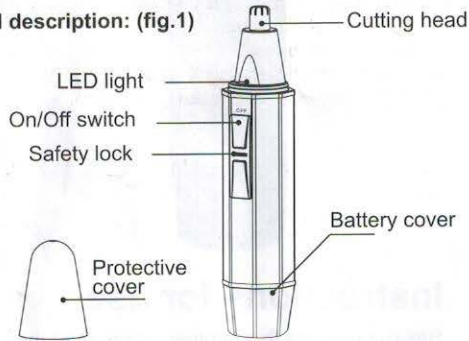


## Inserting the Batteries: (fig.2)

The unit works with a 1.5V AA battery, it is recommended to use an alkaline battery.

- \* Turn the battery cover counterclockwise and remove it. The cover has a bayonet lock.
- \* Insert the battery with the plus (+) in the direction of the cutting head.
- \* Replace the battery cover and turn it clockwise until it locks into place.

fig. 2

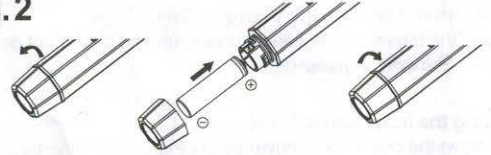

## How to use:(fig.3)

- \* Remove the protective cover.
- \* To switch on the trimmer, slide the ON/OFF switch in the direction of the cutting head.
- \* **Trimming the nose hair:**  
Switch on the trimmer and guide it carefully in the front area of the nostrils. Remove hair through careful, circular movements of the trimmer.
- \* **Trimming the ear hair:**  
Switch on the trimmer and guide it carefully into the outer parts of your ear. Guide the trimmer carefully along areas where hair is seen on the ear.

fig. 3

