 
fig.4









Clean the trimmer after each use.

- First ensure that the battery cover is firmly closed.
- Clean the trimmer by holding it under running water, but do not fully submerse in water (fig. 4).

Cleaning the inner blade:

- Remove the black blade cover by griping and twisting counter clockwise (fig. 4).
- Turn black blade cover upside down under running water to allow water to rinse through (fig. 4). DO NOT remove the Black inner blade from the cover.
- Reattach the blade cover by turning clockwise, then dry with a soft cloth.

*Hair can also be removed from the trimmer with the included brush.



Need help? Have a product question? Feedback?

Contact us: Info@ToiletTreeProducts.com or Toll Free 1-888-251-0985 View more great products at www.ToiletTreeProducts.com



Nose & Ear Trimmer

TTP-TRIM-8

Water resistant



Instructions for use

Before operating this trimmer, please read these instructions completely.

CAUTION


- * This trimmer is designed for cutting nose and ear hair, it is intended for personal use and not intended for commercial use.
- * This trimmer should be kept out of reach of children to avoid injury.
- * This trimmer is designed to trim the nose and ear hairs. Do not attempt to use it for any other purpose.

Other potential risks of injury

- * Never insert the trimmer deeper than 0.5cm into your ear or nose as you may injure your eardrum or the mucous membrane in your nose.
- * Be sure the cutting head is firmly in place during use.

Caution - Damage to the trimmer

- * When cleaning the trimmer, be sure that the battery cover is tightly closed.
- * Never immerse the unit completely in water.
- * Turn the trimmer off after each use and replace the protective cover.
- * Always remove a dead battery from the trimmer immediately as it may leak and cause damage.

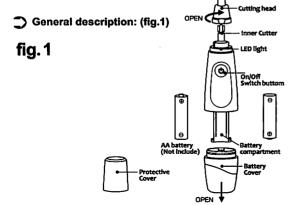

Inserting the Batteries: (fig.2)

The unit works with two 1.5V AA batteries, it is recommended to use alkaline batteries.

- * Open the battery cover and remove it as shown in fig.2.
- * Insert two AA batteries on the left and right side as shown in fig.2.
- * Replace the battery cover as shown in fig.2.



- How to use:(fig.3)
- * Remove the protective cover.
- * To switch on the trimmer, press the ON/OFF switch.
- * Trimming Nose Hair:

Switch on the trimmer and guide it carefully in the front area of the nostrils. Remove hair through careful, circular movements of the trimmer.

* Trimming Ear Hair:

Switch on the trimmer and guide it carefully into the outer parts of your ear. Guide the trimmer carefully along areas where hair is seen on the ear.





fig.3