

 


# ARCHON

INSTRUCTION MANUAL AND WARRANTY INFORMATION


Thank you for purchasing this ARCHON watch. The following instructions are provided to help you familiarize yourself with the proper operation and care of your ARCHON watch. To ensure correct use, please read and follow the instructions carefully.

01

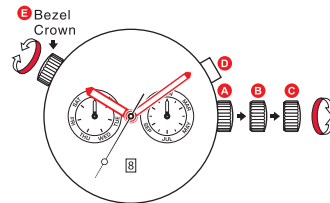

- A Crown [A] position**
- B Crown [B] position**
- C Crown [C] position**  
(Note to access these functions, gently unscrew crown)
- D Pusher [D]**
- E Bezel Crown [E]**  
(To rotate the inner bezel)

 
02

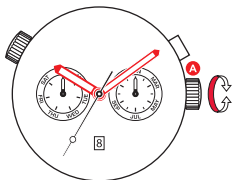

#### WINDING THE MAINSPRING

Automatic winding watches can be manually wound by turning the crown in [A] Position. Gently unscrew the crown, then turn it clockwise 6-10 times until the second hands starts to move naturally.

 
03

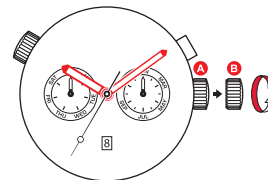

#### ADJUSTING DAY

1. Adjust the day by rotating the crown counter-clockwise in [B] position.
2. Push back to [A] position then gently screw down the crown.

 
04

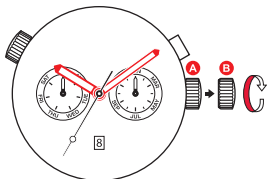

#### ADJUSTING DATE

1. Adjust the date by rotating the crown clockwise in [B] position.
2. Push back to [A] position then gently screw down the crown.

 
05

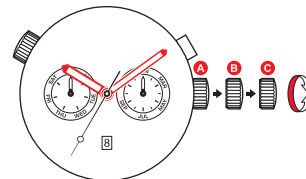

#### ADJUSTING TIME

1. Rotate the crown in [C] position and adjust the standard time. Then check if it is morning or afternoon and adjust correctly.
2. Push back to [A] position then gently screw down the crown.

 06

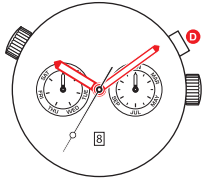

#### **MONTH CALIBRATION**

Using the tool that accompanied your Archon timepiece, please push the hidden pusher [D]. Please ensure hidden pusher [D] is completely pushed in so that the month is changed completely.

07

#### **PRECAUTIONS AND PREVENTIVE MEASURES**

##### **Temperature**

Do not expose your watch to sudden temperature changes (exposure to sunlight followed by immersion in cold water) or extreme temperatures [over 60°C (140°F) or below 0°C (32°F)].

##### **Magnetic Fields**

Do not expose your watch to intense magnetic fields such as loudspeakers, portable telephones, computers, refrigerators, and other electromagnetic appliances.

##### **Shocks**

Avoid thermal or other shocks as it may harm your watch. In the event of a violent shock please have your watch checked by an authorized ARCHON service Center.

##### **Care and Checks**

Clean the case and bracelet regularly using a soft cloth to prevent any corrosion caused by perspiration. All water resistant watches can be cleaned with a toothbrush and soapy water, and then dried with a soft cloth.

08

##### **Water Resistance**

This watch is rated to 20ATM / 200M / 660 FT.

Water resistance of watches is rated based on laboratory pressure tests comparable to a swimmer or diver sitting still at that pressure level. However many water-based activities involve a lot of movement and other environmental changes. These exceptions to how the watch was rated may challenge or defeat the water protection features of a water resistant watch. The water resistance of a watch cannot permanently be guaranteed. It may be affected by the aging of gaskets or by accidental shock to the crown.

Never activate the time-setting crown and/or the pushers while the watch is underwater and make sure that the crown has been pushed/screwed down tightly after every operation. Do not under any circumstances open the watch yourself.

We do not recommend subjecting our watches to hot tub or jacuzzi use.

09

##### **International Warranty**

ARCHON guarantees this watch for a period of 12 months from the original date of purchase, with the exception of loss, theft and damages resulting from ill treatment.

Any modification of your watch by the addition of non-original parts, or the substitution of parts with non-original parts will void your warranty.

10



# ARCHON

[www.archonwatches.com](http://www.archonwatches.com)

11