

概念印刷 2021. 05. 20

145.00 mm

## **Ceramic Fan Heater**

 
ITEM NO.: 3618-BLACK

MODEL NO.: ZFH006



210.00 mm

**INSTRUCTIONS FOR USE**  
**PLEASE READ AND SAVE THESE**  
**IMPORTANT INSTRUCTIONS**



## **INTENDED USE**

This product is intended ONLY for indoor household or office use.

It is NOT intended for industrial or commercial use. Do not use the product outdoors.

## **IMPORTANT INSTRUCTION**

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.

When using electrical appliances, the following basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains, at least 3 feet (0.9m) from the heater.
3. Extreme caution is necessary when any heater is used near children, pets, or the disabled. NEVER leave the heater unattended while operating.

Use your heater only in dry environments. This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water containers. Do not use your heater outdoors. Do not use near sinks, swimming pools, or other damp areas, such as flooded basements, garages, or any place where the heater could come in contact with water.

4. A heater has hot and arcing or sparking parts inside. Do not use it in the areas where gasoline, paint, or flammable liquids are used or stored.
5. To disconnect the heater, turn off the controls first, then remove the plug from the outlet.
6. Always unplug the heater by removing the plug end from the outlet when not in use. Never unplug by pulling on the cord as this can damage the power cord.
7. Do not use the heater under the following circumstances: the power cord or plug has been damaged; the machine has been defective; the machine has been dropped damaged in any manner. Return the heater to the authorized service facility for examination, electrical or mechanical adjustment, or repair.
8. Always plug heaters directly into a wall outlet/receptacle. Never use an extension cord or relocatable power tap (outlet/power strip).
9. Do not run cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Arrange the cord away from the high-traffic areas to avoid a tripping hazard.
10. It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet (receptacle) and plug may cause overheating and distortion. Contact a qualified electrician to replace the loose or worn outlet.
11. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire or damage the heater.
12. To prevent a possible fire, do not block air intakes or exhausts in any manner. Do not use the heater on soft surfaces, like a bed, where openings

may become blocked.

13. Do not operate the heater with any safety guards removed.

14. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

15. This heater draws 12.5 amps during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.

16. The heater's output may vary, and its temperature may become intense enough to burn exposed skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.

17. Do not locate the device against walls or behind drapes or furniture when it is used as a free-standing heater.


18. CAUTION: To prevent electric shock, insert the wide prongs of the plug into the wide receptacles. Ensure the plug fits snugly in the socket.

### **Description of Device**


A - Adjustable thermostat

B - Power switch

C - Handle

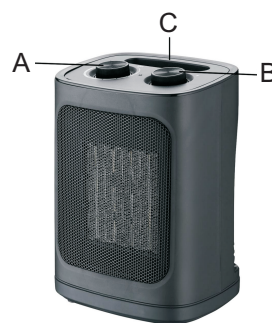

### **Operating Instructions**

- 1) Before using the heater, make sure that it is on a flat and stable surface. Damages may occur if it is placed on slopes.
- 2) Turn off all the heater controls and then plug directly into a standard grounded AC outlet. Be sure the plug fits tightly into the outlet.
- 3) To activate the heater, turn the knob to the Fan position (  ) for cool wind, turn the knob to "LO" for the warm wind-low power, and "HI" for hot wind-Maximum power.
- 4) Turn the thermostat switch clockwise or anti-clockwise to set the desired temperature that you require. The adjustable temperature switch automatically keeps the desired set temperature.
- 5) To completely shut the heater off, turn all the switches off, and remove the plug from the socket-outlet when not in use.

Note: Do not force the knob beyond its normal stop position.

### **Tip-over protection**

The heater is provided with an anti-tilt switch that switches off the heater if it is overturned. It switches itself on again automatically when it is restored to its upright position.

### **Overheat protection**

This heater is protected with overheat protection that switches off the appliance automatically in case of severe overheating. In this case, unplug the appliance, wait about 30 minutes for it to cool down, and remove any possible cause of overheating to ensure nothing covers the heater. Check for damage to the appliance, the cord, and the plug. If there is no damage, plug the unit back in and switch it on as described above. If the heater still does not turn on, please contact Customer Service for assistance.

### **Maintenance and cleaning**

The appliance should be regularly cleaned when in use in accordance with the following instructions:

1. Unplug and let the appliance cool down before cleaning.
2. Gently clean the outside surface and the appliance's control panel with a damp, lint-free soft cloth.
3. If dust is present within the slits of the device, it is recommended to blow them through the use of a vacuum cleaner or a blower.
4. Do not use chemical cleaners or solvents or harsh detergents as they may damage the appliance feet.

### **Storage**

1. Keep the original packaging to disassemble the appliance and store it.
2. Keep the appliance in a dry and clean place.
3. Store the unit out of reach of children.

Thank you for purchasing this product! If you have questions about the product such as missing parts, damaged products, product assembling and operation etc., please contact us via **Amazon Message** or customer service phone: **213-4467172 or 661-4358826**

### **IMPORTANT**

Simply call our customer service department for any consulting:

**213-4467172**

**661-4358826**

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

### **AVIS**

Veuillez appeler le service à la clientèle pour toutes questions au:

**213-4467172**

**661-4358826**

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

### **IMPORTANTE**

Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:

**213-4467172**

**661-4358826**

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

**Add: 9733 Topanga Canyon Blvd. APT310, Chatsworth, CA 91311**

**Phone: 213-4467172 or 661-4358826**

