

# **IMPORTANT INSTRUCTIONS AND OPERATING MANUAL**

---



**INFRARED HEATER**

**Model: NXA-1500R**

**Add: 9733 Topanga Canyon Blvd. APT310, Chatsworth, CA 91311**

**Phone: 213-4467172**

## **Thank you for purchasing your new Remote Control Infrared Heater.**

These operating instructions will help you use it properly and safely.  
We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers.  
Read all the safety instructions carefully before use and keep this instruction manual for future reference.

### **Safety warnings**

**READ ALL INSTRUCTIONS BEFORE ATTEMPTING TO OPERATE THIS UNIT. KEEP THE ASSEMBLY INSTRUCTIONS FOR FUTURE REFERENCE. KEEP THE ASSEMBLY INSTRUCTIONS FOR FUTURE REFERENCE. KEEP THE ORIGINAL PACKAGING FOR USE WHEN STORING THE HEATER DURING EXTENDED PERIODS OF NON-USE.**

- Read all instructions before using this unit.
- Do not leave this unit unattended when in use.
- This heater will get hot when in use. Do not touch hot surfaces.
- Caution: Some parts of this product can become very hot and cause burns. Particular attention has to be given when children and vulnerable people are present.
- Do not move the unit when in use. Wait until the heater is completely cool before moving and check that it has been unplugged from the power supply.
- Position the unit at least 1m away from highly combustible materials such as furniture, trees, leaves, dry grass and bushes.
- The heater must be a minimum of 1.8m(6 feet) away from the ground and a minimum of 0.7m (2.5 feet) away from the ceiling of a building or overhanging items.
- The heater must not face with the heating element pointing upwards towards a ceiling. The heater element must be facing the area it is to heat.
- Warning: In order to avoid overheating do not cover the heater. It is not for drying clothes.
- Keep children and pets at a safe distance from the unit.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance

shall not be made by children without supervision.

- Do not operate the heater if any signs of damage or malfunction manifest themselves.
- Do not attempt to repair or adjust any electrical or mechanical functions on this unit. The unit does not contain any user serviceable parts. Only a qualified electrician should perform servicing or repairs. Attempting to repair the unit yourself will void your warranty.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not handle the element with bare hands. If it is inadvertently touched, remove finger marks with a soft cloth and methylated spirits or alcohol, otherwise the marks will burn into the element causing premature heater failure.
- Do not replace or attempt to replace the element in this product.
- This product is suitable for indoor and outdoor use. Do not use this heater in the immediate surroundings of a bath, shower or swimming pool.
- This product must not be left outdoors exposed to the elements for long periods of time.
- Do not touch the plug with wet or damp hands.
- Do not run the power cable under carpeting. Do not cover the power cable with rugs, runner, or similar coverings. Arrange the power cable away from foot traffic and where it will not be tripped over.
- Do not wind the power cable around the unit.
- Do not insert or allow foreign objects to enter any ventilation or opening on the heater, as this may result in electric shock, fire, or damage to the heater.
- To prevent a possible fire, do not block the air vents.
- A heater has hot and arcing or sparking parts inside. Do not use in areas where petrol, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
- Where possible, avoid the use of an extension cable as this may overheat and cause a fire. However, if you have to use an extension cable, ensure it is suitable for the purpose, has been tested for outdoor use and preferably has an RCD device fitted or attached.
- Always ensure the heater is plugged into a suitable socket, one that is tested for outdoor use.
- To disconnect heater, turn controls to OFF, then remove plug from socket. Do not unplug by pulling on the power cable.
- Always unplug the unit and ensure the unit is completely cold before moving, cleaning or storing.
- This heater is intended for domestic use only and should not be used commercially for contract purposes. Any alternative use, not recommended by the manufacturer, may result in fire, electric shock, or injury to persons.
- The use of attachments on the heater is not recommended.
- Warning: This heater is not equipped with a device to control the room

temperature. Do not use this heater in small rooms when occupied by persons not capable of leaving a room on their own, unless constant supervision is provided.

-Check exterior walls for areas of damage before installing the heater.

-Always use on a dry, suitably strong, stable, flat and level surface.

-Check exterior walls for communication and electrical cables and pipelines.

Should any service lines be present in the immediate vicinity do not install your heater, find an alternative location to install this product.

 
-Do not position directly above or below an electrical socket.

-Do not remove any of the warning stickers or signs from the product.

## HEATER COMPONENTS


### HEATER BODY COMPONENTS

1	Front aluminum cover
2	Left housing
3	Left decorative cover
4	Back aluminum cover
5	Heating tube
6	Power cord
7	Right housing
8	Right decorative cover
9	LED displayer
10	Protection grill
11	Decorative support

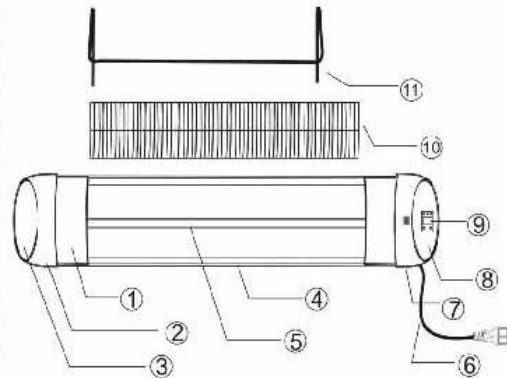


## Vertical installation method

 
1. Fix product bracket 1 and product bracket 2 with 2 M6\*14 screw rods, using two M5\*12 screws to install the aluminum bracket to the back side of heater body as below figure ①..

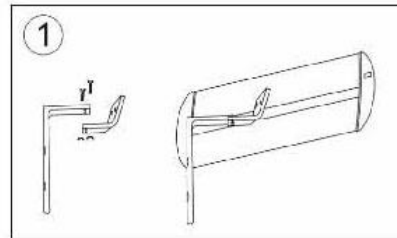

 2. Using two M6\*44 screws to install the aluminum bracket and heater body to the holder as below figure ②.

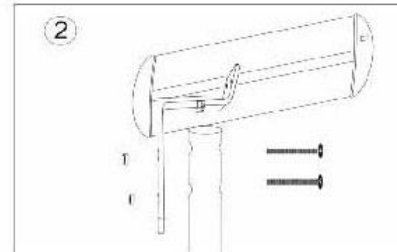

 
3. Using two M5\*12 screws to fix the decorative support to the back side of heater body as below figure ③

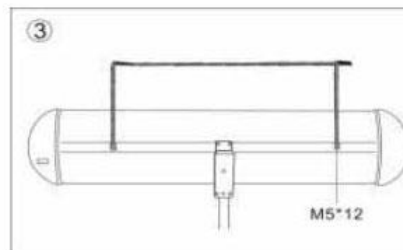


## Using steps

Step 1: Plug the power cord into the outlet.

 
Step 2: press the rocker power switch to "I" position, and the switch indicator light will be on, indicating power on.

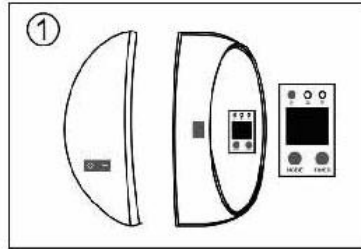

 
Step 3: Press MODE once, the digital screen shows "P 0" which means first power setting.

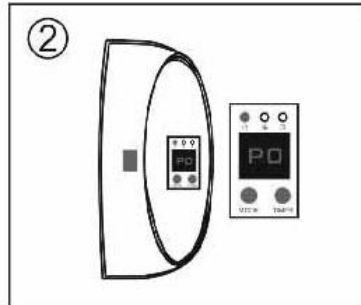

 
Step 4: Press MODE once, the digital screen shows "P 1" which means first power setting.

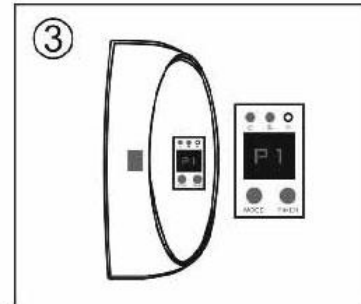

 
Step 5: Press MODE two times, the digital screen shows "P 2" which means second power setting.

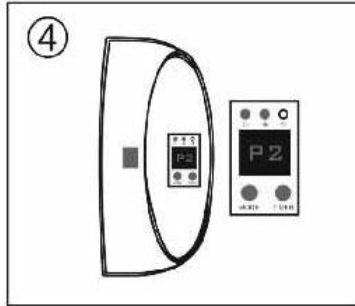

 Step 6: Press MODE three times, the digital screen shows "P 3" which means third power setting.

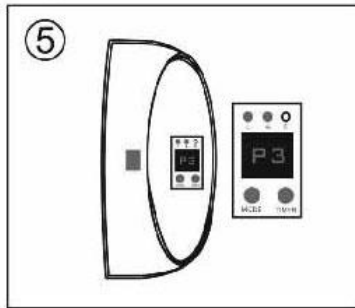

 
Step 7: After the function is on, 1-24 hours timing shutdown can be adjusted. The digital screen showing "0 1" indicates timing one hour, "0 2" indicates timing two hours, etc.

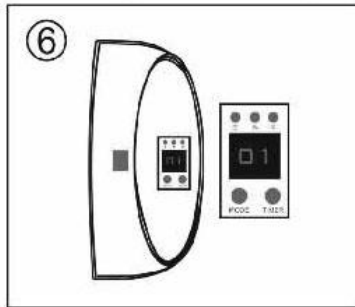

Step 7: The product has tip over protection function, which means when the product incline 45 degrees or more, the tip over switch will work and the product will be power off automatically to ensure safety. The tip over switch will reset when the product is on normal use.

### Operation of Remote Control

 The functions of the heater may be controlled via the buttons on your remote control and LED screen. You may also control some of the functions of your heater through the buttons on the front side of the heater.

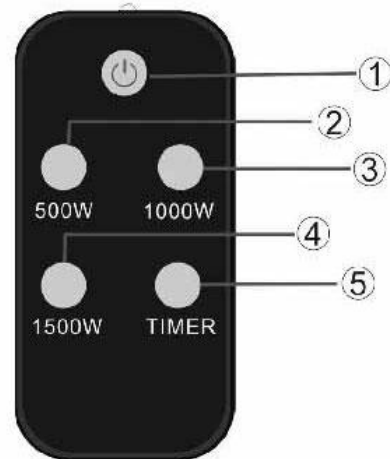

### Remote Control

**1. On / Off**

Switches on or off the heater or stands it by.

**2. First gear**

After turn on the heater, you can choose low heating.

**3. Second gear**

After turn on the heater, you can choose moderate heating.

**4. Third gear**

After turn on the heater, you can choose high heating.

**5. Timer Off**

Switches off the heater in present time and starts standby mode.



## Maintenance and Cleaning

### Maintenance

 
**Attention! Careful and regular maintenance of infrared Heater is required to attain a long and efficient operation of your appliance.**

- 1- Check the cleanliness of the reflector and IR-filament at least once a month. If necessary, apply cleaning and maintenance instructions.
- 2- The number of checks may be increased considering the amount of the dust in the environment.
- 3- Check the deformation of the reflector, wire and frame visually while cleaning the appliance. In case of any deformation, consult a qualified technician.
- 4- Check the power cable and plug visually while cleaning the appliance. In case of any deformation, consult a qualified technician.
- 5- It is recommended to change the reflector every 2 years for more efficient operation.

### Cleaning

**Attention! Regular and careful cleaning helps your heater operate for longer years and more efficiently.**

- 1- Unplug your power cable for your safety before cleaning your appliance.
- 2- Take out the front grid wire through the inlets on the frame using a slotted screwdriver.
- 3- Make sure that the power is off for your safety. Power cable plug must be unplugged.
- 4- The reflector and filament must be cleaned with a soft cloth, a smooth brush or cool or dry air. The cloth may be damp but never too wet and the cleaner should not include any chemical.
- 5- Refrain from using cleaning material likely to damage the reflector (cleanser etc.).
- 6- Insert the wire grid using a slotted screwdriver.

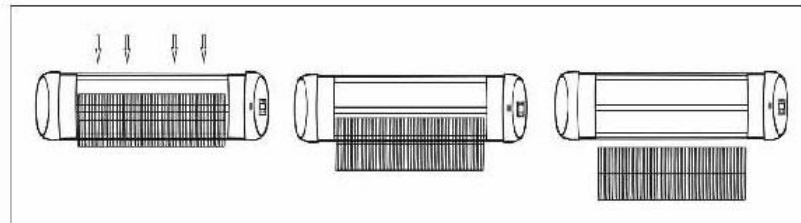

## Specifications

Model: NXA-1500R

Voltage	AC120V
Frequency	60Hz
Electric power(W)	1500W



This symbol on the product or its packaging indicates that the appliance cannot be treated as normal domestic trash, but must be handed in at a collection point for recycling electric and electronic appliances.

Your contribution to the correct disposal to the product protects the environment and the health of your fellow men. Health and the environment are endangered by incorrect disposal. Further information about recycling of this product can be obtained from your local town hall, your refuse collection service, or in the store at which you bought the product.

Thank you for purchasing this product! If you have questions about assembly or operation of this product, are missing parts, or if the product is damaged, please contact us via **Amazon Message** or call customer serve Phone: **213-4467172**.

**IMPORTANT**

Do not return this product to the store.

Simply call our customer service department for any questions or concerns:

**213-4467172**

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE REQUIRED FOR WARRANTY SERVICE.

**AVIS**

Ne pas retourner ce produit au magasin.

Veuillez appeler le service à la clientèle pour toutes questions au:

**213-4467172**

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

**IMPORTANTE**

No devuelva este producto a la tienda.

Sólo hay que llamar nuestro departamento de servicio

al cliente en caso de tener preguntas o inquietudes:

**213-4467172**

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Add:9733 Topanga Canyon Blvd. APT310, Chatsworth, CA 91311

Phone: 213-4467172