 


# Instruction Manual

Remote Tower Fan

Model NO.: 5312

---

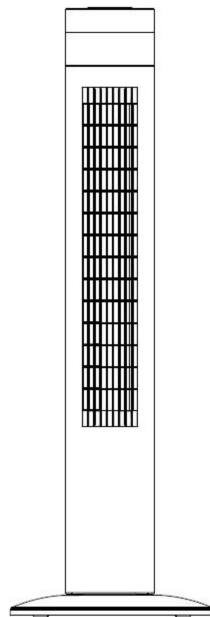

Please read this manual carefully before operating this product  
Keep this manual for further reference.

## **Part 1 IMPORTANT SAFEGUARDS**

When using an electrical appliance, basic safety precautions should always be observed, including the following:

### **READ ALL INSTRUCTIONS BEFORE USING**

**WARNING: To reduce the risk of fire, electric shock, or injury to person:**

1. This fan is for household use only.
2. Before using for the first time, please check that your voltage is in accordance with the product's nameplate requirements.
3. Please check status of the power cord and plug before use for safety.
4. Always turn the fan OFF and unplug it from the electric outlet when it is not in use.
5. Caution is necessary when the appliance is used near children.
6. Do not run the power cord under carpets and do not cover the cord with throw rugs. Do not put cord under furniture or appliances. Arrange cord away from traffic areas so that people will not be tripped over by it.
7. Do not operate any fan with the damaged cord or plug. Discard the fan or return it to an authorized service facility for examination and repair.
8. If the fan's power supply cord is damaged, it must be replaced by the manufacturer or its service agent to avoid a safety hazard.
9. Use the fan in a well-ventilated area. Place the fan at least 8 inches from any walls to ensure the proper air flow during the usage. The fan cannot be located immediately below or close to the curtain.
10. Do not obstruct the airflow with any objects or place anything inside the fan opening.
11. Do not use the fan in areas where curtains could be sucked in.
12. Only place the fan on a hard, flat, dry floor.
13. Do not use under extreme temperatures, humidity, or dusty environments.

14. Do not put heavy objects on the fan.
15. Do not place the fan below the power outlet that will suck the cord inside to cause the damage.
16. When the fan is oscillating, do not manually touch the fan to avoid damage.
17. Always turn off the power supply before unplugging the power cord from the electric outlet to avoid a short circuit, fire or electric shock.
18. Do not twist or pull the power cord out.
19. Do not unplug the fan when your hands are wet, which might cause the danger of electric shock.
20. Children under 8 should not operate the fan.
21. This appliance is not intended for use by people (including children) with reduced physical/sensory/mental capabilities, or people who lack of experience and knowledge. Unless those ones mentioned above are under the supervision or guidance from people who are responsible for their safety.
22. Children should be supervised to ensure that they do not play with the appliance.
23. Ensure that the fan is switched off from the power supply before removing the guard.
24. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
25. Please unplug or disconnect the appliance from the power supply before the repair.
26. This product has overload protection (fuse). A blown fuse indicates an overload or short-circuit condition. If the fuse blows, unplug the product from the outlet. Replace the fuse following the user servicing instructions (Choose the appropriate fuse grade according to the product label) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or return to an authorized service facility for examination/repair.

 
**Warning:**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully into the electric receptacle, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to subvert this safety feature alone.

**To Change the fuse**

**The following should ONLY be conducted by a qualified professional person:**

1. Grasp plug and remove it from the electric receptacle. Do not unplug by pulling on the cord.
2. Open the fuse cover by sliding the fuse access cover on the top of the plug towards the blades as it is shown in the diagram below.
3. Remove the fuse carefully. Push the fuse from the other side or turn fuse holder upside down to remove fuse.



4. Risk of fire. Replace the fuse only with 5 Amp, 125 Volt fuse.
5. Close the fuse cover by sliding the fuse access cover on the top of the plug away from the blades.
6. Risk of fire. Do not replace the polarized plug as it has a safety device that should not be removed.

Discard product if its polarized plug is damaged.

**SAVE THESE INSTRUCTIONS**



 
## Part 2 Brief introduction

This tower fan is equipped with multiple functions, such as 3 speeds, 3 modes, 85 degree oscillation, 12H timer, remote control. With the above functions, our tower fan can provide coolness and a healthy and luxury lifestyle.

## Part 3 Specification

MODEL NO	RATED	POWER	CLASS
5312	120V, 60Hz	50W	II


## Part 4 Structure and parts

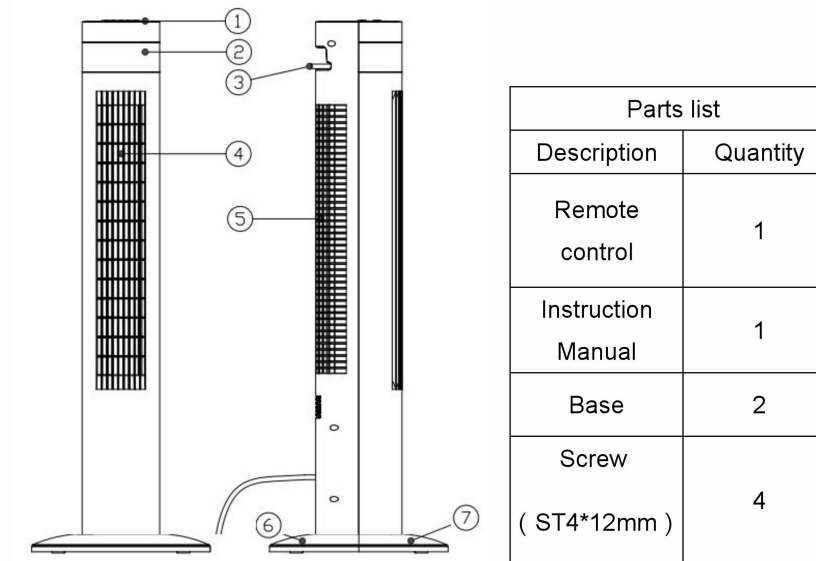



1. Head      2. Display      3. Remote control      4. Air outlet  
5. Air inlet      6. Base A      7. Base B

## Part 5 Installing

 1. Taking out the two bases from the gift box. Connect together. (Shown in below pic)

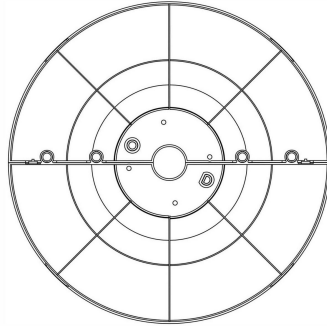


  2. Connect fan body with the base by 4pcs screws. (Shown in below pic)

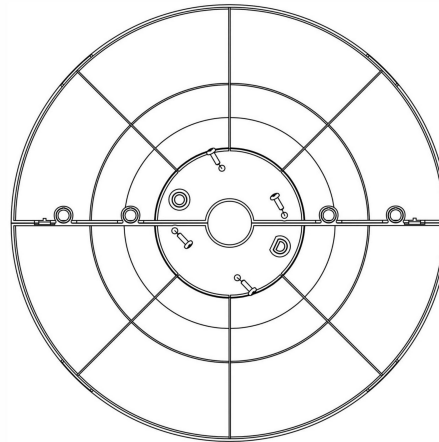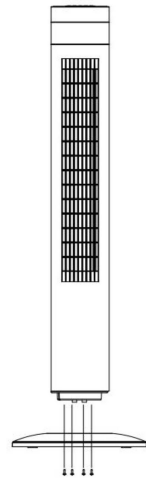


## Part 6 Function

  1. Temperature indicator
2. Timer indicator
3. Oscillation indicator
4. Low fan speed
5. Middle fan speed
6. High fan speed

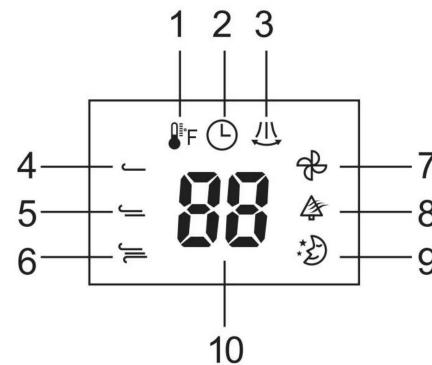

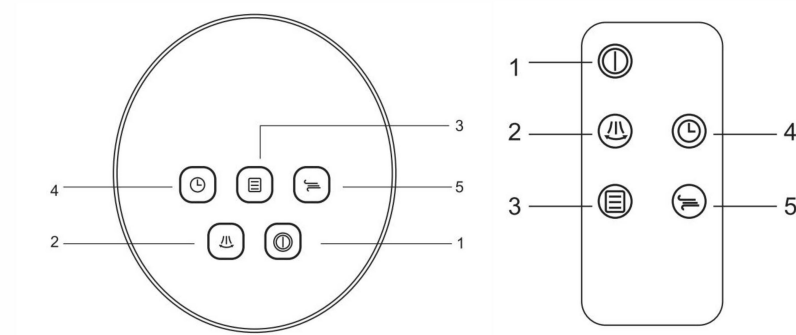

7. Normal fan mode
8. Natural fan mode
9. Sleeping fan mode
10. Show ambient temperature and timer hours.





1. Power button
2. Oscillation button
3. Fan mode button
4. Timer button
5. Fan speed button


## 1、ON/OFF

Press this ON/OFF button  to turn the fan ON/OFF. Press it once, the fan will start operation and shows the default wind level 1. Press the  button again to stop the fan.


## 2、Mode

The model have three modes: Normal/ Natural/ Sleeping, when you turn on the fan, the default mode is Normal wind mode, the LED screen will indicate , if you want to change the mode, please press , and choose the mode you want.

 
 
 
### Normal wind mode:

The Normal light indicator  will display when this mode selected.



### Natural wind mode:

The Natural light indicator  will display when this mode selected .

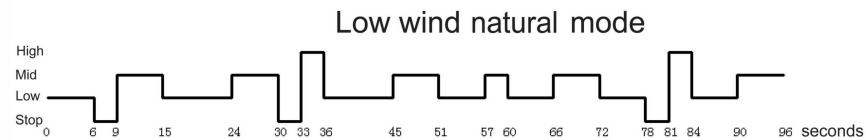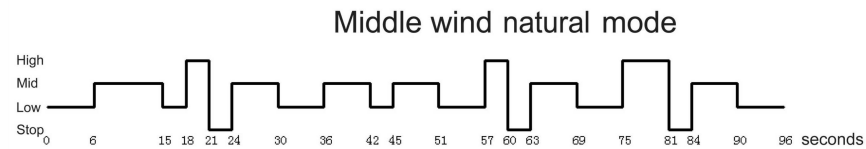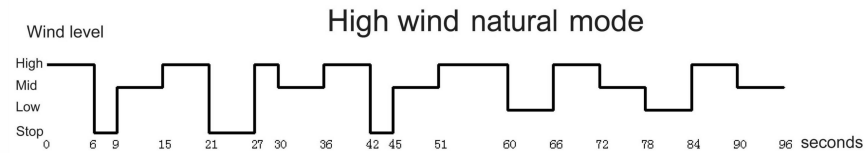
The fan will run in cycle as below image:





#### Sleep wind mode:

The Sleep light indicator  will display when this mode selected, the fan will run into the Min normal wind and the buzzer will be turned off immediately. If you don't operate this fan for 5 seconds, the light will dim and then go out after 5 seconds. If you want to change the wind speed, just Press  to choose the wind speed ranging from 1-3. In this mode the wind level will reduce 1 wind level in every single half an hour and keep Wind Speed Level 1 until it turns off.


#### 3、Oscillation

Press this  button, the fan will oscillate from the left to the right automatically.

#### 4、Timer

Press timer, then Press  to choose the duration of time. The timer is 12 hours. To cancel the set timer, press the "Timer" button again and press  button to set as 00 Hr.

#### 5、Wind Speed

Press  to choose the wind speed ranging from 1-3.

## Part 7 Maintenance and Storage

1. Always remove the plug from the socket-outlet and stop the fan before cleaning it.
2. Clean the external surfaces of the fan with a soft damp (not dripping wet cloth)

### **WARNING:**

**Do not immerse the fan into the water.**

**Do not use any cleaning chemicals such as detergents and abrasives. Do not allow the interior to get wet as this could cause dangerous problem.**

3. When the unit is not in use, make sure that it is unplugged from the wall socket. To store the fan, you may pack it in the original carton and store it in a cool and dry place.
4. In case of malfunction or doubt, do not try to repair the fan yourself, it may result in a fire hazard or electric shock.

## Part 8 After sale service

This appliance has a warranty of 1 year from the date of purchase, considering the following notes:

1. Guarantee is only valid showing the invoice or purchase ticket.
2. Damage caused during transportation, negligence, incorrect installation or installation, and external influences such as atmosphere or electric rays, floods, humidity, etc. are not covered by the guarantee.
3. This warranty will void when it is discovered that they have been subjected to repairs, alterations or interventions by any unauthorized persons.

Thank you for purchasing this product! If you have questions about the product such as missing parts, damaged products, product assembling and operation etc., please contact us via **Amazon Message** or customer service phone: **213-4467172**

### **IMPORTANT**

Simply call our customer service department for any consulting:

**213-4467172**

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY  
SERVICE.

### **AVIS**

Veuillez appeler le service à la clientèle pour toutes questions au:

**213-4467172**

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE  
GARANTIE.

### **IMPORTANTE**

Sólo hay que llamar nuestro departamento de servicio  
al cliente en caso de tener preguntas o inquietudes:

**213-4467172**

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO  
BAJO GARANTÍA.

**Add: 9733 Topanga Canyon Blvd. APT310, Chatsworth, CA 91311**

**Phone: 213-4467172**