


INSTRUCTION MANUAL TOWER FAN

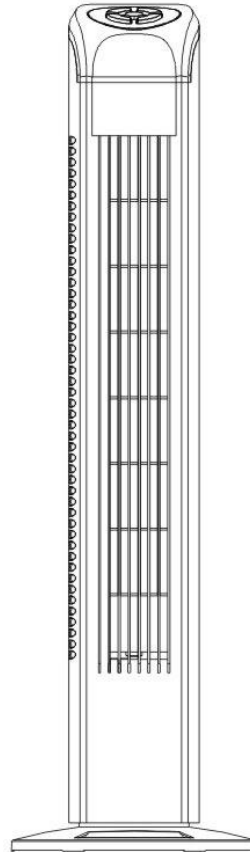

ITEM NO:6903
MODEL:JTF-03-R
120V,60Hz 60W

INSTRUCTION FOR USE

Please read these operating instructions carefully before connecting your device to the mains. In order to avoid damage due to incorrect use .Please pay particular attention to the safety information .If you pass the device on to a third party, these operating instructions must also be handed over as well.

WARNING

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury.

SAFETY INFORMATION

1. Incorrect operation and improper handling can lead to faults on the device and injuries to the user.
2. In the event of improper use or incorrect handling, no responsibility will be undertaken for any damage that may occur.
3. Before you put the plug into the socket, please check that the type of current and mains voltage correspond to the instructions on the rating label on the back of the appliance.
4. It is dangerous to life due to electric shock! Do not immerse the unit or mains plug in water or other liquids. However, if this happens, remove the mains plug immediately and then have the unit checked by an expert before using it again.
5. Do not operate the device if the mains cable or the mains plug shows signs of being damaged. In such cases take the device to a specialist for checking and repair, if necessary.
6. Never remove the mains plug from the socket by pulling on the mains cable , or with wet hands.
7. Ensure that the mains cable does not hang over sharp edges.Do not leave its cable or wires on the floor which people will trip over.
8. Keep the appliance away from humidity, and protect it from splashes.
9. Keep the appliance away from hot objects (e.g. hot plates) and open flames.
10. If the supply cord is damaged, it must be replaced by the qualified people in order to avoid a hazard.
11. This appliance can be used by children aged from 8 years and older and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
12. Children can not play with the appliance.
13. Cleaning and user maintenance shall not be made by children without supervision.
14. Keep the appliance and its cord out of the reach of children who are under 8 years old.
15. The appliance should not be operated by means of an external timer-switch or by means of a separate system with remote control not originally belonging to this appliance.
16. Use the appliance on a flat, dry and heat-resistant surface.
17. This appliance is intended to be used in households and similar applications.

18. Never leave the device unattended during the use.
19. Do not store or operate the appliance in the open air.
20. Keep the appliance in a dry place, inaccessible to children(in its packaging)
21. Never put fingers or any other objects through the grilles(fan guards)when the fan is running.
22. The appliance must be assembled completely before the use .
23. Watch out for long hair! It can be caught in the fan owing to the air turbulence.
24. Do not point the air flow to the people for a long time.
25. The rotor guard shall not be dissembled/opened to clean the rotor blades.

TOWER FAN OPERATION INSTRUCTIONS :

1. Set the appliance on a dry,level and sturdy surface.
2. Plug the appliance into the mains.

To have oscillation,press"OSC"button once.It will start oscillation

To stop oscillation,press"OSC"button once again.It will stop oscillation.

POWER SPEED SELECTION

To turn on the fan ,press"ON/OFF"button once .It will start at low speed fan setting.

To select fan speed,continue to press"SPEED"button to desired speed.


Setting(LOW MED HIGH)=slow speed,medium speed&high speed.

To turn it off ,press"ON/OFF"button once again .It will stop immediately.

TIMER

The timer can set up to 7.5 hours.Continue to press "TIMER"until the timer indicators(0.5H/1H/1.5H/2H/2.5H3H/3.5H.....7.5H)illuminate to your desired time .It will turn itself off when time is up.

To cancel the timer,continue to press the"TIMER"until all the timer indicator goes off.

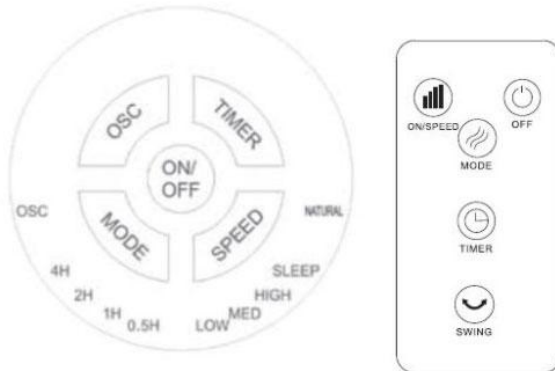

MODE

After the fan start-up,press wind speed adjustment button “MODE”.There are three wind types of general wind,natural wind and sleep wind .Press the button every time ,then buzzer will make a noise of change type.It indicates you have changed the corresponding wind type ,then the speed indicator lights on.

REMOTE CONTROL

The remote control with CR2025 button battery, please pull out white film before the use.

CLEANING

Before servicing the fan and after each use ,switch off the appliance and unplug the mains cable from the socket.

Never immerse the appliance in water(danger of short-circuit).

To clean the appliance,only wipe it down with a damp cloth and then dry it carefully.Always take out the mains plug at first.Take care that excessive dust does not build up in the air - intake and air -outlet grille ,and clean it occasionally using a dry brush or vacuum cleaner.

TECHNICAL DATA

OPERATING VOLTAGE:120V

POWER CONSUMPTION:60W

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

WARNING: To reduce the risk of fire, electric shock, or injury to person:

1. This fan is for household use only.
2. Before using for the first time, please check that your voltage is in accordance with the product's nameplate requirements.
3. Please check status of the power cord and plug before use for safety.
4. Always turn the fan OFF and unplug it from the electric outlet when it is not in use.
5. Caution is necessary when the appliance is used near children.
6. Do not run the power cord under carpets and do not cover the cord with throw rugs. Do not put cord under furniture or appliances. Arrange cord away from traffic areas so that people will not be tripped over by it.
7. Do not operate any fan with the damaged cord or plug. Discard the fan or return it to an authorized service facility for examination and repair.
8. If the fan's power supply cord is damaged, it must be replaced by the manufacturer or its service agent to avoid a safety hazard.
9. Use the fan in a well-ventilated area. Place the fan at least 8 inches from any walls to

ensure the proper air flow during the usage. The fan cannot be located immediately below or close to the curtain.

10. Do not obstruct the airflow with any objects or place anything inside the fan opening.
11. Do not use the fan in areas where curtains could be sucked in.
12. Only place the fan on a hard, flat, dry floor.
13. Do not use under extreme temperatures, humidity, or dusty environments.
14. Do not put heavy objects on the fan.
15. Do not place the fan below the power outlet that will suck the cord inside to cause the damage.
16. When the fan is oscillating, do not manually touch the fan to avoid damage.
17. Always turn off the power supply before unplugging the power cord from the electric outlet to avoid a short circuit, fire or electric shock.
18. Do not twist or pull the power cord out.
19. In order to avoid the danger of electric shock, do not unplug the fan when your hands are wet.
20. Children under 8 should not operate the fan.
21. This appliance is not intended for use by people (including children) with reduced physical/sensory/mental capabilities, or people who lack of experience and knowledge. Unless those ones mentioned above are under the supervision or guidance from people who are responsible for their safety.
22. Children should be supervised to ensure that they do not play with the appliance.
23. Ensure that the fan is switched off from the power supply before removing the guard.
24. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
25. Please unplug or disconnect the appliance from the power supply before the repair.
26. This product has overload protection (fuse). A blown fuse indicates an overload or short-circuit condition. If the fuse blows, unplug the product from the outlet. Replace the fuse following the user servicing instructions (Choose the appropriate fuse grade according to the product label) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or return to an authorized service facility for examination/repair.

WARNING:

 
This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully into the electric receptacle, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to subvert this safety feature alone.

TO CHANGE THE FUSE

The following should ONLY be conducted by a qualified professional person:

1. Grasp plug and remove it from the electric receptacle. Do not unplug by pulling on the cord.

2. Open the fuse cover by sliding the fuse access cover on the top of the plug towards the blades as it is shown in the diagram below.
3. Remove the fuse carefully. Push the fuse from the other side or turn fuse holder upside down to remove fuse.



4. Risk of fire. Replace the fuse only with 5 Amp, 125 Volt fuse.
5. Close the fuse cover by sliding the fuse access cover on the top of the plug away from the blades.
6. Risk of fire. Do not replace the polarized plug as it has a safety device that should not be removed.

Discard product if its polarized plug is damaged.

SAVE THESE INSTRUCTIONS

Thank you for purchasing this product! If you have questions about the product such as missing parts, damaged products, product assembling and operation etc., please contact us via **Amazon Message** or customer service phone: **213-4467172**

IMPORTANT

Simply call our customer service department for any consulting:

213-4467172

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

AVIS

Veillez appeler le service à la clientèle pour toutes questions au:

213-4467172

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:

213-4467172

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Add: 9733 Topanga Canyon Blvd. APT310, Chatsworth, CA 91311

Phone: 213-4467172