



Key Largo Fire Pit

Installation Instructions for Key Largo, all
base materials and top styles



Contents

Contents.....	2
Required Tools.....	3
Placing and assembling the Table.....	4
Gas Connection.....	5
Igniter Installation.....	6
Locating Propane tank.....	8
Finishing Touches.....	9

Required Tools



- **Utility Knife**

To cut and remove packaging



- **2 Open Ended Wrenches**

To make gas connections



- **Leather Gloves**

To protect hands from rough edges found on the coffee table.



- **One (1) AAA Battery (not included)**


Required for piezoelectric igniter installation.



- **It is recommended that a minimum of two people assemble and install fire pit tables.**

Placing and Assembling the Fire Pit table


1. Remove access door from packaging
2. Remove all components from packaging.
3. Move the base without door to desired location and set into place.
4. When locating your coffee table, refer to the Crystal Fire manual and maintain clearance to combustibles.
5. Assemble as shown below.

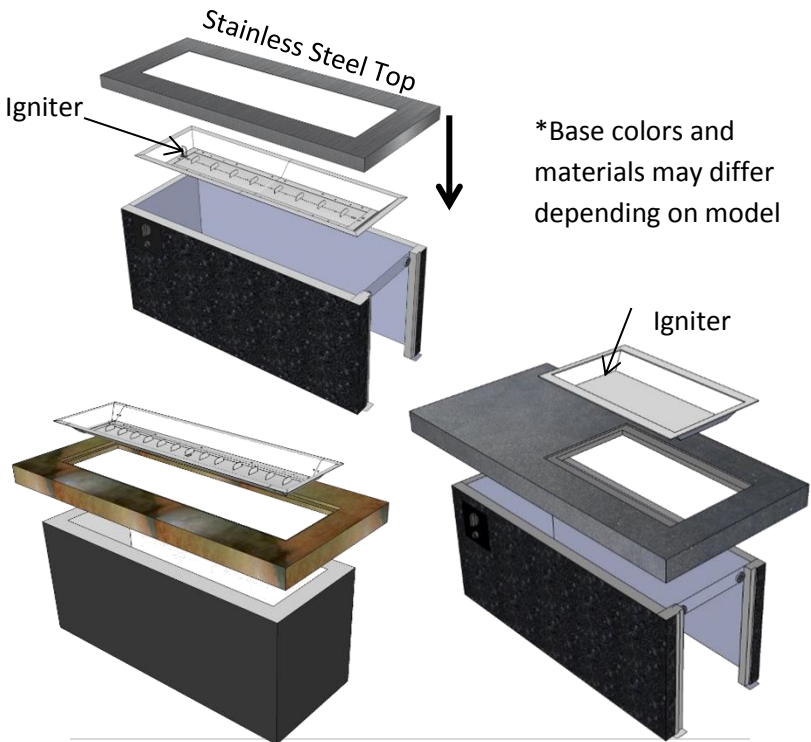

Read and understand your Crystal Fire owner's manual before beginning burner hookups or using the device.

Gas Connection

1. Remove stainless steel top (if applicable) and lift burner out of base to expose control valve.
2. Connect the incoming gas hose to the valve and tighten securely. Repeat with flexible metal gas line from the valve to the underside of burner. It is not recommended to use Teflon tape or pipe dope on the connection to the valve with flare fittings.
 - LPG installations use the hose and regulator provided with the burner.
 - For Natural Gas hookup information and any other info not listed here consult your Crystal Fire owner's manual.

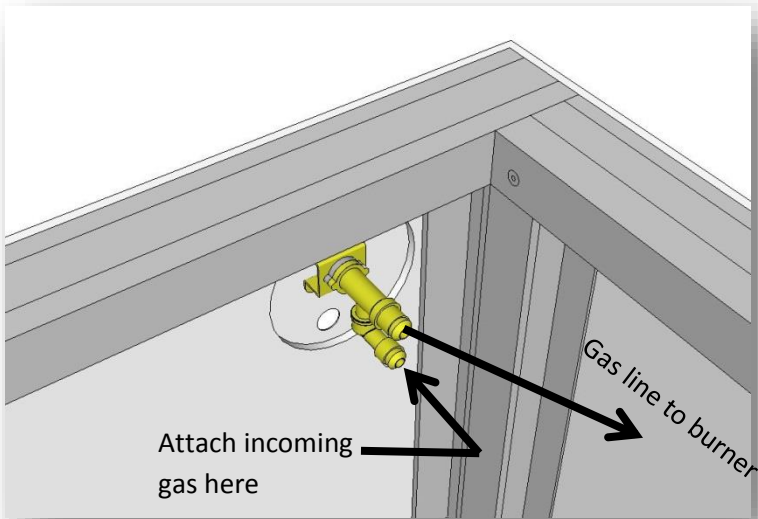


Igniter Installation


1. Make sure the valve is in the OFF position



2. Unscrew sparker cap and hex nut.
Install as shown below.

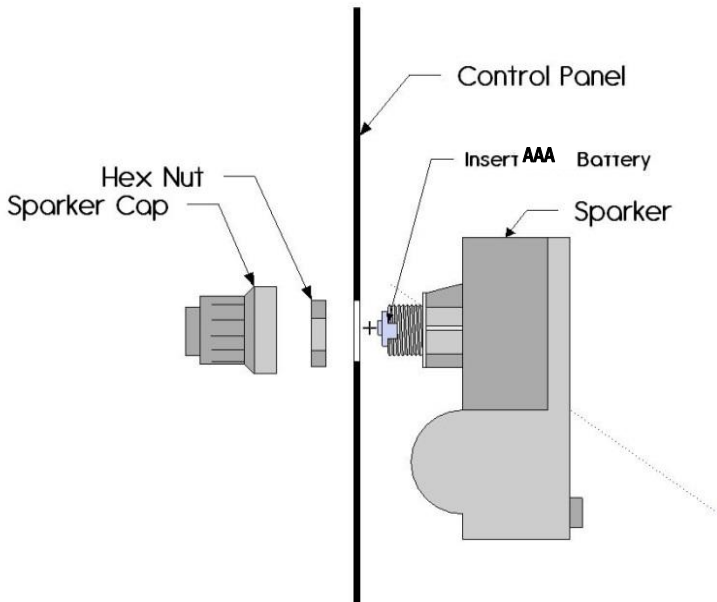


3. To properly install ignition system, a spark and ground wire need to be attached to the igniter box.
 - Start by plugging the black wire hanging from the burner in to one side of the back of the igniter.
 - Plug the included grounding wire (which arrives attached to the underside of the burner) into the back of the spark box

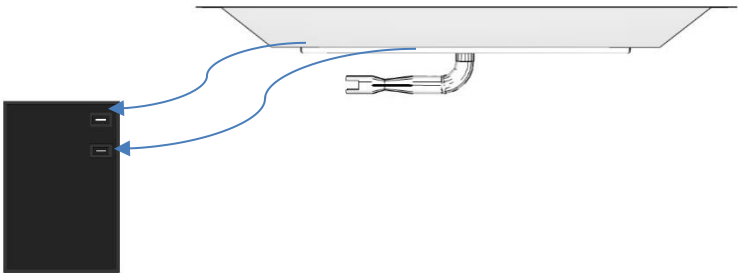

- Test system by pushing the button on the igniter. A continuous repeating spark between the igniter electrode and spark-receiving probe means everything is connected properly. Consult the troubleshooting section if spark is weak, intermittent, or not present.
4. Once ignition system is grounded and gas connections are secured and checked for leaks, set the burner back into its original position and replace the top if applicable.

Locating your Tank

1. Your tank should be positioned so that the fuel can be shut off after each use.
2. Slide the tank into the framework past the line shown below. This is to allow the door to close completely.
3. Confirm all hoses are clear and not touching the burner.

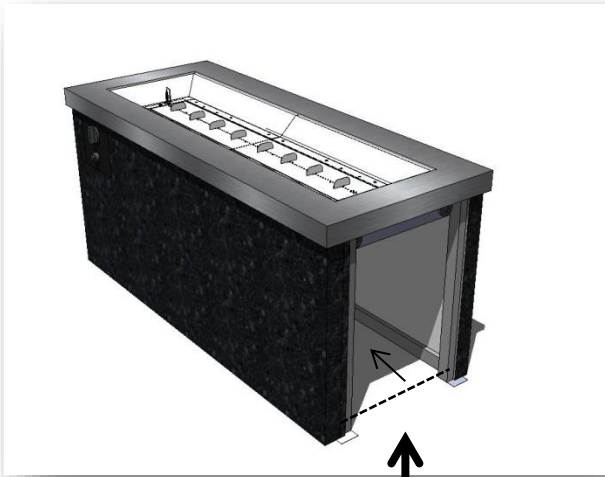

Position tank behind this line

- Install door by setting the bottom on the catching hooks first and then closing. Magnets in the table will hold door closed.

Finishing touches

Once fire pit is set up and in the desired position, scatter decorative glass on burner surface forming an even layer of beads.

- **DO NOT BURN WITHOUT GLASS OR OTHER DECORATIVE SUBSTRATE PRESENT**

IMPORTANT

Please consult your Crystal Fire instruction manual for detailed instructions and important information related to hooking up your linear burner, including safety information, proper tightening of connections with two wrenches and full burner setup and lighting instructions.

DO NOT ATTEMPT TO INSTALL CF-1242 or CF-1224 BURNER WITHOUT FIRST CONSULTING THE CRYSTAL FIRE OWNER'S MANUAL.

WARNING

After consulting the manual and following instructions, remember; before operating, all gas connections must be fully checked for leaks

Warranty: Fire pit tables are covered under a 1-year manufacturer's warranty. Please visit <http://www.outdoorrooms.com/warranty-form> to register your product.

© 2014 The Outdoor GreatRoom Company

14400 Southcross Drive West • Suite 100 • Burnsville, MN 55306
Toll Free: 1-866-303-4028 • Sales@OutdoorRooms.com