



IMPORTANT INFORMATION:

- All outdoor cameras for MotoProCam are weather and waterproof; however, they are not able to be submerged underwater for more than 60 seconds or cannot withstand direct contact (with 2-5 inches) with high pressure water pressure. If you submerge these cameras under water or wash these cameras with high pressure water, then warranty will be voided and condensation may occur inside the camera.
- The Main LCD unit is NOT waterproof, which means you need to protect it from weather and water if there is moisture possible
- The MotoProCam is able record audio if you would like. The Main unit with 3.5" LCD has a microphone and this can record audio. To have audio connected/recording, please connect the (yellow connectors) SOS button to the main DVR.
- SD Card: it is recommended that you format the SD card before you use the camera the first time and that you format the SD card every 30 days or more often. Formatting the SD card will erase all files, even protected files, so make sure you remove any file that you need and save it before you format the SD card
- New and Improved App to control WiFi: We recommend that you download the FREE app called "Lucky Cam" to control and use for your smartphone/tablet, then you can connect to MotoProCam using WiFi
- Stay up to date at motoproc.com or like us @ facebook.com/motoproc.com/ for updates, updated firmware and more!