 


# FOREST LANTERN

*User Guide*


BAREBONES

## PRODUCT COMPONENTS

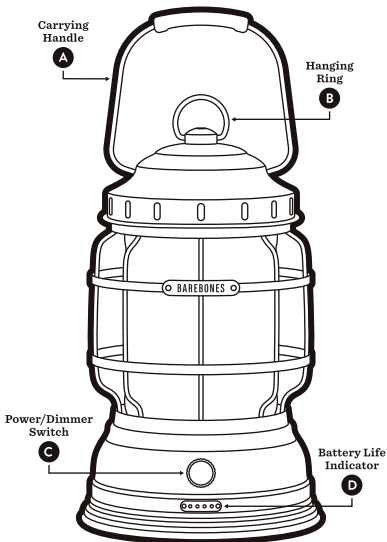


## PRODUCT COMPONENTS

*Back View*

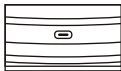

**E**

**USB-C Port**

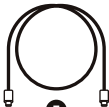

**F**


**USB-C to USB-C  
Cable Included**



**G**


**USB-C to USB-A  
Adapter Included**

*Bottom View*

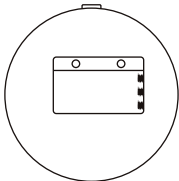

**H**

**Screws  
(x2)**

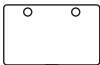

**I**

**Battery Cover**



**J**

**Li-ion Battery  
2-18650**

**DO NOT REMOVE  
PLASTIC WRAP ON BATTERIES**

## OPERATING INSTRUCTIONS

### TEST MODE

The Forest Lantern comes set in Test Mode. While in Test Mode, pressing the Power Switch **C** will turn the lantern on for 10 seconds.

**Note:** *The lantern cannot be manually turned off during the 10 second demonstration.*

### FUNCTIONAL MODE

To switch to Functional Mode, press and hold the Power Switch **C** for 10 seconds. The Battery Life Indicator **D** will flash 4 times confirming the mode has switched. You can also simply charge the lantern to switch to Functional Mode.

### ON/OFF

Press the Power Switch **C** once to turn the Forest Lantern on. Press it a second time to turn it off.

### ADJUSTING BRIGHTNESS

Turn the Dimmer Switch **C** clockwise to increase brightness and counter-clockwise to decrease brightness.

## REMOVING THE BATTERY

1. Place the Forest Lantern on its side so the base of the lantern is accessible.

**Note:** *Place the lantern on a clean, soft surface to prevent scratching.*

2. Using a Phillips-head screwdriver, remove the Screws **H** from the Battery Cover **I**.
3. Remove the Battery Cover **I**.
4. Remove the Li-ion Battery **J**.

## REPLACING THE BATTERY

1. Insert the Barebones specific Li-ion Battery **J** into place with the exposed metal connecting to the coils.

**Note:** *Do not remove plastic wrap on batteries.*

2. Test the battery connection by turning on the Forest Lantern.
3. Place the Battery Cover **I** into position.
4. Secure the Battery Cover **I** with Screws **H**.

**Note:** *Do not overtighten. Overtightening can damage the battery plate or strip the screws.*

**HOW OFTEN SHOULD I RECHARGE THE LANTERN?**

To prolong the life of the Lithium Ion batteries, it's important to keep your lantern charged. The batteries need to be charged every six months, even if not in regular use.

**WHY IS MY BATTERY LIFE INDICATOR BLINKING?**

The Battery Life Indicator  will begin blinking when it's time to charge the lantern.

**WILL I NEED TO REPLACE THE LED?**

The Forest Lantern was designed to not require LED replacement. It comes with a one year warranty and is rated for 20,000 hours of use.

## SPECIFICATIONS



<b>LED</b>	<b>5 WATT CREE</b>
<b>LUMENS</b>	<b>LOW: 35   HIGH: 200</b>
<b>TEMPERATURE</b>	<b>3000K - 3200K</b>
<b>VOLTAGE</b>	<b>3.6V DC</b>
<b>BATTERY</b>	<b>LI-ION 2-18650   4400mAh 3.7V 16.28Wh</b>
<b>RUN TIME</b>	<b>LOW: 80+ HRS   HIGH: 3 HRS</b>
<b>RECHARGE TIME</b>	<b>4-6 HRS</b>
<b>INPUT</b>	<b>5V USB-C</b>
<b>DIMENSIONS</b>	<b>7" x 7" x 9.5" (11" w/ HANDLE)</b>



**RoHS**



# BAREBONES



**BAREBONSLIVING.COM**

DESIGNED IN UTAH | MADE IN CHINA

1215 WILMINGTON AVE #140

SALT LAKE CITY, UT 84106

1.855.895.7040

SUPPORT@BAREBONSLIVING.COM



072122



PLEASE  
RECYCLE