

BMW OBDII Key programmer ADVANCED

Now works with K-Line and D-CAN bus



BMW OBD Key programmer ADVANCED is designed to program new original key or PCF7936 chip.

Key programming takes only 10-15 seconds (for CAS sw. versions before ISTA-P-41) and only 8-11 minutes for CAS with new firmware (sw. version ISTA-P-41 and higher).

Newer sw. version CAS (ISTA-P-41 and up) will only take longer time the first time you program the key. If you ever programmed this car – all next attempts will be fast within 10 seconds.

Also, the device turns off the factory security alarm (for the time of programming) and erases the memory of diagnostic faults via OBDII.

The ADVANCED kit also includes the HT Pro device and two HTspy keys for BMW and MINI Cooper.

www.mbkeyprog.com



+48 517 443 433
+48 22 724 99 96
info@mbkeyprog.com

Supported models

BMW 1' E88 (11/2006 — 10/2013)
BMW 1' E82 (11/2006 — 10/2013)
BMW 3' E90 (02/2004 — 08/2008)
BMW 3' E90 LCI (07/2007 — 12/2011)
BMW 3' E91 (02/2004 — 08/2008)
BMW 3' E91 LCI (07/2007 — 05/2012)
BMW 3' E92 (05/2005 — 02/2010)
BMW 3' E92 LCI (11/2008 — 06/2013)
BMW 3' E93 (09/2005 — 02/2010)
BMW 3' E93 LCI (11/2008 — 10/2013)
BMW 5' E60 (05/2003 — 12/2009)
BMW 5' E60 LCI (10/2005 — 12/2009)
BMW 5' E61 LCI (11/2005 — 05/2010)
BMW 6' E63 (05/2002 — 07/2010)
BMW 6' E63 LCI (04/2006 — 07/2010)
BMW 6' E64 (09/2002 — 07/2010)
BMW 6' E64 LCI (04/2006 — 07/2010)
BMW X1 E84 (04/2009 — 06/2015)
BMW X5 E70 (01/2007 — 12/2013)
BMW Z4 E89 (01/2008 — 08/2016)
MINI R56 (11/2005 — 07/2010)
MINI R56 LCI (04/2009 — 11/2013)
MINI Clubman R55 (10/2006 — 07/2010)
MINI Clubman R55 LCI (03/2009 — 06/2014)
MINI Cabrio R57 (11/2007 — 07/2010)
MINI Cabrio R57 LCI (04/2009 — 06/2015)
MINI Coupé R58 (01/2011 — 05/2015)
MINI Roadster R59 (01/2011 — 04/2015)
MINI Countryman R60 (01/2010 — 10/2016)
MINI Paceman R61 (03/2012 — 09/2016)

www.mbkeyprog.com



+48 517 443 433
+48 22 724 99 96
info@mbkeyprog.com

Device description



„D” LED

„K” LED

Option Switch

Car battery status

Coil for transponder program

Coil for key remote program

„Ready” LED



cable socket


LED button

LED



OBD plug

Device plug

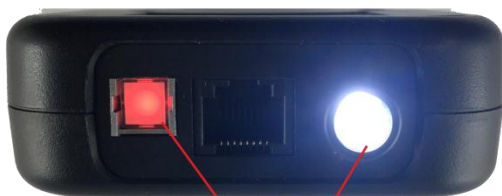

LED ON



www.mbkeyprog.com



+48 517 443 433
+48 22 724 99 96
info@mbkeyprog.com

The programmer has two diodes **D**, **K**, **Ready** and a **sound buzzer**.

LED features:

D LED indicates diagnostic status.

K LED shows the status of the data for key generation.

Ready LED



D - flashes **green** after establishing communication with the car. Light is always on: **green** on successful completion, **red** on failure.

K - **green** if the device has found all the data for the key. Flashing **red** if the data from DDE / DME is not read.

Red light is always on: it is possible to program only the “service key”

Sound signals:

1) Rising sound - from low to high - successful programming

2) Long constant sound - only “Service key” is possible.

Reconnect the OBDII and repeat again.

3) Lowering sound - from high to low - unsuccessful shutdown

4) Short double beep - insert the key into the ignition slot and turn on the ignition.

If the programmer LEDs blink red and a constant beep is heard immediately it means a programmer malfunction. Mail or call us to arrange the device repairing.

Alarm disabling

If your security alarm is off or you do not have security alarm at all then you do not need to do these operations. You can continue to the key programming procedures.

Make sure that the option switch is switched to the "Alarm Off" position.

Make sure that the car battery status shows 11 or higher voltage.

Connect the programmer to the car OBDII. (wake up the car's CAN bus: unlock the car door with a mechanical key or press the START/STOP button).

The LEDs on the programmer will blink

K – green

D - red

You will hear a **beep** and the LEDs will stop blinking

within 5-10 seconds. The alarm will turn off.



Don't try to start a car before programming is complete!

After completion, you will hear a beep and the LEDs will show the device status (see the device description - LED features).

Errors:

- The programmer LEDs quickly blink red for a long time (more than 20 seconds) or do not light up at all – **car communication error**.
- Make sure the car is not in sleep mode (press the car's START/STOP button).
- If the START/STOP button light is on and the device cannot do operations - it is probably an additional non OEM security system installed.

Key programming

The car should not be in sleep mode! The car's START/STOP button light should be on, if not - press START/STOP button or press the central locking button (for the old E60).

Make sure that the option switch is switched to the "Key Programming" position.

Make sure that the car battery status shows 11 or higher voltage.

1..Connect the device to the OBDII.

The LEDs will blink:

K – green

D - red or green

Wait for the Ready LED to blink.

On a car with an old CAS version (**up to ISTA-P-41**) or if the CAS was already programmed with this device:

the **K LED** will slowly blink **green** in 5-10 seconds.

On a car with the new CAS version (ISTA-P-41 and up), when you connect to this car first time:

Programming will start automatically and it will not be possible to start the car until its completion! CAS programming takes about 8-11 minutes.

Upon completion of programming, All of the LEDs will turn **green**.

2. Put the key in the device coil and hold it in this position until the work is completed. If all of the three LED diodes (**D, K and Ready**) light up (not blinking) **green** and you can hear one beep signal then the key/transponder is programmed.



www.mbkeyprog.com



+48 517 443 433
+48 22 724 99 96
info@mbkeyprog.com

Key programming

A) If the **D**, **K** and **Ready** LEDs are light up **green** and you heard **rising beep**, the car is ready to start.

B) If you hear **short multiple beeps**, insert the just programmed key into the ignition coil, turn on the ignition/press START/STOP button and wait until programming is done (it can take from 10 to 60 seconds). Do not disconnect the device until the procedure is done. Wait until D and K LEDs constantly light up **green** and you can hear a **rising beep** sound.

C) If the LED **D** lights up **green**, **K** lights up **red** and you can hear a **constant beep** it means that only the “service key” is programmed (read more about Service key option below).

D) If the LED **D** is **red** + lowering the sound signal an error has occurred (see errors).

Note: The device stores codes of all programmed keys – that’s why you can reprogram those keys to other vehicles.

You can watch the full process of programming new key here:

<https://youtu.be/mHrudo-lnl0>



www.mbkeyprog.com



+48 517 443 433
+48 22 724 99 96
info@mbkeyprog.com

Troubleshooting

Errors:

A) If the device LED flashes **green / red** alternately - writing key error.

Repeat everything from step 1 and if the error has been repeated, replace the key.

B) If LED **D** is **red** and you can hear a lowering **beep** - it is a CAS error. Repeat several times starting from step 1 and if the error is repeated, then programming with the car is not possible.

C) If the device's LEDs are off for a long time (for longer than 20 seconds) or quickly blink **yellow** - **there is a communication error with the car**. Make sure the car is not in sleep mode (**Press the car's START/STOP button**). If the START/STOP button light is on, the device operation is not possible (probably there is an additional (after factory) security system of the car installed).



Service Key

This key allows you to unlock and lock a car central lock with the remote control but does not allow starting the engine!

In case if all the data necessary for key programming was not read, the device can program the key only with the RF function.

If you program spare key ask the customer to start the car with original key, then open the car with the remote control of the service key and write it again according to "Key Programming" – it should takes 10-15 seconds.

A service key like any other key can be re-programmed to other cars.

Diagnostic fault codes and steering lock fault erasing.

Vehicle ignition is On.

Connect the device to the car. LED **D** on the programmer will turn **green + beep**.

Errors:

Programmer LED blinks **red** or does not light - **communication error with the car** (probably an additional security system (after factory) of the car is installed).




www.mbkeyprog.com



+48 517 443 433
+48 22 724 99 96
info@mbkeyprog.com

HTPro / HTspy key

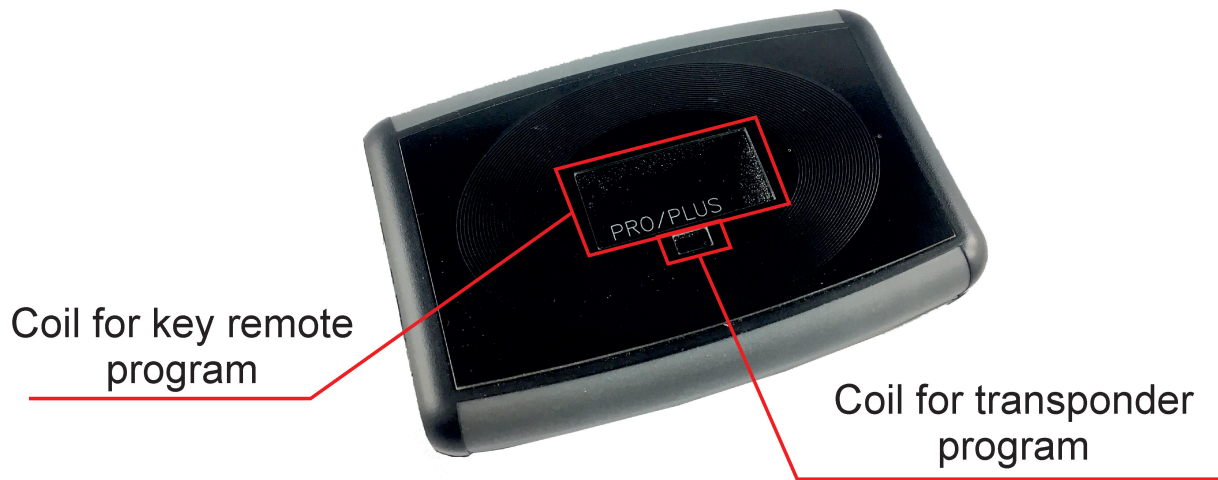

BMW HTspy key



Mini HTspy key

The ADVANCED kit includes HTpro and HTspy keys for BMW and MINI.

With these devices, you are able to ensure that all modules in the car are fully functional before programming a new key. This will allow you to avoid the situation that after programming the transponder/key, it turns out that, for example, you need to replace the CAS module and the programmed transponder in the new key, unfortunately, must be thrown away. When you use these devices, you can save information from the new key on your own computer and program another key to the car in the future without need to have a car.



www.mbkeyprog.com



+48 517 443 433
+48 22 724 99 96
info@mbkeyprog.com

HTpro / HTspy key

To work with HTpro and HTspy Key devices you must use two programs: **HTpro** and **HTag** (for Windows computers). Here is the process of programming the HTspy key to check if all the necessary modules in the car are functional.

1. Prepare a new key (PCF7936 transponder) and HTspy device.

The HTspy key is treated by the car just as a normal key. Therefore, to prevent the registration of two new keys in the CAS module (HTspy key + new key), first read the data from the new key that you want to program and then enter this data in HTspy key.

Start by connecting the HTprog device to the computer and inserting a new key (or the transponder itself) into the device coil, then launch the HTpro software. Now click the "**Read All**" button. After a while, the read data will appear. You must now change the information in line Pg.3 from "06" to "0E". After that click the "**W**" button. Read the information again by clicking the "**Read All**" button. If you see "0E" in the line Pg.3, it means that the information has been saved correctly and now click the "**Save**" button and save the file on the computer.

Now connect the HTspy key to the computer (if you want to program the BMW key, of course you choose the HTspy key in the shape of the BMW key, and if you want to make the Mini key you choose the HTspy key in the shape of the Mini key). Start the HTag software and click the "**Read**" button. You will see information read from the HTspy key. Now, click on the "**Load**" button and select the file saved by you with the information read from the new key. Information from the new key should now be loaded in the software, now click the "**Write**" button. **Remember not to disconnect the HTspy key from the computer from now until you start the car!** You can now go to the car to program HTspy key devices.

2. Programming the HTspy key device in the car.

The HTspy key programming process is identical to the programming process of the normal car key which is described earlier in this manual. After programming the HTspy key, start the car with it. If the car has started up, it means that all modules are functional and you can start programming the new key without worrying that the new key will not start the car. At this point, you can also run the HTag software, click the "**Read**" button and save the key data to your computer. Thanks to that you will be able to make another key to this car without the car.

You can watch the full process of programming new key with HTpro and HTspy devices here:

<https://youtu.be/2sHEiRvXy9s>



www.mbkeyprog.com



+48 517 443 433

+48 22 724 99 96

info@mbkeyprog.com