

WOODEN CAMERA®

C-BOX (CONVERTER, V-MOUNT, GOLD MOUNT)

INSTALLATION GUIDE



NOTE: The C-BOX will accept all common 1080p and 1080i signals. PsF signals and 4K input are not supported.

© Wooden Camera, Inc. 2011-2019

INSTALLATION

Mini USB
C-BOX (V-Mount) **OR** C-BOX (Gold Mount)

1. For proper use, a battery plate must be wired or connected to the camera directly.
2. Select C-BOX, align and attach Side B to Camera Battery Plate.
3. Select Battery, align, and attach to C-BOX.
4. Power will pass from Battery to C-BOX and into Camera Battery Plate.
5. 5V power is available via Mini USB for wireless transmitter.

