# Wooden Camera®

SONY F55/F5 CABLE PROTECTOR

### INSTALLATION GUIDE



## INCLUDED

1x 1/4-20x1/2 socket cap button (for attaching protector directly to camera body with no top plate)

1x M2.6 philips head screw (for threading into tape hook area)

4x 1/4-20x5/8 socket cap screws (for attaching Top Plate (F55/F5) over protector)

4x 1/4 inch washers (only 3 are needed, one is a spare)

© Wooden Camera, Inc. 2011–2019


## INSTALLATION

### WITH TOP PLATE

- 1. Locate Cable Protector and M2.6 Hole in the Tape Hook Area on Camera Body.
- Position Cable Protector over Camera Body as shown below, select and tighten M2.6 Screw with phillips head.
- 3. Select and align Washers over 1/4x20 Holes on Camera Body.
- 4. Locate and align 1/4x20 Holes of Top Plate and Camera Body, select and tighten 1/4x20 Screws with allen wrench.

### WITHOUT TOP PLATE

- Locate Cable Protector and M2.6 & 1/4x20 Holes in the Tape Hook Area on Camera Body.
- 2. Align Cable Protector over Camera Body as shown below.

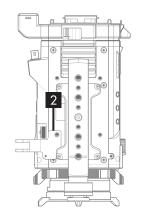

- 3. Select and tighten M2.6 Screw to Camera Body with phillips head.
- 4. Select and tighten 1/4x20 Screw to Camera Body with allen wrench.

