WOODEN CAMERA® D-BOX PLUS ALEXA MINI

INSTALLATION GUIDE



TILTA OPTION 1

- 1. Loosen screws on front of D-Box Plus to remove back cover plate.
- 2. Remove foam plugs from upper V-Mount holes.
- 3. Install (2) M3x10mm Phillips Flat Head Screws through cover plate into NATO Rail.
- 4. Re-install D-Box Plus onto back cover plate.



TILTA OPTION 2

- 1. Align NATO Rail with lower M4 holes on D-Box Plus.
- 2. Install NATO Rail captured M4 screws into D-Box Plus.



© Wooden Camera, Inc. 2011-2019

BATTERY SLIDE

- 1. Loosen screws on front of D-Box Plus to remove back cover plate.
- 2. Choose desired V-Mount or Gold Mount hole pattern and remove foam plugs.
- 3. Using (4) M3x6mm Phillips Flat Head Screws, install cover plate onto battery mounting plate (ie Battery Slide).
- 4. Re-install D-Box Plus onto back cover plate.

BATTERY SWING

- Align Battery Swing Bracket with lower M4 holes on D-Box Plus.
- 2. Install Battery Swing captured M4 screws into D-Box Plus.

ARRI RAB-1

- Locate center M4 screws holes on D-Box Plus.
- 2. Align and tighten (2) M4 screws on RAB-1 into D-Box Plus.







