

WOODEN CAMERA®

D-BOX URSA MINI

INSTALLATION GUIDE



© Wooden Camera, Inc. 2011–2019

INSTALLATION

1. Remove battery plate from D-Box.
2. Remove D-Box from back cover plate.
Do not move cover plate past the D-Box's white connector.
3. Connect the D-Box's white cable connector to the camera.
4. Screw cover plate onto the camera.
5. Screw the D-Box onto the cover plate.
6. Connect battery plate's white connector to the D-Box.
7. Screw the battery plate onto the D-Box.

