## WOODEN CAMERA® E-MOUNT TO PL MOUNT PRO (SONY FS7)

## INSTALLATION GUIDE




NOTE: FS7 Top Plate Required

© Wooden Camera, Inc. 2011-2019

## INSTALLATION

Support Ring E-Mount to PL Mount 2x 1/4x20X1/2 socket cap screws

- 1. Locate and align 1/4-20 Holes on Support Ring and Top Plate, select and partially tighten 1/4-20 Screws with allen wrench.
- 2. Select PL Mount, locate White Mark on Lens Mount and Sony E-Mount.

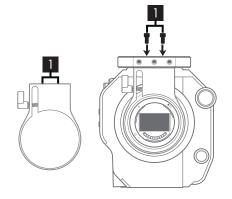

- 3. Aligning both White Marks, fit Lens Mount to E-Mount and gently twist clockwise to lock into place.
- 4. With PL Mount attached to E-Mount fully tighten 1/4-20 Screws and tighten Thumbscrew to secure.

