

WOODEN CAMERA®

EASY TOP (RED DSMC2)


INSTALLATION GUIDE



© Wooden Camera, Inc. 2011-2019

NOTE

To re-orient LEMO Connectors, with Top Plate removed locate & loosen M4 Screw with allen wrench, rotate Connectors to desired orientation, re-tighten M4 Screw, and re-install Top Plate.

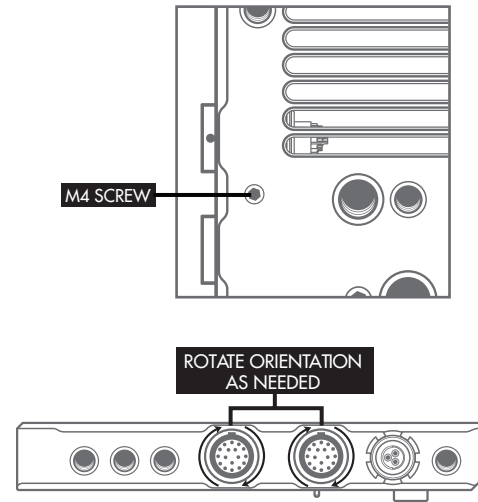

INSTALLATION

3/16 allen wrench
4x 1/4-20 captured screw

1. Select Easy Top and locate LCD Connector on side of Camera Body.

2. Align and connect LCD Connectors, secure Side to Camera using Thumbwheels.

3. Make sure that contacts are free of dust, are fully engaged, and evenly depressed during installation.

4. Locate, align, and connect LCD Connectors of Top Plate and top of Camera.

5. Locate corresponding 1/4-20 Screws on Top Plate, tighten 1/4-20 Captured Screws with allen wrench.

