

WOODEN CAMERA[®]

TOP PLATE (SONY FS5)

INSTALLATION GUIDE



© Wooden Camera, Inc. 2011-2019

INSTALLATION

- 4x 1/4-20x1/2" socket cap
- 1x Tape Hook

1. Locate 1/4-20 Holes on top of Camera and both Right & Left Top Plates.
2. Select and align 1/4-20 Holes of Right Plate and Camera Right.
3. Select and tighten 1/4-20 Screws to secure Right Plate to Camera Body. Install Tape Hook as shown as shown below.
4. Repeat steps 2-3 to attach Left Plate to Camera Left.

