## WOODEN CAMERA®


UNIVERSAL LENS SUPPORT (15mm LW)

## **INSTALLATION GUIDE**




© Wooden Camera, Inc. 2011–2019

## **INCLUDED**

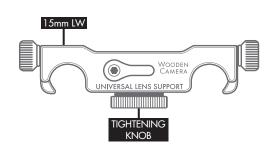





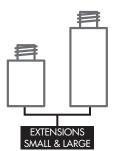





## INSTALLATION

NOTE: Lens Support comes with factory installed 1/4-20 Screw. To remove and install additional adapters follow the steps.


 Select Lens Support, loosen thumbscrew, locate and loosen Tightening Knob to remove 1/4-20 Screw.

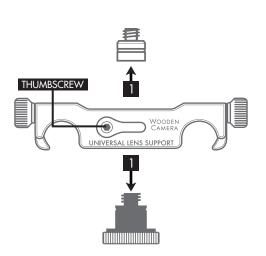

 Choose desired adapter type. For example: select and tighten Y Bracket to Large Extension and install as shown below.

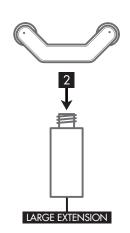

 Select Lens Support, insert Y Bracket, insert Tightening Knob, adjust up or down to proper lens height, tighten Thumbscrew until vertical position is secure.

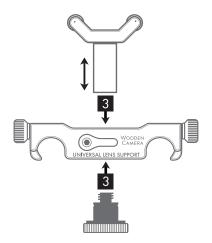

- 4. Place Lens Support on Rods and tighten using Thumbwheels.
- Unlock Thumbscrew, center Y Bracket position under Lens, adjust height and retighten Thumbscrew.

