

WOODEN CAMERA[®]

 
UNIVERSAL LENS SUPPORT (19mm/15mm STUDIO)

INSTALLATION GUIDE



© Wooden Camera, Inc. 2011-2019

INCLUDED

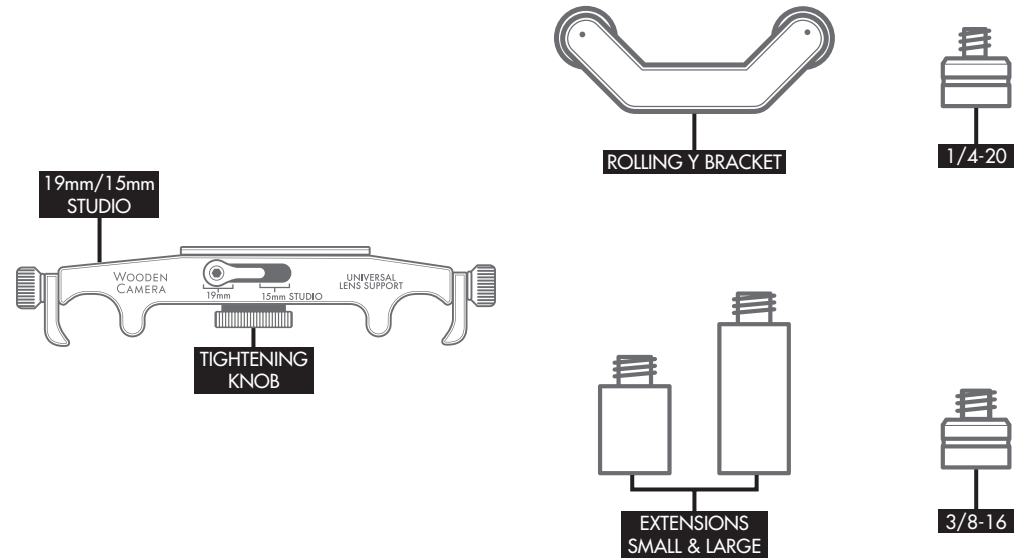

INSTALLATION

NOTE: Lens Support comes with factory installed 1/4-20 Screw. To remove and install additional adapters follow the steps.

1. Select Lens Support, loosen thumbscrew, locate and loosen Tightening Knob to remove 1/4-20 Screw.
2. To switch from 19mm to 15mm Studio, loosen and slide Thumbscrew to desired position and re-tighten, adjust the Rod Clamp size by turning the Thumbwheels.

3. Choose desired adapter type. For example: select and tighten Y Bracket to Large Extension and install as shown.

4. Select Lens Support, insert Y Bracket, insert Tightening Knob, adjust left or right position and up or down to proper lens height, tighten Thumbscrew until vertical & horizontal position is secure.

5. Place Lens Support on Rods and tighten using Thumbwheels.
6. Unlock Thumbscrew, center position under Lens Foot and re-tighten Thumbscrew.

