

# WOODEN CAMERA®

## VX CAMERA MIC

### PRODUCT GUIDE



© Wooden Camera, Inc. 2011-2019

## TROUBLESHOOTING

1. Check that the mic is powered on.  
If not powering on, charge by USB-C.
2. If VX Mic power is on but no audio signal is being displayed in camera:
  - A. check cable for proper connection on both ends
  - B. check camera menu for audio input options
  - C. check that camera levels are set appropriately

## INSTALL MIC

1. Before first use, charge using included USB-C wall plug and cable. Corresponding LED will illuminate orange when charging.
2. Attach to camera using shoe mount or 1/4-20 on bottom.
3. Push and hold black button to power on.
4. Power LED will indicate **GREEN** for battery life of 50% and higher, **YELLOW** for 10-50%, & **RED** for 10% and lower.



5. Attach coiled stereo cable to mic and camera.



## SETTINGS

6. Adjust camera settings to manual control and set levels appropriately.

