

WOODEN CAMERA[®]

WIRELESS SIDE PLATE ADAPTER (URSA)

INSTALLATION GUIDE



© Wooden Camera, Inc. 2011-2019

INSTALLATION

- 1x M3 X 20 Socket cap
- 1x M3 X 16 Socket cap

1. Locate and remove the two screws on Side Cover Plate.
2. Holding Cover Plate in place select and align Wireless Side Plate as shown below.

3. Select M3X20 Screw and align to top M3 Hole, tighten with allen wrench.
4. Select M3X16 Screw and align to bottom M3 Hole as shown below, tighten with allen wrench.

