

WOODEN CAMERA[®]

RIGHT ANGLE XLR CONNECTOR

Repositioning The Orientation

1. Unscrew the boot from the connector and slide onto the cable.
2. Remove the top cover.
3. Rotate the housing to the desired angle. Make sure the notches on top line up.
4. Replace the top cover.
5. Re-screw the boot onto the connector.

