

WOODEN CAMERA®

EASY TOP MODULE INSTALLATION GUIDE



1. Gather the Easy Top (Weapon), module upgrade kit, and a tiny Phillips head screwdriver.

2. Using the included wrench, remove the two M2 socket cap screws holding the module in place.

3. Using the tiny Phillips screwdriver, remove all four screws holding down the pogo pins.



4. Using the included Fischer wrench, remove the Fischer nut from the Easy Top.

5. Remove the old module and position the new module into place.

6. Thread the Fischer cable through the Easy Top. Using the included Fischer wrench, tighten the Fischer nut.



7. Using M2 socket cap screws, install the new module.

8. Reinstall the pogo pins.

9. The Easy Top (Weapon) is now powered by the DSMC2 and ready to use.