

UNIFIED BASEPLATE

1. Remove Manfrotto Clamp and place face down on table. Align Unified Baseplate 15mm posts over Manfrotto Clamp's 1/4-20 holes. Insert and tighten four 1/4-20x3/8 socket cap screws.



2. Loosen two M4 socket caps on Unified Baseplate to adjust rod height.



METABONES

1. Loosen M4 screws holding lens support clamp and slide forward to align with Wooden Camera or Metabones lens adapter with 1/4-20 threaded hole.
2. Select appropriate length lens support rod and slide through lens support into 1/4-20 threaded hole on lens adapter.
3. Tighten lens support clamp screws.

ROTATE HANDLE

1. If top XLR unit is used, unscrew wood grip from handle.
2. Re-install wood grip on opposite side of handle mount.

© Wooden Camera, Inc. 2011-2017

WOODEN CAMERA® UNIFIED DSLR CAGE

INSTALLATION GUIDE

1



2



3



INSTALL CAMERA

1. For Sony A7/A9 cameras, align front of camera with edge of baseplate. For Panasonic GH5 cameras, align camera rear with rear edge of baseplate.
2. Attach camera to baseplate using the 1/4-20 low profile screw.
3. Loosen M4 screws holding vertical 15mm rod and lower top plate around camera top.

1



2



3



SIDE HANDLE

1. Unlock thumbscrew, rotate, and remove handle mount from top plate.
2. Loosen M4 screw and remove top plate.
3. With the wood handle positioned vertically, slide the handle assembly onto side 15mm rod. Reinstall top plate and tighten M4 screw.

1



2



3

