



Electrical Heat Mat Instructions

General Use Instructions

1. Place the Heat Mat on a stable dry surface.
2. Plug the Heat Mat into a 120 V grounded outlet only.

SPECIAL NOTES-PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY BEFORE INITIAL USE.

This heat mat DOES NOT INCLUDE a temperature controller. The Heat Mat output is on all the time when plugged in directly and it produces a constant 20 Watts which is perfect for gently heating the soil root zone for optimum temperature for seed germination.

DANGER - WARNINGS:

1. Fire or electric shock may result from improper use.
2. Make sure that the surface under the mat is free of sharp points or objects which might puncture or damage the mat.
3. DO NOT place the mat inside the propagation tray or cover it directly with soil or any other growing medium.
4. DO NOT immerse in water.
5. DO NOT place any heat insulating materials over the mat such as this could cause it to overheat.

Specifications:

Model:	CP-C93	CP-C100	CP-C95
Size:	10"Wx 20.75"L	20"Wx 20.75"L	48"Wx 20.75"L
Wattage:	20 Watts	40 Watts	105 Watts
Voltage:	120V AC		

BN-LINK INC.

11701 6th Street, Rancho Cucamonga, CA 91730

Custom Service Assistance: 1.909.592.1881

E-mail: support@bn-link.com

[Http://www.bn-link.com](http://www.bn-link.com)

Hours: 9 AM - 5 PM PST, Mon - Fri

Designed in California, Made in China