

# 6-OUTLET DIGITAL TIMER YARD STAKE

## Features

- 6-outlet digital countdown timer  
YARD STAKE
- 7-mode setting

## Setup

### 1. Set the desired "OPERATING MODE" .

Press the " Power " button repeatedly until the indicator light of the desired mode is lit.

Note: When selecting 2H, 4H, 6H or 8H mode, the indicator light will flash 3 times and then stay illuminated.

### 2. Attach up to SIX devices to the timer.

Plug the lights or devices to be controlled into the outlets on the sides of the timer.

## OPERATING MODES

- OFF - Power is OFF to attached devices
- ON - Power is ON to attached devices
- Dusk-Dawn - Power will turn on at dusk and remain on until dawn
- 2 Hrs - Power will turn on at dusk and remain on for 2 hours
- 4 Hrs - Power will turn on at dusk and remain on for 4 hours
- 6 Hrs - Power will turn on at dusk

and remain on for 6 hours

- 8 Hrs - Power will turn on at dusk and remain on for 8 hours

## HELPFUL TIPS

- This timer is weather-resistant and rated for outdoor use. The timer will function outdoors when installed and operated as outlined in this manual.
- This timer operates using a light-sensitive photocell that senses when the environment is getting dark (dusk) or light (dawn). The photocell is located beneath the power button.
- Once programming activates at dusk in the 2hrs, 4hrs, 6hrs or 8hrs mode, the program cycle will complete before the timer resets.
- Headlights, porch lights, street lamps and other external lighting

sources will not interfere with the active timer program.

- In the dusk-to-dawn mode, temporary light sources like headlights, porch lights and other external light sources will not interfere with the photocell function unless the external light source is on for more than 15 minutes. In that case, the timer will shut off until darkness is restored.
- When set to "ON" , the timer will provide continual power to attached devices until the timer is switched to "OFF", or to any of the other operating modes.
- Do not place the timer hidden in bushes where it won't sense daylight.
- It may take until complete darkness for the photocell to turn on power to the timer.
- The "Operating Mode" indicator light will turn on when the timer programming is activated and

power is being provided to attach devices.

- Do not use extension cords to connect the timer to the power source.

### **IN CASE OF POWER FAILURE**

The timer will stop operating if the power goes out. Once power is restored, reset the desired operating mode as explained in step 1 of the operating instructions.

### **SAFETY INFORMATION & SPECIFICATIONS**

This is a "GROUNDED" device. The male plug contains a ground pin and is only intended for use with a three-pronged grounded outlet. This device is for use with a 125 V AC power source. **125 V AC / 60 Hz**

### **DO NOT ATTACH A DEVICE THAT EXCEEDS THE UNIT RATINGS:**

- 15A / 1875W Resistive (General

Purpose)

- 10A/1250W Tungsten (Incandescent)
- 1/2 HP (Horsepower Motor)

### **WARNING: RISK OF ELECTRIC SHOCK**

- Keep children away
- Unplug timer before cleaning
- Fully insert plug
- Do not use near standing water.

### **RISK OF FIRE**

- Do not use to control appliances that contain heating elements (cooking appliances, heaters, irons, etc.)
- Do not exceed electrical ratings.

CENTURY PRODUCTS INC.  
Customer Service Assistance: 1.909.592.1881  
Email: support@bn-link.com  
Web: www.bn-link.com  
Hours: 9AM - 5PM PST, Mon - Fri  
Designed in California, Made in China